

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AMERFIST](#) /
- › [AMERFIST Flying Orb Ball Toy Instruction Manual \(Model TSM006-B\)](#)

## AMERFIST TSM006-B

# AMERFIST Flying Orb Ball Toy Instruction Manual

Model: TSM006-B

## INTRODUCTION

This manual provides essential information for the safe and effective operation of your AMERFIST Flying Orb Ball Toy. Please read these instructions carefully before use and retain for future reference.



*Image: The AMERFIST Flying Orb Ball Toy, a blue spherical drone with internal propellers and vibrant LED lights, is shown hovering above a hand, illustrating its magical flight capabilities.*

## **PRODUCT COMPONENTS**

The AMERFIST Flying Orb Ball Toy package includes the following items:

- Flying Orb Ball Toy (Model TSM006-B)
- USB Charging Cable
- Instruction Manual (this document)



Image: An exploded diagram of the Flying Orb Ball, detailing its internal structure including the propeller, colorful LED strip, brushless motor, strong power battery, Micro-USB charging port, and PCB with smart IC control.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	3 x 3 x 3 inches
Item Weight	1.1 ounces
Model Number	TSM006-B
Recommended Age	6 years and up
Battery Type	1 Lithium Polymer battery (included)
Charging Time	Approximately 20 minutes for full charge
Operating Duration	8-10 minutes per full charge
Material	Soft but durable, drop-resistant, lightweight, and flexible

## SETUP

---

### 1. Charging the Orb Ball

Before first use, fully charge the Flying Orb Ball. The charging port is located on the top of the orb, marked "UP".

1. Locate the Micro-USB charging port on the orb.
2. Connect the provided USB charging cable to the orb and to a power source (e.g., computer, power adapter, mobile phone charger, portable charger).
3. The indicator light will turn on while charging.
4. Once fully charged (approximately 20 minutes), the indicator light will turn off.
5. Disconnect the charging cable.

Your browser does not support the video tag.

*Video: A demonstration on how to charge and activate the Flying Orb Ball, showing the charging port and the process of turning it on by shaking.*

### 2. Powering On/Off

1. To turn on: Locate the small power button near the charging port. Press and hold the button until the LED lights illuminate.
2. To activate flight: Gently shake the orb to start the propellers.
3. To turn off: Flip the orb upside down and shake it gently. The propellers will stop. To completely power off the LED lights, press the power button again.

## OPERATING INSTRUCTIONS

---

The Flying Orb Ball offers various flight patterns based on throwing angles and speeds. Experiment to discover different tricks.

### Basic Flight & Boomerang Effect

1. Ensure the orb is powered on and propellers are active.
2. Hold the orb with the "UP" marking facing upwards.
3. **Straight Flight:** Throw the orb gently forward with a slight downward angle. It will fly in a straight line.
4. **Boomerang Effect:** Throw the orb upwards at a 15-30 degree angle. It will curve back towards you.
5. **Hovering:** Release the orb gently from your hand, keeping it level. It will hover in place.
6. **Catching:** The orb is designed to stop automatically upon contact, making it safe to catch.



## EASY TO PLAY

Perfect to have fun with neighbors and friends

*Image: An outdoor scene showing adults and children playing with the Flying Orb Ball, highlighting its suitability for family fun.*

### Advanced Tricks

The intelligent flight system allows for various tricks. Practice different throwing techniques to master them.

- **Vertical Flight:** Hold the orb upright and release it. It will ascend vertically.
- **Pass & Catch:** With practice, you can throw the orb to another person, and it will return to them.

Your browser does not support the video tag.

*Video: A detailed demonstration of the Flying Orb Ball's various flight patterns, including hovering, boomerang throws, and different ways to interact with the toy.*

### MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the orb. Do not use harsh chemicals or immerse in water.
- **Storage:** Store the orb in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** To prolong battery life, avoid completely draining the battery before recharging. Recharge fully before long-term storage.

## SAFETY INFORMATION

- Recommended for ages 6 and up. Adult supervision is advised for younger children.
- Do not operate near faces, hair, or loose clothing.
- Keep fingers and other objects away from the propellers when the orb is active.
- The orb is designed to stop automatically upon impact with furniture or other objects to prevent damage.
- Use only the provided USB charging cable.
- Do not attempt to modify or disassemble the product.

## TROUBLESHOOTING

- **Orb does not turn on:** Ensure the battery is fully charged. Press and hold the power button firmly.
- **Propellers do not start:** After pressing the power button, gently shake the orb to activate the propellers.
- **Short flight time:** Ensure the battery is fully charged before each use. Flight duration is approximately 8-10 minutes.
- **Erratic flight:** Ensure the orb is thrown with a consistent motion and the "UP" side is correctly oriented. Avoid strong drafts or winds when playing outdoors.

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact AMERFIST customer service through the retailer where the product was purchased. Please have your model number (TSM006-B) and purchase date available.

Visit the official AMERFIST Store for more products and information: [AMERFIST Store](#)

### Related Documents - TSM006-B

	<p><a href="#">Land of B. Squeak 'n' Glow Woofer - Light-Up Squeaky Ball Toy   LB5000</a> Product information for the Land of B. Squeak 'n' Glow Woofer, a light-up squeaky ball toy designed for children 18 months and older. Includes usage instructions, battery advice, safety warnings, and regulatory compliance details.</p>
	<p><a href="#">FUN FACTORY B BALL Plug User Guide &amp; Play Ideas</a> Comprehensive guide to the FUN FACTORY B BALL Plug, covering setup, usage, care, and creative play scenarios, including the Flirt or Dare game.</p>

 <p><b>Accessory List</b></p> <ul style="list-style-type: none"> <li>Propeller x 4</li> <li>Propeller x 4</li> <li>Propeller x 4</li> <li>Charging Cable x 1</li> </ul> <p><b>Care and Maintenance</b></p> <ol style="list-style-type: none"> <li>Always use the product with caution and care.</li> <li>Read operating instructions carefully to avoid damage to the product.</li> <li>Check the product regularly for any signs of damage or wear.</li> <li>Store the product in a cool, dry place.</li> </ol>	<p><a href="#">XT808 Aerial Drone - User Manual and Care Guide</a></p> <p>Comprehensive guide for the XT808 Aerial Drone, covering accessory lists, care and maintenance, troubleshooting, technical specifications, and FCC compliance.</p>
 <p>A GUIDE TO <b>FUN FACTORY</b> <i>incredible sex</i> WITH YOUR B BALL PLUG</p>	<p><a href="#">FUN FACTORY B BALL Plug: Guide to Incredible Sex &amp; Play</a></p> <p>Explore the FUN FACTORY B BALL Plug with this comprehensive guide. Learn about usage, care, pro tips, and fun games like Flirt or Dare for enhanced intimacy. Made in Germany.</p>
 <p><b>Bob and Brad</b></p> <p>Electric Hand Massager User Manual Model No.: H60</p>	<p><a href="#">Bob and Brad H60 Electric Hand Massager User Manual - Features, Safety &amp; Operation Guide</a></p> <p>Comprehensive user manual for the Bob and Brad H60 Electric Hand Massager. Learn about its features, safety instructions, operation modes, maintenance, and troubleshooting. Get relief for hand pain, arthritis, and carpal tunnel.</p>
 <p><b>b-Vibe</b> VIBRATING SNUG PLUGS USER GUIDE</p>	<p><a href="#">b-Vibe Vibrating Snug Plugs User Guide</a></p> <p>Comprehensive user guide for b-Vibe Vibrating Snug Plugs, covering overview, getting started, insertion, removal, control, charging, travel lock, vibration modes, care, specifications, and disposal.</p>