

[Manuals.plus](#) /

› [Bean Envy](#) /

› Bean Envy Milk Frother (Model LLTIMFRB00) Instruction Manual

Bean Envy LLTIMFRB00

Bean Envy Milk Frother (Model LLTIMFRB00) Instruction Manual

Comprehensive guide for the setup, operation, maintenance, and troubleshooting of your Bean Envy Handheld Milk Frother.

INTRODUCTION

Thank you for choosing the Bean Envy Milk Frother. This handheld electric whisk is designed to create rich, creamy foam for various beverages and culinary uses. Its powerful motor and durable design make it suitable for daily use.



Image: The Bean Envy Milk Frother in Robins Egg Blue, shown with its stand and product packaging.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure you have the frother unit and the stainless steel stand.

2. Battery Installation

The Bean Envy Milk Frother requires 2 AA batteries (not included).

1. Locate the battery compartment at the top of the frother handle.
2. Gently twist and pull the top cap to open the battery compartment.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Replace the top cap, twisting it securely until it clicks into place.



Craft Velvety, Rich Froths in Seconds



Multipurpose
Frother



Easy to Use



Elegantly
Designed

Image: Illustrates the process of installing batteries into the frother's handle.

3. Stand Assembly

The frother comes with a sleek stainless steel stand for convenient storage. Simply place the frother into the stand when not in use.

CREATE RICH, SMOOTH Lattes, Cappuccinos, and More



FROTHY PERFECTION IN 4 Simple Steps



1 HEAT



2 FILL



3 WHISK



4 POUR

Image: The frother displayed on its dedicated stand, highlighting its design.

OPERATING INSTRUCTIONS

General Frothing Steps

1. **Heat Liquid:** Gently heat your dairy or milk alternative to your desired temperature.
2. **Fill Container:** Pour the heated liquid into a cup or container, ensuring there is enough space for the foam to expand.
3. **Whisk:** Submerge the whisk end of the frother into the liquid. Press and hold the power button to activate the whisk. Move the frother up and down to create foam.
4. **Pour:** Once desired frothiness is achieved (typically within 15 seconds), release the button and pour the frothed milk into your beverage.

Endless Possibilities For Use



Salad Dressing



Eggs



Matcha



Specialty Coffee



Whipped Cream



Image: Visual guide detailing the four steps to achieve frothy perfection.

Whip Up Café-Quality Beverages at Home



Image: Demonstrates the speed of frothing, achieving creamy texture in approximately 15 seconds.

Versatile Applications

The Bean Envy Milk Frother is suitable for a variety of uses beyond milk frothing:

- Creating foam for lattes, cappuccinos, and macchiatos.
- Mixing matcha tea.
- Blending protein powder shakes and smoothies.
- Whisking eggs for cooking.
- Mixing salad dressings.
- Preparing whipped cream.

MAINTENANCE AND CARE

Cleaning

To ensure the longevity and hygiene of your frother, follow these cleaning instructions:

- **Hand Wash Only:** The frother is not dishwasher safe.
- After each use, immediately rinse the stainless steel whisk under warm running water.
- For thorough cleaning, you may use a mild soap and a soft brush on the whisk.
- Wipe the handle with a damp cloth. **Do not submerge the handle in water.**
- Ensure the frother is completely dry before storing.



Image: Demonstrates rinsing the frother whisk under running water for easy cleaning.

Storage

Store the frother in its stainless steel stand in a dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Frother does not turn on or spins weakly.	• Low or dead batteries. • Incorrect battery installation. • Button malfunction.	• Replace with fresh AA batteries. • Ensure batteries are inserted with correct polarity. • If the button is unresponsive after battery replacement, contact customer support.
Frother struggles to mix thick liquids (e.g., protein powders).	• The frother is designed for lighter liquids and frothing. • Excessive thickness of the liquid.	• Avoid using the frother for very thick protein powders or dense mixtures. • Consider a more powerful blender for such applications.
Batteries drain quickly.	• Frequent or prolonged use. • Using low-quality batteries.	• Use high-quality alkaline or rechargeable AA batteries. • Replace batteries as needed.

SPECIFICATIONS

Brand: Bean Envy

Model Number: LLTIMFRB00

Color: Robins Egg Blue

Material: Rubber, Silicone, Stainless Steel

Product Dimensions: 2.17"W x 9.21"H

Item Weight: 6.3 ounces (180 Grams)

Power Source: 2 x AA Batteries (not included)

Motor Speed: 19,000 RPM

Special Feature: Ergonomic Handle

Care Instructions: Hand Wash Only

UPC: 860001978520

Sleek, High-Quality Design



Image: Breakdown of the frother's design and key features.

WARRANTY AND SUPPORT

Bean Envy offers an Unconditional Satisfaction Guarantee. If you have any questions about your product, our guarantee, or other concerns, please contact us directly.

Contact Information:

Email: support@beanenvy.com

Brand Store: [Visit the Bean Envy Store on Amazon](#)

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question