

JTD JTD-RC5P-BTSPK

JTD 5 Pack Remote Control Outlet Bundle with Bluetooth Wireless Stereo Music Speaker

Model: JTD-RC5P-BTSPK

User Manual

INTRODUCTION

This manual provides comprehensive instructions for the JTD 5 Pack Remote Control Outlet Bundle with Bluetooth Wireless Stereo Music Speaker. This bundle includes five remote-controlled electrical outlets, two remote controls, and one Bluetooth wireless stereo music speaker. It is designed to offer convenient control over household appliances and provide high-quality audio playback.

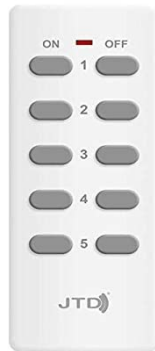 
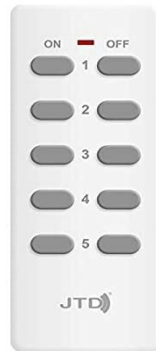 


Image: The complete JTD bundle, showing five remote control outlets, two handheld remote controls, and one Bluetooth wireless stereo music speaker.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 5 x JTD Remote Control Outlets
- 2 x JTD Remote Controls
- 1 x JTD Wireless Stereo Music Speaker
- 2 x 12.0V 23A Batteries (for remotes)
- 1 x Speaker Charging Cable
- 1 x User Manual (for Remote Control Switch)
- 1 x User Manual (for Wireless Music Speaker)



Image: Visual representation of the package contents, including five outlets, two remotes, two batteries, and the user manual.

PRODUCT FEATURES

Remote Control Outlets:

- 5 Pack Remote Control Outlet Switch (3rd Generation)
- Energy Saving Auto-programmable Wireless Electrical Plug Switch
- Designed for Household Appliances, Lighting & Electrical Equipment
- Includes 2 Remotes for convenient control
- Remotely control hard-to-reach appliances and devices without remodeling or rewiring.
- Saves the trouble of manually plugging/unplugging appliances to conserve energy.
- Helpful for individuals with mobility impairments.

Bluetooth Wireless Stereo Music Speaker:

- High Definition Audio
- 10W Two Acoustic Drivers
- Rechargeable Battery
- Provides amazing clarity, deep bass, and rich sound.
- Features advanced sound optimizer technology for enhanced audio quality.

SETUP

Remote Control Outlets:

1. **Insert Batteries into Remotes:** Open the battery compartment on the back of each remote control and insert the provided 12.0V 23A batteries, ensuring correct polarity.
2. **Plug in Outlets:** Plug each JTD remote control outlet into a standard wall socket. The LED indicator on the outlet will light up briefly.
3. **Pairing Outlets with Remote:** The outlets are pre-programmed to the remotes. If re-pairing is needed, press and hold the 'Program/on/off Button' on the side of the outlet until the LED indicator flashes. Then, press the desired 'ON' button (1-5) on the remote. The LED on the outlet will stop flashing, indicating successful pairing.
4. **Connect Appliances:** Plug your desired appliance or device into the JTD remote control outlet.

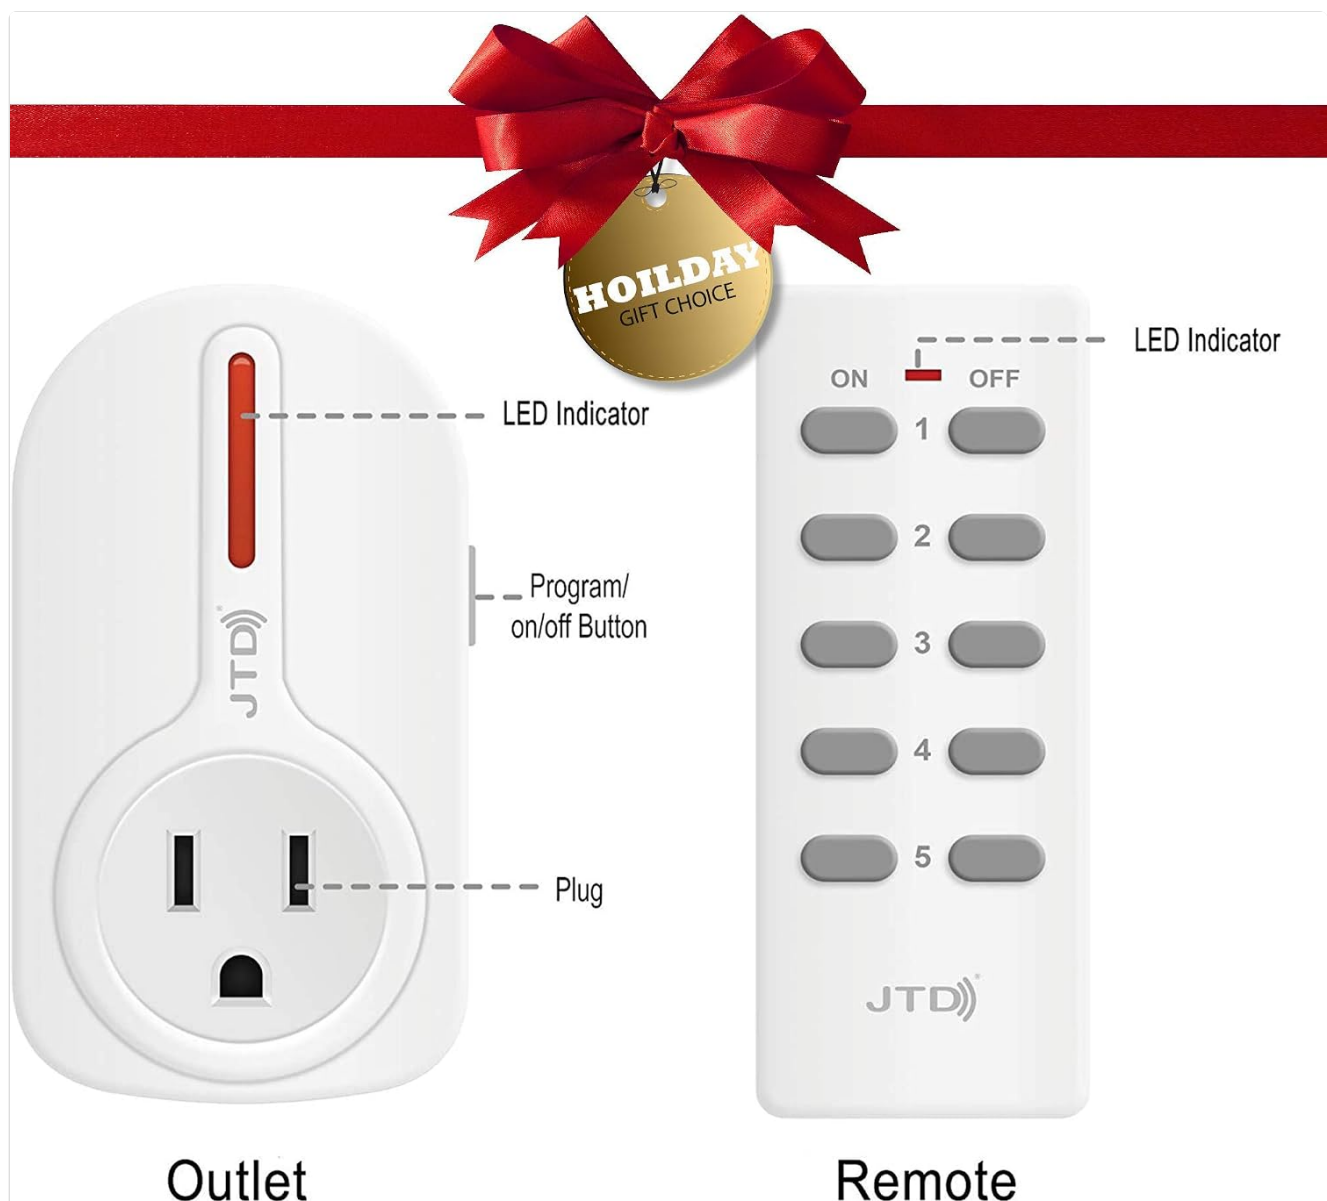


Image: Detailed diagram showing the LED indicator, Program/on/off Button, and Plug on the outlet, and the ON/OFF buttons (1-5) and LED indicator on the remote.

Bluetooth Wireless Stereo Music Speaker:

1. **Charge the Speaker:** Before first use, fully charge the speaker using the provided charging cable. Connect the cable to the speaker's charging port and a USB power source. The charging indicator will show charging status.
2. **Power On:** Press and hold the power button on the speaker until you hear an audible prompt or see the LED indicator light up.
3. **Pairing Mode:** The speaker will automatically enter Bluetooth pairing mode. The Bluetooth LED indicator will flash, indicating it is discoverable.
4. **Connect via Bluetooth:** On your mobile device (smartphone, tablet, computer), go to Bluetooth settings and search for available devices. Select "JTD Speaker" (or similar name) from the list to connect. Once connected, the speaker will provide an audible confirmation, and the Bluetooth LED will become solid.

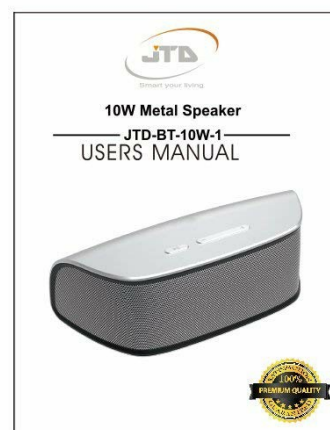 


Image: The JTD Bluetooth speaker shown with its charging cable and accompanying user manual, illustrating the components included for speaker setup.

Remote Control Outlets:

- **Turning On/Off:** Press the corresponding 'ON' button (1-5) on the remote to turn on the paired outlet, and the 'OFF' button (1-5) to turn it off.
- **Master Control:** Use the 'ON' and 'OFF' buttons at the top of the remote to control all paired outlets simultaneously.
- **Manual Control:** Each outlet also has a 'Program/on/off Button' on its side. Press this button to manually toggle the power of the connected appliance.

Bluetooth Wireless Stereo Music Speaker:

- **Power On/Off:** Press and hold the power button to turn the speaker on or off.
- **Volume Control:** Adjust the volume directly from your connected Bluetooth device.
- **Playback Control:** Play, pause, skip tracks using your connected Bluetooth device.
- **Reconnecting:** Once paired, the speaker will automatically attempt to reconnect to the last connected device when powered on and within range.

MAINTENANCE

- **Cleaning:** Wipe the surfaces of the outlets, remotes, and speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement (Remotes):** When the remote's range decreases or the LED indicator dims, replace the 12.0V 23A battery. Ensure proper disposal of old batteries.
- **Storage:** Store the products in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Avoid Moisture:** Keep all components away from water and high humidity to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Outlet not responding to remote.	Battery in remote is low or dead. Outlet is not paired. Remote is out of range.	Replace remote battery. Re-pair the outlet with the remote (see Setup section). Ensure remote is within operating range (approx. 100 ft/30m in open area).
Appliance plugged into outlet does not turn on.	Appliance is not properly plugged in. Appliance itself is faulty. Outlet is not receiving power.	Check appliance plug connection. Test appliance in a different outlet. Ensure the JTD outlet is firmly plugged into a live wall socket.
Bluetooth speaker not pairing.	Speaker is not in pairing mode. Bluetooth on device is off. Speaker battery is low.	Ensure speaker is powered on and Bluetooth LED is flashing. Turn on Bluetooth on your device. Charge the speaker.

Problem	Possible Cause	Solution
No sound from Bluetooth speaker.	Volume is too low. Speaker is not connected. Audio source issue.	Increase volume on both speaker and connected device. Verify Bluetooth connection. Test with a different audio source or device.

SPECIFICATIONS

Remote Control Outlets:

- **Material:** Copper (internal components)
- **Mounting Type:** Plug Mount
- **Dimensions (Outlet):** Approximately 3.8 in (9.7 cm) H x 2.1 in (5.3 cm) W x 1.1 in (2.8 cm) D
- **Dimensions (Remote):** Approximately 4.1 in (10.4 cm) H x 1.5 in (3.8 cm) W x 0.5 in (1.3 cm) D



Image: Diagram illustrating the dimensions of the JTD remote control outlet.



Image: Diagram illustrating the dimensions of the JTD remote control.

Bluetooth Wireless Stereo Music Speaker:

- **Connectivity Technology:** Bluetooth
- **Audio Output Mode:** Stereo
- **Power Output:** 10W (Two Acoustic Drivers)
- **Battery:** Rechargeable

WARRANTY AND SUPPORT

JTD is dedicated to providing high-quality audio-video solutions. Our reputation is built on product quality and knowledgeable support.

For technical assistance, troubleshooting, or warranty inquiries, please contact JTD customer support. Our experienced and friendly AV industry professionals are ready to assist you.

Contact Information:

- Visit the official JTD Store on Amazon: [JTD Store](#)
- Refer to the contact details provided in the product packaging or on the official JTD website.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question