

Foxsky 32FS-VS

Foxsky 32FS-VS 32-inch HD Ready Smart LED TV User Manual

Model: **32FS-VS** | Brand: **Foxsky**

1. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using your Foxsky Smart LED TV. Keep this manual for future reference.

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation around the TV.
- Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Foxsky 32-inch LED TV
- 1 x Remote Control
- 1 x Table Top Stand (2 pieces)
- 1 x Wall Mount Bracket (optional, may be included)
- 1 x User Manual (this document)
- 1 x Warranty Card
- Batteries for Remote Control
- Screws (M4 x L15) for stand/wall mount



Entertainment you love.
With a little help from Google



Content
First UI



Personal
Profiles



Google
Assistant



Google Cast
Built-in



Watchlist



Ambient Mode



Kids Profile



Recommendations

Figure 2.1: Included accessories in the TV package.

This image illustrates the main components you should find in your Foxsky TV package, including the television unit, remote control, and the necessary parts for stand assembly.

3. SETUP

3.1 Installing the TV Stand

1. Carefully place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the stand pieces with the corresponding slots on the bottom of the TV.
3. Secure each stand piece with the provided M4 x L15 screws. Ensure they are tightened firmly.
4. Carefully lift the TV to its upright position on a stable, level surface.

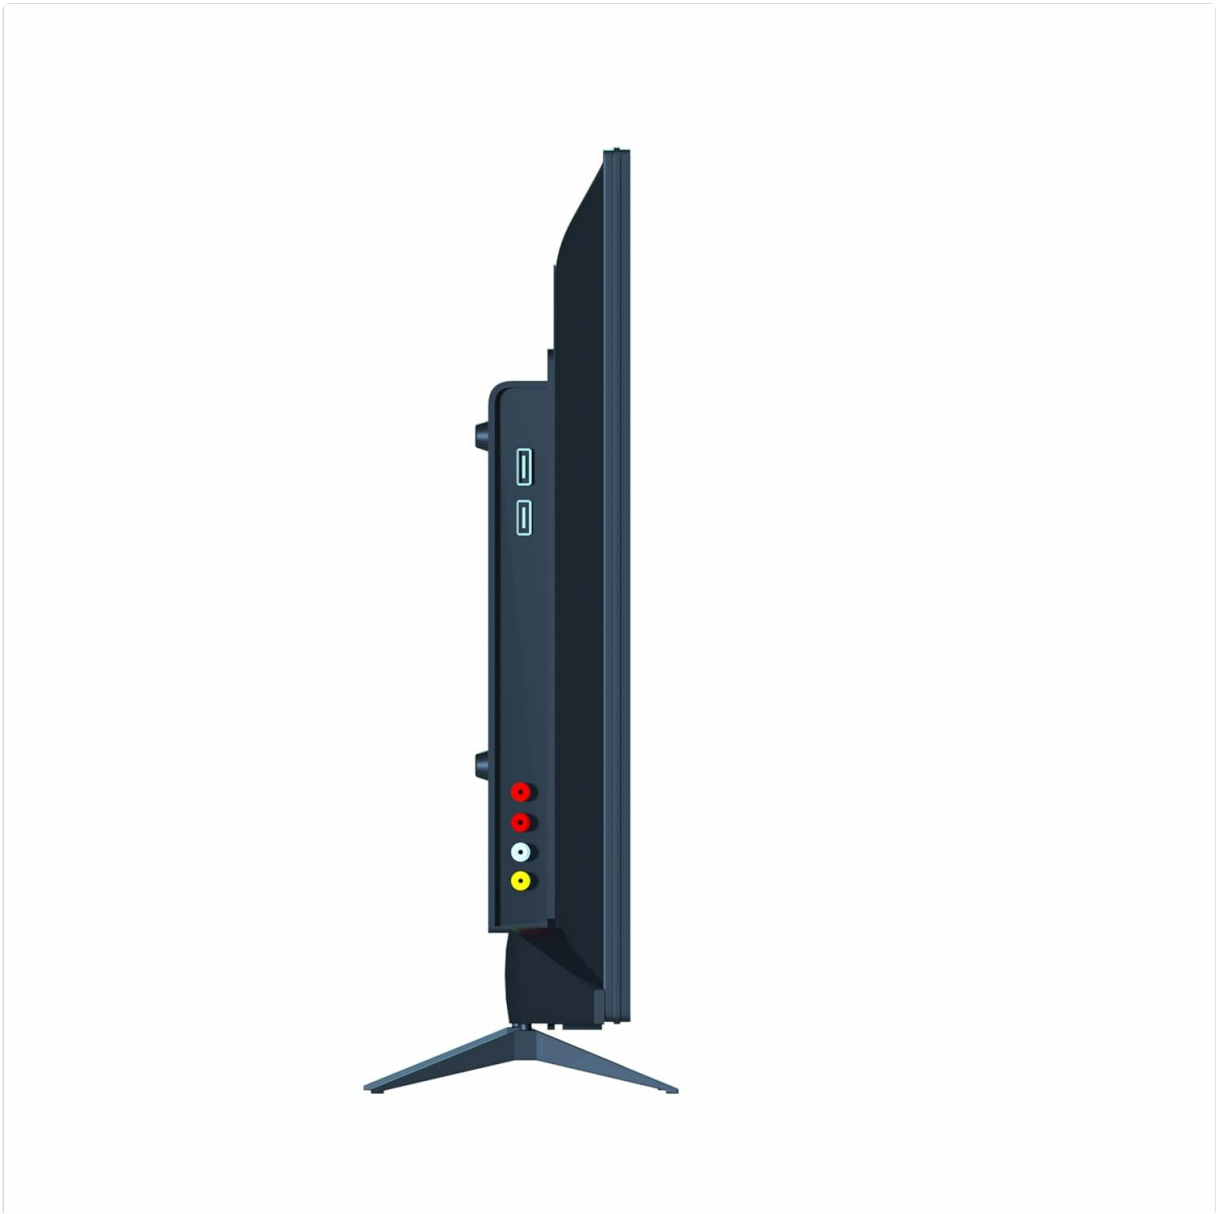 


Figure 3.1: Rear view of the TV with the stand installed.

This image shows the rear of the Foxsky TV, highlighting the attachment points for the table-top stand. Proper installation ensures stability.

3.2 Wall Mounting (Optional)

If you choose to wall mount your TV, please use the provided wall mount bracket and follow the instructions included with the bracket. Ensure the wall can support the weight of the TV. Professional installation is recommended for wall mounting.

3.3 Connecting Devices

The Foxsky TV offers multiple connectivity options:

- **HDMI Ports (x2):** Connect set-top boxes, Blu-ray players, gaming consoles.
- **USB Ports (x2):** Connect hard drives, USB flash drives for media playback.
- **AV In:** Connect older devices using RCA cables.
- **Headphone Jack:** For private listening.
- **RJ45 (Ethernet):** For wired internet connection.
- **RF Input:** For antenna/cable connection.

CONNECTIVITY

Multiple easy Accessible Ports

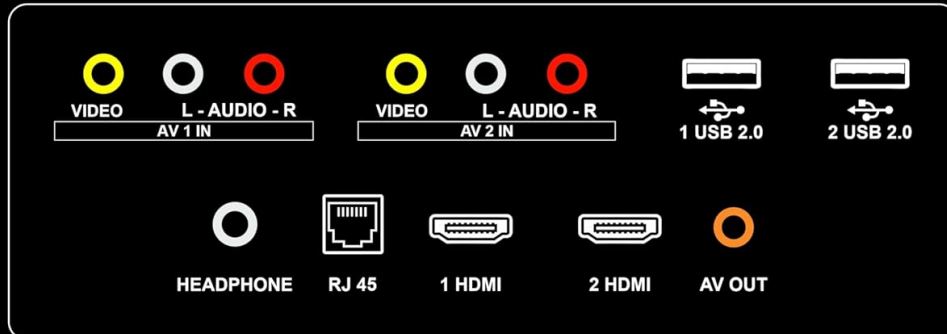 


Figure 3.2: Connectivity ports on the Foxsky TV.

This diagram illustrates the various input and output ports available on the Foxsky TV, including HDMI, USB, AV, and network connections, enabling connection to a wide range of external devices.



Figure 3.3: Detailed view of the TV's side and rear connectivity.

This close-up image provides a detailed view of the physical ports on the side and rear of the Foxsky TV, showing the layout for HDMI, USB, and other connections.

3.4 Initial Power On and First-Time Setup

1. Connect the power cord to the TV and then to a power outlet.
2. Press the power button on the remote control or on the TV itself.
3. Follow the on-screen instructions to select your language, country, and connect to your Wi-Fi network.
4. Log in with your Google account to access Smart TV features and the Google Play Store.

4. OPERATING YOUR TV

4.1 Remote Control Functions

The remote control provides access to all TV functions. Insert the provided batteries into the remote control before use.



Figure 4.1: Foxsky Smart TV Remote Control.

This image displays the Foxsky TV remote control, highlighting dedicated buttons for popular streaming services like Netflix and YouTube, as well as the Google Assistant button for voice commands.

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Input/Source Button:** Selects input source (HDMI, AV, etc.).
- **Volume Up/Down:** Adjusts audio volume.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates menus.
- **OK Button:** Confirms selections.
- **Back/Exit Button:** Returns to the previous screen or exits menus.
- **Home Button:** Accesses the Smart TV home screen.
- **Dedicated App Buttons:** Quick access to Netflix, YouTube, Prime Video, Hotstar.
- **Google Assistant Button:** Activates voice commands.
- **Mute Button:** Mutes or unmutes the sound.

4.2 Smart TV Features

Your Foxsky TV runs on Android OS and offers a range of smart features:

- **Built-in Wi-Fi:** Connect to your home network for internet access.
- **Google Play Store:** Download and install various applications.
- **Pre-installed Apps:** Netflix, YouTube, Disney+ Hotstar, Zee5, Sony Liv.
- **Built-in Miracast:** Screen mirroring from compatible devices.
- **Google Voice Assistant:** Use voice commands for search, control, and information.
- **Media Center:** Play media files from USB devices.

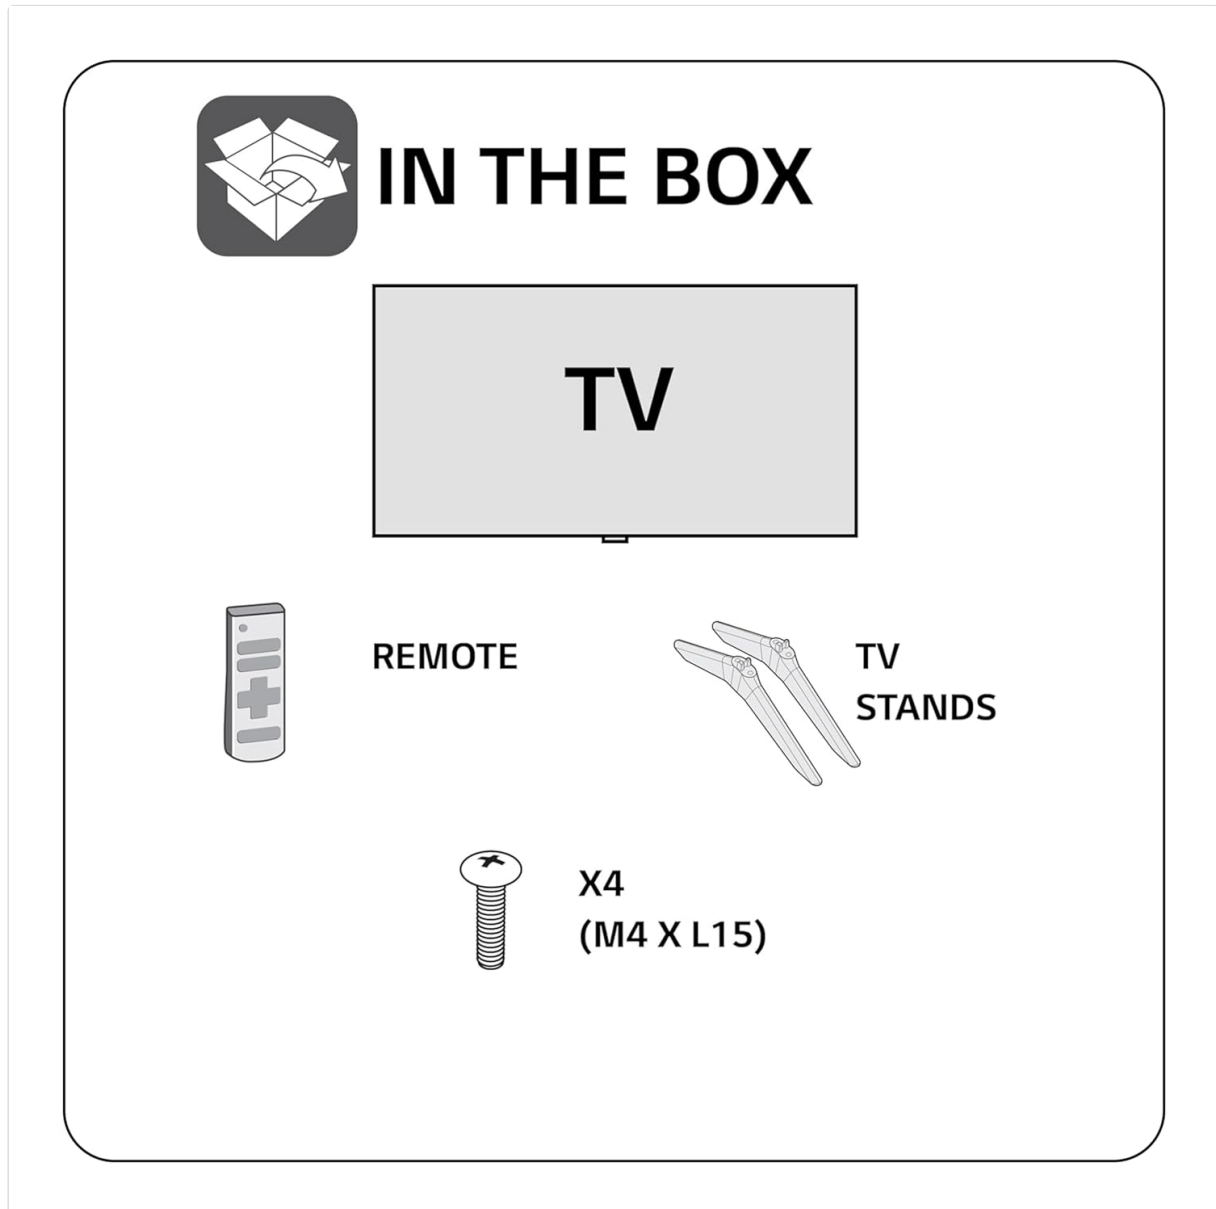 


Figure 4.2: Google TV Interface.

This image illustrates the Google TV interface, showcasing features like personalized profiles, Google Assistant integration, and built-in Chromecast for seamless content streaming.

5. MAINTENANCE

5.1 Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.

- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner.
- Never spray cleaner directly onto the screen or cabinet.

5.2 Software Updates

Your TV may receive periodic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can usually check for updates in the TV's settings menu.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; power outlet not working.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; external device issue.	Press the "Input" button on the remote to select the correct source; check external device connections.
No sound, but picture is present	Volume muted or too low; external audio system issue.	Unmute or increase volume; check audio cables to external sound system.
Remote control not working	Batteries are dead or incorrectly inserted; obstruction.	Replace batteries; ensure correct polarity; remove obstructions between remote and TV.
Wi-Fi connection issues	Incorrect password; router issues; TV too far from router.	Re-enter Wi-Fi password; restart router; move TV closer to router or use wired connection.

7. SPECIFICATIONS

Feature	Detail
Brand	Foxsky
Model	32FS-VS
Screen Size	32 Inches (80 cm)
Display Technology	LED
Resolution	HD Ready (1366x768 Pixels)
Refresh Rate	60 Hz
Operating System	Android
Memory Storage Capacity	8 GB
RAM Memory Installed Size	1 GB

Feature	Detail
Audio Output Power	30 Watts
Speaker Surround Sound	DTS Surround Sound
Connectivity	Wi-Fi, 2 HDMI ports, 2 USB ports
Viewing Angle	178 Degrees
Product Dimensions (LxWxH)	19 x 72 x 48 cm
Item Weight	4 kg
Special Features	Remote, Android OS, HDR-10, Wide Color Gamut, Google Voice Assistant, Built-in Miracast



Figure 7.1: TV Dimensions.

This diagram provides the physical dimensions of the Foxsky 32-inch TV, including width, height, and depth, useful for placement and installation planning.

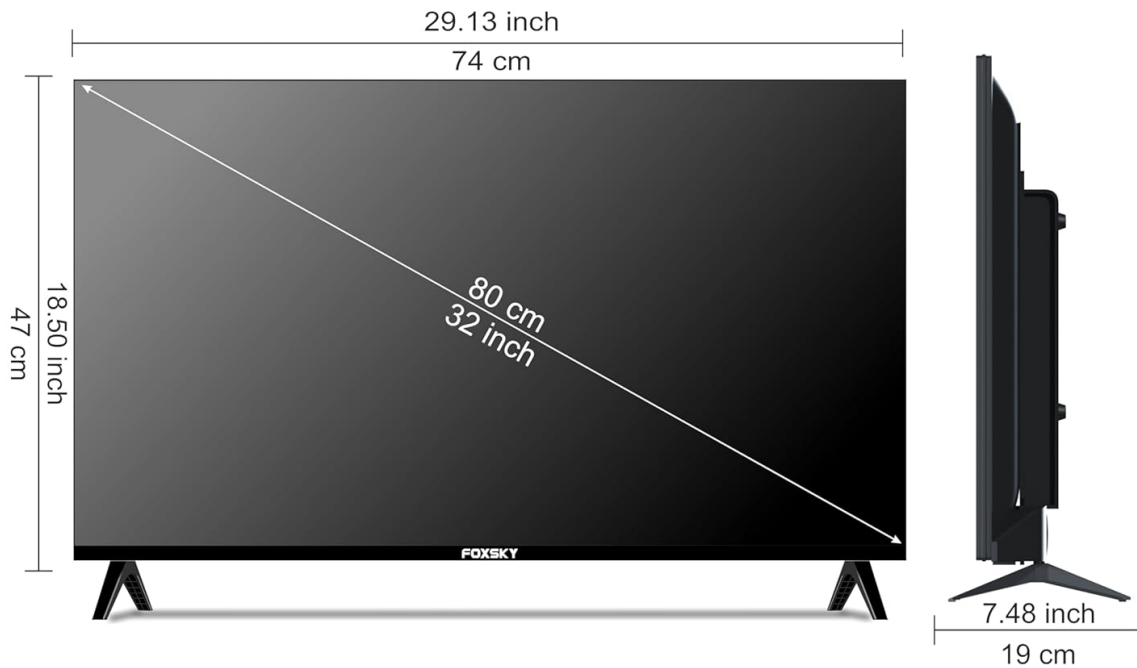 


Figure 7.2: Summary of TV Features.

This table summarizes the core features of the Foxsky TV, including screen size, connectivity options, display type, audio output, and smart TV functionalities.

8. WARRANTY AND SUPPORT

Warranty Information: Your Foxsky TV comes with a **1 Year warranty** provided by Foxsky from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions.

Manufacturer Contact:

- **Manufacturer:** Foxsky Electronics India Pvt. Ltd.
- **Address:** 49/26, Site-IV, Industrial Area, Sahibabad, Ghaziabad, (U.P.) - 201010
- **Website:** www.foxskyindia.com
- **Toll Free No.:** +91-7079797902
- **Email:** customercare@foxskyindia.com

For technical assistance or warranty claims, please contact Foxsky customer support using the details above.

