

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Full Over Twin & Twin Bunk Bed (Model LT343AAK-1) Instruction Manual

Bellemave LT343AAK-1

Bellemave Full Over Twin & Twin Bunk Bed Instruction Manual

Model: LT343AAK-1

1. PRODUCT OVERVIEW

The Bellemave Full Over Twin & Twin Bunk Bed is a versatile wooden triple bunk bed designed to maximize space. It features a full-size upper bed and two twin-size lower beds, which can also be separated into three individual beds. This unit includes integrated drawers and guardrails for functionality and safety.

Key Features:

- **Space-Saving Design:** Full over twin & twin configuration utilizes vertical space, ideal for multiple occupants or guests.
- **Convertible Structure:** Can be easily separated into three distinct beds for flexible room arrangements.
- **Integrated Storage:** Features two pull-out drawers under the lower beds and a central table with a drawer between the twin beds.
- **Safety Features:** Equipped with full-length guardrails on the upper bed and a stable, angled ladder for secure access.
- **Durable Construction:** Constructed from solid pine wood and MDF with iron alloy bolts for stability and longevity.



Figure 1: Assembled Bellemave Full Over Twin & Twin Bunk Bed in White.

Full over Twin & Twin Bunk Bed



Figure 2: Lifestyle view of the assembled bunk bed, showcasing its design and functionality.

2. SAFETY INFORMATION

Adherence to safety guidelines is crucial for preventing accidents and ensuring the longevity of your bunk bed. Please read and understand all safety warnings before assembly and use.

- Always follow assembly instructions precisely to prevent instability or collapse.
- Be cautious of pinch points, especially around guardrails during assembly and adjustment.
- Do not load more than **275 pounds** on any single bed section (upper or lower).
- Ensure all bolts and connections are securely tightened before use and periodically check for looseness.
- The upper bunk is not suitable for children under six years of age.
- Use only mattresses that comply with the recommended dimensions for each bed.
- Prohibit horseplay on or under the bed.
- Always use the ladder for access to the upper bunk.

3. ASSEMBLY AND SETUP

This section provides general guidance for assembling your Bellemave bunk bed. Detailed, step-by-step instructions and necessary tools are included in the product packaging. Please refer to those specific instructions for precise assembly.

Before You Begin:

- **Unpack All Components:** Carefully remove all parts from the packaging and verify against the parts list provided in your manual.
- **Clear Assembly Area:** Ensure you have sufficient space to assemble the bed safely and comfortably.
- **Gather Tools:** Use the provided tools and any additional tools recommended in the specific assembly manual.

General Assembly Steps:

1. Identify and separate all hardware and wooden components.
2. Begin by assembling the base frames for the lower twin beds.
3. Attach the support posts and side rails for the upper full bed.
4. Install the bed slats for all three sleeping surfaces.
5. Securely attach the guardrails to the upper bunk.
6. Assemble and attach the angled ladder.
7. Install the central table/shelf and the under-bed storage drawers.
8. Once fully assembled, ensure all bolts and connections are tightened. Do not overtighten.

SIZE:INCH

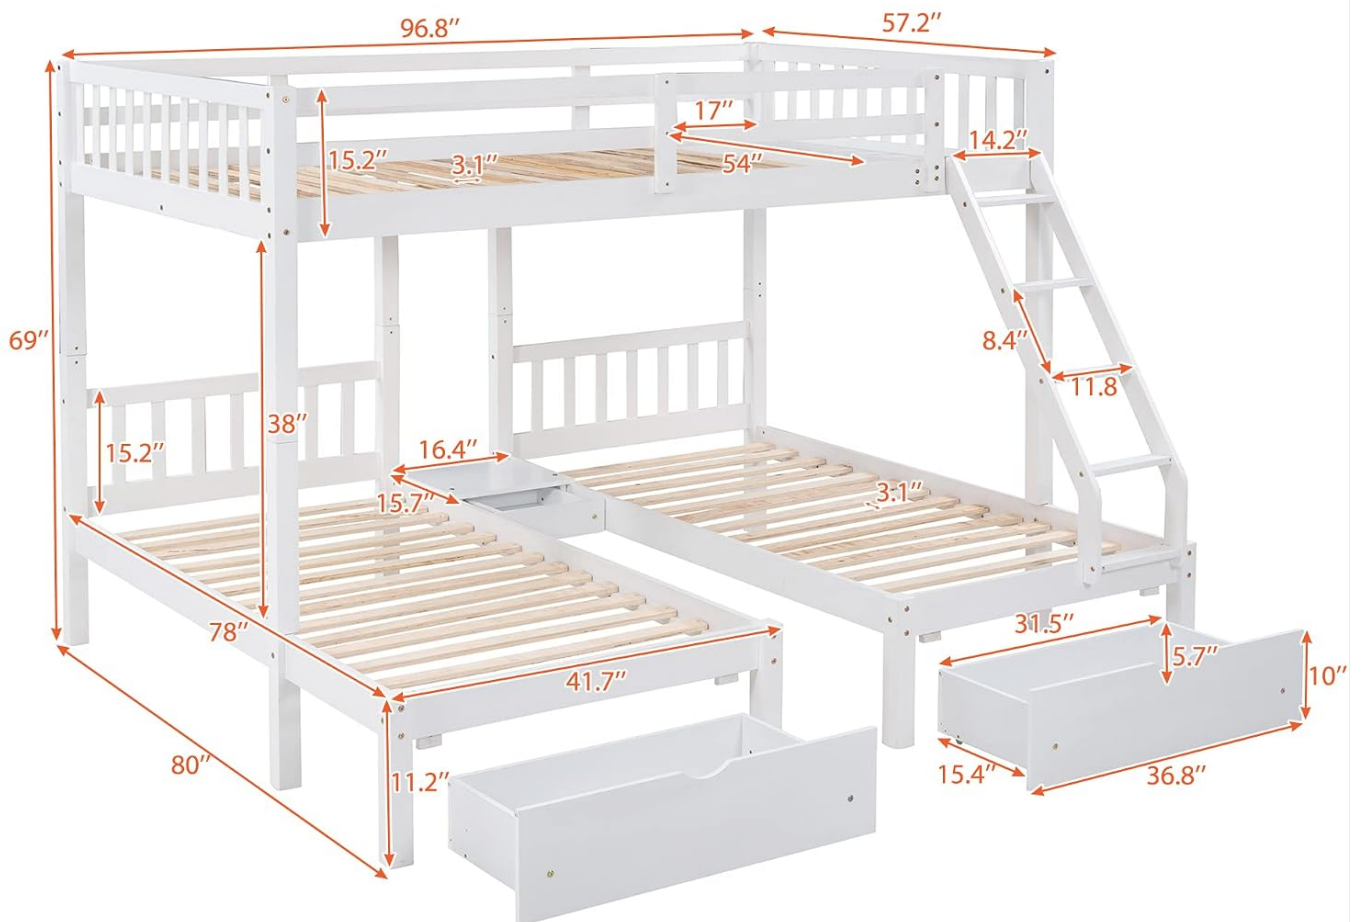


Figure 3: Detailed dimensions of the bunk bed for planning your space.



Figure 4: Close-up view of the ladder's secure attachment points.



Figure 5: Detail of the upper bunk's guardrails and sturdy wooden slats.

4. OPERATING INSTRUCTIONS

Bunk Bed Configuration:

- Ensure mattresses are correctly sized and placed within the bed frames.
- Always use the provided ladder to access the upper bunk. Do not climb on the side rails or other parts of the bed.
- The upper bunk is designed for a full-size mattress, and the lower bunks for twin-size mattresses.

Separating into Three Individual Beds:

The Bellemave bunk bed can be reconfigured into one full-size bed and two twin-size beds. This process typically involves disassembling the connecting posts and reattaching the headboards/footboards to create standalone units. Refer to your specific assembly manual for detailed steps on conversion.



Figure 6: The bunk bed reconfigured into three separate beds.



Figure 7: Another perspective of the bed separated into three individual units.

Using Storage Drawers and Table:

- The two pull-out drawers under the lower beds provide convenient storage for bedding, toys, or other items. Ensure they slide smoothly on their tracks.
- The central table with a small drawer between the two lower beds offers a surface for lamps, books, or personal items.



Figure 8: Detail of the integrated storage drawer and the central table with its own small drawer.

5. MAINTENANCE

Regular maintenance helps preserve the appearance and structural integrity of your bunk bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections to ensure they remain tight. Retighten as necessary, but do not overtighten.
- **Drawer Functionality:** Keep drawer tracks clean and free of debris to ensure smooth operation.
- **Wood Care:** Protect the wood from extreme temperature changes and direct sunlight to prevent warping or fading.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your bunk bed.

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose bolts or connections.	Inspect all assembly hardware and tighten any loose bolts. Ensure the bed is on a level surface.
Squeaking noises during use.	Loose connections or friction between wood parts.	Tighten all bolts. If squeaking persists, apply a small amount of wax or silicone lubricant to contact points between wood components.
Drawers are difficult to open or close.	Debris in tracks, misalignment, or damaged runners.	Clean drawer tracks thoroughly. Check if drawers are properly aligned. Inspect runners for any damage.
Ladder feels insecure.	Loose ladder attachment bolts.	Ensure all bolts securing the ladder to the bunk bed frame are fully tightened.

7. SPECIFICATIONS

Below are the key specifications for the Bellemave Full Over Twin & Twin Bunk Bed.

Feature	Detail
Model Number	LT343AAK-1
Product Dimensions (L x W x H)	96.8" x 79.5" x 69.3"
Material	Engineered Wood, Pine Wood
Color	White
Upper Bed Mattress Size	Full (recommended 6 inches thickness)
Lower Bed Mattress Size	Twin (recommended 8 inches thickness)
Maximum Weight Recommendation (per bed)	275 pounds
Number of Drawers	2 (under lower beds) + 1 (in central table)
Assembly Required	Yes, instructions included

8. WARRANTY AND SUPPORT

For warranty information, specific product support, or to order replacement parts, please contact Bellemave customer service directly. Keep your purchase receipt and model number (LT343AAK-1) handy when contacting support.

Refer to the contact information provided in your product packaging or visit the official Bellemave website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08QZ5K4MF>

More documents and user manuals: <https://manuals.plus/>