

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ARCADE1UP](#) /
- › [ARCADE1UP Ms. Pac-Man Arcade Machine Instruction Manual](#)

ARCADE1UP Ms. Pac-Man Arcade Machine

ARCADE1UP Ms. Pac-Man Arcade Machine Instruction Manual

Model: Ms. Pac-Man Arcade Machine

1. INTRODUCTION

Welcome to the world of classic arcade gaming with your new ARCADE1UP Ms. Pac-Man Arcade Machine. This manual provides essential information for the safe and optimal use of your arcade cabinet. Please read it thoroughly before assembly and operation.





Image: The ARCADE1UP Ms. Pac-Man Arcade Machine, featuring its iconic blue, pink, and yellow design, ready for classic gaming.

2. SAFETY INFORMATION

- Always ensure the machine is placed on a stable, level surface to prevent tipping.
- Keep away from water or excessive moisture.

- Do not attempt to open or repair the machine yourself. Refer to qualified service personnel.
- Keep small children away from the power cord and moving parts during assembly.
- Use only the provided power adapter.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts are present:

- Arcade Cabinet Panels (various pieces)
- Control Panel Assembly (joystick, buttons)
- LCD Screen
- Power Adapter
- Hardware Pack (screws, dowels, etc.)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Assembly typically requires two adults and basic tools (screwdriver). Follow the detailed step-by-step instructions provided in the separate assembly guide included with your product. Ensure all connections are secure before powering on the unit.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Cabinet Base:** Follow the assembly guide to connect the side panels and base using the provided hardware.
3. **Install LCD Screen:** Securely mount the LCD screen into the designated slot within the cabinet. Connect the video and power cables as instructed.
4. **Attach Control Panel:** Connect the joystick and button wiring harnesses to the main board. Secure the control panel to the cabinet.
5. **Final Assembly:** Complete the remaining cabinet assembly, including the back panel and marquee.
6. **Power Connection:** Plug the power adapter into the machine and then into a standard 110V AC outlet.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **To Power On:** Locate the ON/OFF switch on the control panel and flip it to the 'ON' position. The machine will boot up and display the ARCADE1UP logo.
- **To Power Off:** Flip the ON/OFF switch to the 'OFF' position.

5.2 Game Selection

Your ARCADE1UP Ms. Pac-Man Arcade Machine includes multiple classic games:

- Ms. Pac-Man
- Galaxian
- Pac-Mania
- Pac-Man Plus

Use the joystick to navigate through the game selection menu. Press the 'START GAME' button (typically the 1-Player button) to select a game.

5.3 Volume Control

Adjust the game volume using the VOL+/- switch located on the control panel. Move the switch to the right for increased volume and to the left for decreased volume.

5.4 In-Game Controls

- **Movement:** Use the joystick to control your character's movement.
- **Start Game:** Press the 'START GAME' button (1-Player or 2-Player) to begin a game.
- **Return to Menu / Save High Score:** Hold the 1-Player button for 5 seconds.
- **Reset Game:** Hold the 2-Player button for 5 seconds.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. Avoid abrasive cleaners or solvents.
- **Dusting:** Regularly dust the machine to prevent buildup in vents and on components.
- **Storage:** If storing for an extended period, unplug the machine and cover it to protect from dust and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	Power cord not connected; outlet not working.	Check power cord connection; try a different outlet.
No image on screen.	Video cable loose; screen damaged.	Ensure video cable is securely connected. If problem persists, contact support.
No sound.	Volume too low; speaker cable loose.	Adjust volume using the VOL+/- switch. Check speaker connections.
Joystick or buttons unresponsive.	Control panel cables loose.	Ensure control panel cables are securely connected to the main board.

8. SPECIFICATIONS

- **Brand:** ARCADE1UP
- **Model:** Ms. Pac-Man Arcade Machine
- **Material:** Plastic
- **Form Factor:** Arcade Machine
- **Package Dimensions:** 48 x 24 x 7 inches
- **Item Weight:** 79.8 pounds
- **Included Games:** Ms. Pac-Man, Galaxian, Pac-Mania, Pac-Man Plus

9. WARRANTY AND SUPPORT

Your ARCADE1UP Ms. Pac-Man Arcade Machine comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any inquiries, please visit the official ARCADE1UP website or contact their customer service department.

Online Support: www.arcade1up.com



© 2024 ARCADE1UP. All rights reserved. Ms. Pac-Man, Galaxian, Pac-Mania, Pac-Man Plus are trademarks of their respective owners.