



Manuals.plus /

› GKTZ /

› GKTZ Kids Digital Video Toddler Camera Instruction Manual (Model: Kids camera)

GKTZ Kids camera

GKTZ Kids Digital Video Toddler Camera Instruction Manual

Model: Kids camera

INTRODUCTION

Thank you for choosing the GKTZ Kids Digital Video Toddler Camera. This device is designed to be user-friendly for children aged 3-8, allowing them to capture photos and videos, play games, and explore their creativity. Please read this manual carefully to ensure proper use and maintenance of the camera.

SAFETY INFORMATION

- This product is intended for children aged 3 and above. Adult supervision is recommended.
- Do not expose the camera to water or extreme temperatures.
- Avoid dropping the camera from significant heights, despite its shockproof design.
- Keep small parts, such as the SD card, out of reach of very young children to prevent choking hazards.
- Use only the provided USB cable for charging.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- GKTZ Kids Digital Video Toddler Camera (Green)
- 32GB Micro SD Card
- USB Charging Cable
- Lanyard
- Instruction Manual



Tear off the protective film of the screen !

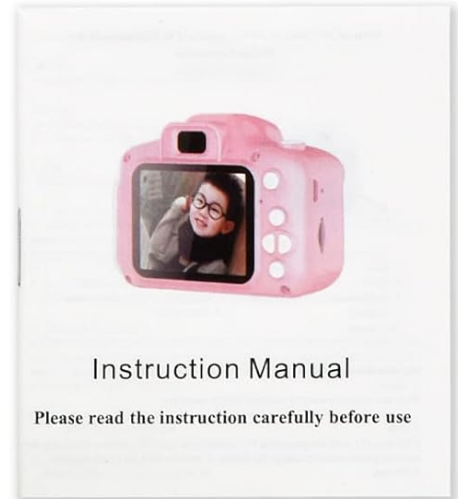


Image: Contents of the GKTZ Kids Camera package, showing the green camera, a 32GB SD card, a USB cable, and a green lanyard.

PRODUCT OVERVIEW

Familiarize yourself with the camera's buttons and ports.



Image: Front and back views of the green GKTZ Kids Camera. The back shows the screen and control buttons (power, up, down, menu, shutter), while the front shows the lens.

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **Up/Down Buttons:** Navigate menus, zoom in/out, or select options.
- **Menu/Mode Button:** Accesses settings or switches between photo/video/playback/game modes.
- **Display Screen:** 2.0-inch IPS screen for viewing images and videos.
- **Micro SD Card Slot:** For inserting the memory card.
- **USB Port:** For charging and data transfer.

SETUP

1. Inserting the Micro SD Card

1. Locate the Micro SD card slot on the side of the camera.
2. Insert the provided 32GB Micro SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in until it clicks, then release, and it will spring out.

2. Charging the Battery

1. Connect the small end of the USB charging cable to the camera's USB port.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Charging typically takes about 2 hours for a full charge.
4. Once fully charged, the indicator light may change or turn off. Disconnect the cable.

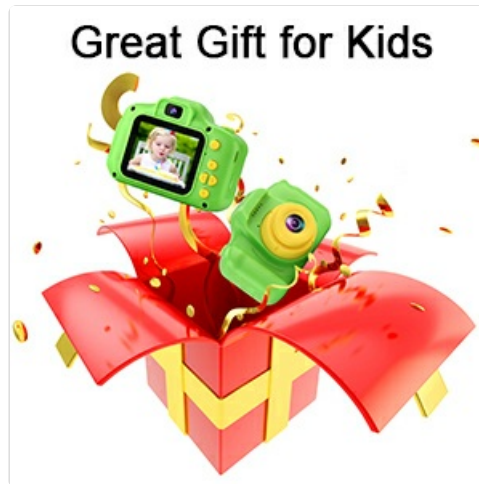


Image: The GKTZ Kids Camera connected to a laptop via a USB cable, illustrating the charging process.

3. Powering On/Off

- To power on, press and hold the Power button for a few seconds.
- To power off, press and hold the Power button again until the screen turns off.

OPERATING INSTRUCTIONS

1. Taking Photos

1. Turn on the camera. It will usually default to photo mode.
2. Frame your shot using the display screen.
3. Press the Shutter button to take a picture.
4. Use the Up/Down buttons to apply 4x digital zoom if desired.



Image: A child riding a tricycle, viewed through the GKTZ Kids Camera screen, with arrows indicating the 4x digital zoom feature.

2. Recording Videos

1. Press the Mode button to switch to video recording mode.
2. Press the Shutter button to start recording. A timer will appear on the screen.
3. Press the Shutter button again to stop recording.

3. Playback

1. Press the Mode button to switch to playback mode.
2. Use the Up/Down buttons to scroll through your photos and videos.
3. Press the Shutter button to view a selected item or play a video.

4. Using Frames, Filters, and Effects

The camera includes 28 photo frames, 6 filters, and 10 distorting mirror effects to enhance creativity.

1. In photo mode, press the Menu/Mode button to access options.
2. Navigate to the frames, filters, or effects settings using the Up/Down buttons.
3. Select your desired option and press the Shutter button to confirm.

3 Distorting Mirror Effects



6 Funny Filters

15 Nice Frames



Image: A collage showing various creative options for the GKTZ Kids Camera, including distorting mirror effects, color filters, and decorative frames applied to photos of children.

5. Playing Games

The camera features 5 built-in puzzle games for entertainment.

1. Press the Mode button repeatedly until you reach the games menu.
2. Use the Up/Down buttons to select a game and the Shutter button to start.



Image: The GKTZ Kids Camera screen showing one of the built-in puzzle games, with icons for other games displayed above.

6. Transferring Files to a Computer

1. Connect the camera to your computer using the USB cable.
2. The camera should appear as a removable disk drive on your computer.
3. Open the drive to access the DCIM folder, where your photos and videos are stored.
4. Copy the files to your computer.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners.
- **Battery Care:** Charge the battery regularly, even if the camera is not in use, to maintain battery health. Avoid fully discharging the battery for extended periods.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight when not in use.
- **Screen Protector:** The camera comes with a protective film on the screen. It is recommended to remove this film for optimal clarity.



Tear off the protective film of the screen !



Image: The GKTZ Kids Camera showing a corner of the protective film being peeled off the screen, with text instructing to remove it.

TROUBLESHOOTING

Problem	Solution
Camera does not turn on.	Ensure the battery is charged. Connect to a USB power source and try again.
Camera freezes or becomes unresponsive.	Locate the reset hole (often a small pinhole) on the camera body. Use a small pin (like a paperclip) to gently press the reset button inside. This will restart the camera without losing data.
Cannot take photos/videos.	Check if the Micro SD card is inserted correctly and has sufficient free space. The camera may also be in the wrong mode (e.g., playback mode).
Images are blurry.	Ensure the lens is clean and free from smudges. Make sure there is adequate lighting.
Computer does not recognize the camera.	Try a different USB port or cable. Ensure the camera is powered on when connected.

Mini Kids Camera



Reset it with a small pin if it freezes due to improper operation



Shockproof safe materail

Image: The GKTZ Kids Camera with annotations for its dimensions, a detail showing how to reset it with a small pin, and an illustration of its shockproof material.

SPECIFICATIONS

Feature	Detail
Brand	GKTZ
Model Name	Kids camera
Maximum Webcam Image Resolution	12 MP
Photo Sensor Technology	CCD
Image Stabilization	Digital
Optical Zoom	4 x
Supported File Format	JPEG
Video Resolution	1080p
Video Capture Format	MP4
Screen Size	2.0 inches (IPS)
Battery Type	Rechargeable Lithium Polymer
Battery Capacity	600 mAh
Battery Average Life	2 Hours (continuous photo taking)
Memory Storage Capacity	32 GB (Micro SD card included)
Connectivity Technology	USB
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Green
Age Range Description	Kid, Toddler (3-8 years)

WARRANTY

The GKTZ Kids Digital Video Toddler Camera comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

SUPPORT

For any questions, technical assistance, or warranty inquiries, please contact GKTZ customer support. Refer to the contact information provided on the product packaging or the official GKTZ website.

You can also visit the official GKTZ store on Amazon for more information: [GKTZ Amazon Store](#).

