

Disney 38014

Just Play Disney Junior Mickey Mouse Funhouse Light The Way Train Instruction Manual

Model: 38014

INTRODUCTION

This manual provides essential instructions for the safe and proper use of your Just Play Disney Junior Mickey Mouse Funhouse Light The Way Train. Please read all instructions carefully before assembly and operation.



Image: The complete Mickey Mouse Funhouse Light The Way Train set, including the train, two carts, flashlight controller, and product packaging.

SAFETY INFORMATION

Warning: May contain small pieces. Not suitable for children under 36 months due to potential choking hazards.

Always supervise children during play. Keep packaging materials away from children to prevent suffocation.

PACKAGE CONTENTS

- 1 x Motorized Mickey Mouse Locomotive
- 1 x Pluto Hotdog Cart
- 1 x Musical Cargo Cart with Mickey Mouse Ears
- 1 x Flashlight Controller
- 4 x AA Batteries (pre-installed in train)

SETUP

1. Battery Installation (Flashlight Controller)

1. Locate the battery compartment on the flashlight controller.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 x AAA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure with the screw.

Note: The train locomotive comes with 4 x AA batteries pre-installed. If the train's performance diminishes, replace these batteries following similar steps.

2. Connecting the Train Carts

1. Identify the latch connectors on the front and back of each train cart.
2. Align the Mickey Mouse Locomotive with the Pluto Hotdog Cart.
3. Gently push the connectors together until they securely latch.
4. Connect the Musical Cargo Cart to the Pluto Hotdog Cart in the same manner.
5. Ensure all carts are firmly connected before operation.

OPERATING INSTRUCTIONS

The Mickey Mouse Funhouse Light The Way Train is controlled using the included flashlight controller. This controller enables four distinct features.

1. Light-Following Mode

- Turn on the flashlight controller.
- Shine the flashlight beam onto the ground in front of the train.
- The train will detect the light and follow its path.
- Guide the train by moving the flashlight beam.



Image: The train set in motion, following a red light beam projected from the flashlight controller onto the floor.



Image: A young child holding the flashlight controller, directing the Mickey Mouse train set across a wooden floor.

2. Pre-Programmed Movements

- The flashlight controller features buttons that activate three pre-programmed movement sequences for the train.
- Press the designated buttons on the controller to initiate these movements. Refer to the controller's markings for specific functions.

3. Interactive Features During Movement

- As the train moves, observe Mickey Mouse in the locomotive moving back and forth.
- Pluto in the hotdog cart will bounce up and down.
- The Mickey Mouse ears on the musical cargo cart will spin.

MAINTENANCE

Cleaning

To clean the train set and controller, wipe surfaces with a soft, damp cloth. Do not immerse any part of the toy in water. Avoid using harsh chemicals or abrasive cleaners.

Battery Care

- Remove batteries if the toy will not be used for an extended period.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Train Not Moving:**
 - Check if the train's power switch is in the "ON" position.
 - Ensure the train's AA batteries are correctly installed and not depleted. Replace if necessary.
 - Verify that the flashlight controller's AAA batteries are installed correctly and not depleted. Replace if necessary.
 - Make sure the flashlight beam is directly aimed at the train's sensor.
- **Flashlight Controller Not Responding:**
 - Check the AAA batteries in the controller.
 - Ensure there are no obstructions between the controller and the train.
- **Carts Disconnecting:**
 - Ensure the latches are fully engaged when connecting carts.
 - Avoid lifting the train by a single cart, as this may cause disconnection.

SPECIFICATIONS

Model Number:	38014
Number of Pieces:	3 (Locomotive, Pluto Cart, Musical Cart)
Assembly Required:	No (minor cart connection)
Batteries Required:	Yes
Batteries Included:	4 x AA (for train)
Batteries Not Included:	3 x AAA (for flashlight controller)
Material:	Plastic
Color:	Multi-color
Recommended Age:	36 months - 8 years
Product Dimensions:	24.13 x 10.16 x 27.94 cm (approximate, for entire set)
Weight:	1.15 kg
Manufacturer:	Just Play



Image: A visual representation indicating the height of the flashlight controller is approximately 6.84 inches.

WARRANTY INFORMATION


This product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the packaging or contact the manufacturer directly. Please retain your proof of purchase.

SUPPORT

For further assistance, technical support, or inquiries regarding your Just Play Disney Junior Mickey Mouse Funhouse Light The Way Train, please contact Just Play customer service. Contact information can typically be found on the product packaging or their official website.

Manufacturer: Just Play

Website: www.justplayproducts.com (Example, actual URL may vary)

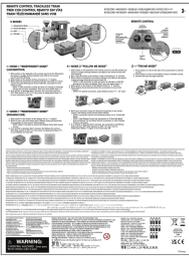

[Disney Remote Control Trackless Train Instruction Manual](#)

Comprehensive instructions for operating the Disney Remote Control Trackless Train, covering independent mode, follow-me mode, try-me mode, technical specifications, and safety warnings.



[Disney Epic Mickey 2: Przewodnik po grze na Xbox 360](#)

Szczegółowy przewodnik po grze Disney Epic Mickey 2 na konsolę Xbox 360. Poznaj sterowanie, umiejętności postaci Mikiego i Oswalda, mechaniki gry, rodzaje strażników oraz wskazówki dotyczące podróżowania po Pustkowiu.



[Holiday Mickey 23SV24033 Assembly and Operation Instructions](#)

Detailed assembly and operation guide for the Disney Holiday Mickey animated figure (Model 23SV24033) by Seasonal Visions International. Includes parts list, setup, troubleshooting, and care instructions for this festive decoration.



[Disney Mickey Mouse Waffle Maker WM1-DIM-MM2: Operating and Safety Instructions](#)

Comprehensive operating and safety instructions for the Disney Mickey Mouse Waffle Maker (Model WM1-DIM-MM2) by Uncanny Brands. Learn how to safely use, clean, and maintain your waffle maker, with tips and a recipe.



[Mickey and Minnie Mouse RC Vehicle User Manual](#)

Instructions and safety information for operating the Disney 9 Inch Mickey Mouse Fire Truck RC Vehicle and Disney 9 Inch Minnie Mouse Bake Shop RC Vehicle by MegaGain International Ltd.



[Disney Minnie 6V Train & Tracks: User Manual and Safety Guide](#)

Comprehensive guide for the Disney Minnie 6V Train & Tracks ride-on toy, covering charging, operation, safety precautions, and warranty information. Includes detailed instructions for assembly and maintenance.