

Elekpia Elekpia-His-RK6035

Elekpia Universal Remote Control for Hisense Roku TV

MODEL: ELEKPIA-HIS-RK6035 INSTRUCTION MANUAL

1. Introduction

This manual provides comprehensive instructions for the Elekpia Universal Remote Control, model Elekpia-His-RK6035. This remote is designed as a direct replacement for various Hisense Roku TV models, offering immediate functionality without the need for programming or pairing. It includes dedicated shortcut buttons for popular streaming services.

2. Product Overview

The Elekpia Universal Remote Control features a standard layout for easy navigation and control of your Hisense Roku TV.





This image displays the front of the Elekpia Universal Remote Control. Key buttons visible include the Power button at the top, a directional pad with an "OK" button in the center, Back, Home, and various playback controls (Rewind, Play/Pause, Fast Forward). Dedicated shortcut buttons for Netflix, Hulu, and Vudu are also present, along with a Channel button.



This image shows the side profile of the Elekpia Universal Remote Control, highlighting the volume up,

volume down, and mute buttons located on the left side of the remote.

3. Setup

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
2. **Close Compartment:** Replace the battery compartment cover securely.
3. **Immediate Use:** The remote control is ready for immediate use with compatible Hisense Roku TVs. No programming or pairing is required.

4. Operating Instructions

This remote control provides full functionality for your Hisense Roku TV.

- **Power Button:** Press the **Power** button (red circle with line) to turn your TV on or off.
- **Navigation:** Use the directional pad (up, down, left, right arrows) to navigate menus and select options. Press the **OK** button to confirm selections.
- **Home Button:** Press the **Home** button (house icon) to return to the Roku Home screen.
- **Back Button:** Press the **Back** button (left arrow) to go back to the previous screen or menu.
- **Volume Control:** Use the **Volume Up** and **Volume Down** buttons on the side of the remote to adjust audio levels. Press the **Mute** button to silence the TV.
- **Playback Controls:** Use the **Rewind**, **Play/Pause**, and **Fast Forward** buttons for media playback.
- **Instant Replay:** The **Instant Replay** button (curved arrow) allows you to jump back a few seconds in video playback.
- **Star Button:** The **Star** button (*) provides quick access to options within certain apps or menus.
- **Shortcut Buttons:** Dedicated buttons for **Netflix**, **Hulu**, and **Vudu** allow direct access to these streaming services.

5. Compatibility

This Elekpia remote control is specifically designed to be compatible with a wide range of Hisense Roku TV models. It functions as a direct replacement for original remotes such as HU-RCRIS-21G, HU-RCRUS-20, and HU-RCRUS-20G.

Compatible Hisense Roku TV Models include:

32H4E1, 32H4F, 32H4030F, 32H4070E, 32H4D, 32H4E, 32H4020E1, 32H4050E1, 32H4060E1, 32H4070E1, 32H4090E1, 32H4080E1, 32H4080E, 32H4040E, 32H4050E, 32H4020E, 32H4060E, 32H4090E, 40H4040E, 40H4F, 40H4030F, 40H4050E, 40H4070E, 40H4020E, 40H4030F1, 40H4E, 40H4D, 40H4090E, 40H4080E, 43H4030F, 43R6E, 43R7E, 43H4020E, 43H4040E, 43H4E, 43R7080E, 43R6E1, 43H4060E, 43H4050E, 43H4070E, 43H4080E, 43H4090E, 43H4D, 50R7E, 50R6E, 50H4D, 50R6E, 50R7F, 50R7050E, 50R6E1, 55R6000E, 55R6040F, 55R7F, 55R6E, 55R6070E3, 60R6E, 60R5800E, 58R6E, 55H4D, 55R7E, 65R6070E, 65R7E1, 65R6E, 65R6E1, H4 series, 65R7E, 65R6D, 65R8F, 65R7050E1, 75R6E1, 70R6270F, R6070 Series, H4030 Series, 70R629.

Important Note: This remote control is **NOT** compatible with Roku Stick or Roku Streaming Player devices. It does not support voice control or have a headphone jack.



This image visually clarifies compatibility. It shows a Hisense Roku TV screen with a "YES" indicator, confirming compatibility. Below, various Roku Stick and Roku Streaming Player models are displayed with a "NOT Compatible" label, emphasizing that the remote is not designed for these devices.

6. Troubleshooting

- **Remote Not Responding:**

- Ensure batteries are inserted correctly with the proper polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's infrared receiver.
- Ensure you are within a reasonable range and have a clear line of sight to the TV.

- **Specific Buttons Not Working:**

- Clean the remote control buttons and surrounding areas to remove any debris that might be causing sticking.
- If only specific buttons are unresponsive after checking batteries, the remote may be faulty and require replacement.

- **Limited Range:**

- The remote operates using infrared (IR) technology. Ensure there are no strong light sources (like direct sunlight) interfering with the IR signal.
- Move closer to the TV and ensure a direct line of sight.

7. Specifications

Feature	Detail
---------	--------

Brand	Elek pia
Model Number	Elek pia-His-RK6035
Compatible Devices	Hisense Roku Televisions
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5.6 x 1.6 x 0.7 inches
Item Weight	2 ounces
Special Feature	Universal replacement, No programming required
Color	Black

8. Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

9. Warranty and Support

For warranty information or technical support regarding your Elek pia Universal Remote Control, please refer to the seller's specific policies or contact the retailer where the product was purchased. Keep your purchase receipt for warranty claims.