

Bosch 00312193

Bosch 00312193 Dishwasher Cleaner User Manual

Model: 00312193

INTRODUCTION


The Bosch 00312193 Dishwasher Cleaner is designed to remove grease, starch, and protein residues from the interior of your dishwasher. This product is supplied in a 3-pack, with each pack intended for a single cleaning cycle. Regular use helps maintain your dishwasher's performance and cleanliness.

SAFETY INFORMATION

WARNING: State of California Proposition 65 Warning - Cancer and Reproductive Harm - www.P65Warnings.ca.gov.


Always handle cleaning products with care. Keep out of reach of children and pets. Avoid contact with eyes and skin. In case of contact, rinse thoroughly with water. If irritation persists, seek medical attention. Do not ingest. Store in a cool, dry place.

PRODUCT OVERVIEW

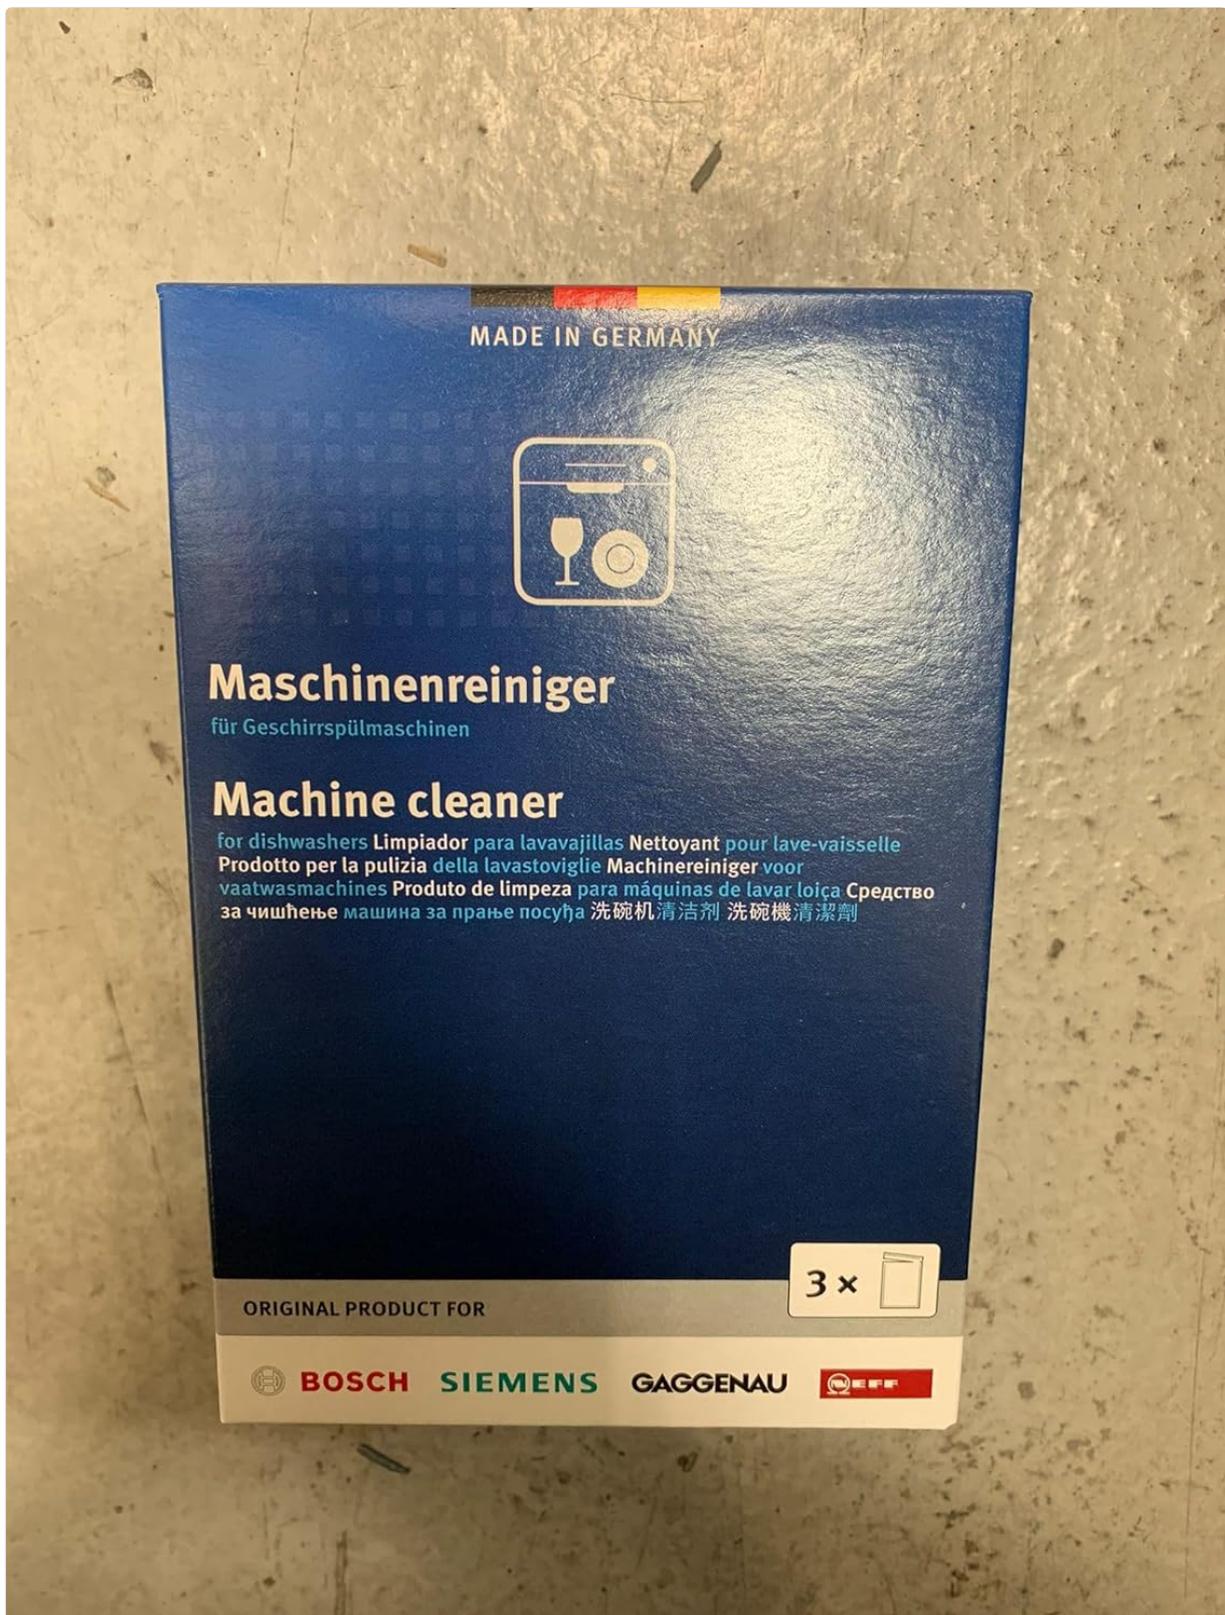

The front of the Bosch Dishwasher Cleaner packaging, showing the product name and 'Made in Germany' label.

The Bosch 00312193 Dishwasher Cleaner comes in a box containing three individual packets. Each packet is a powder formulation designed for a single cleaning cycle.

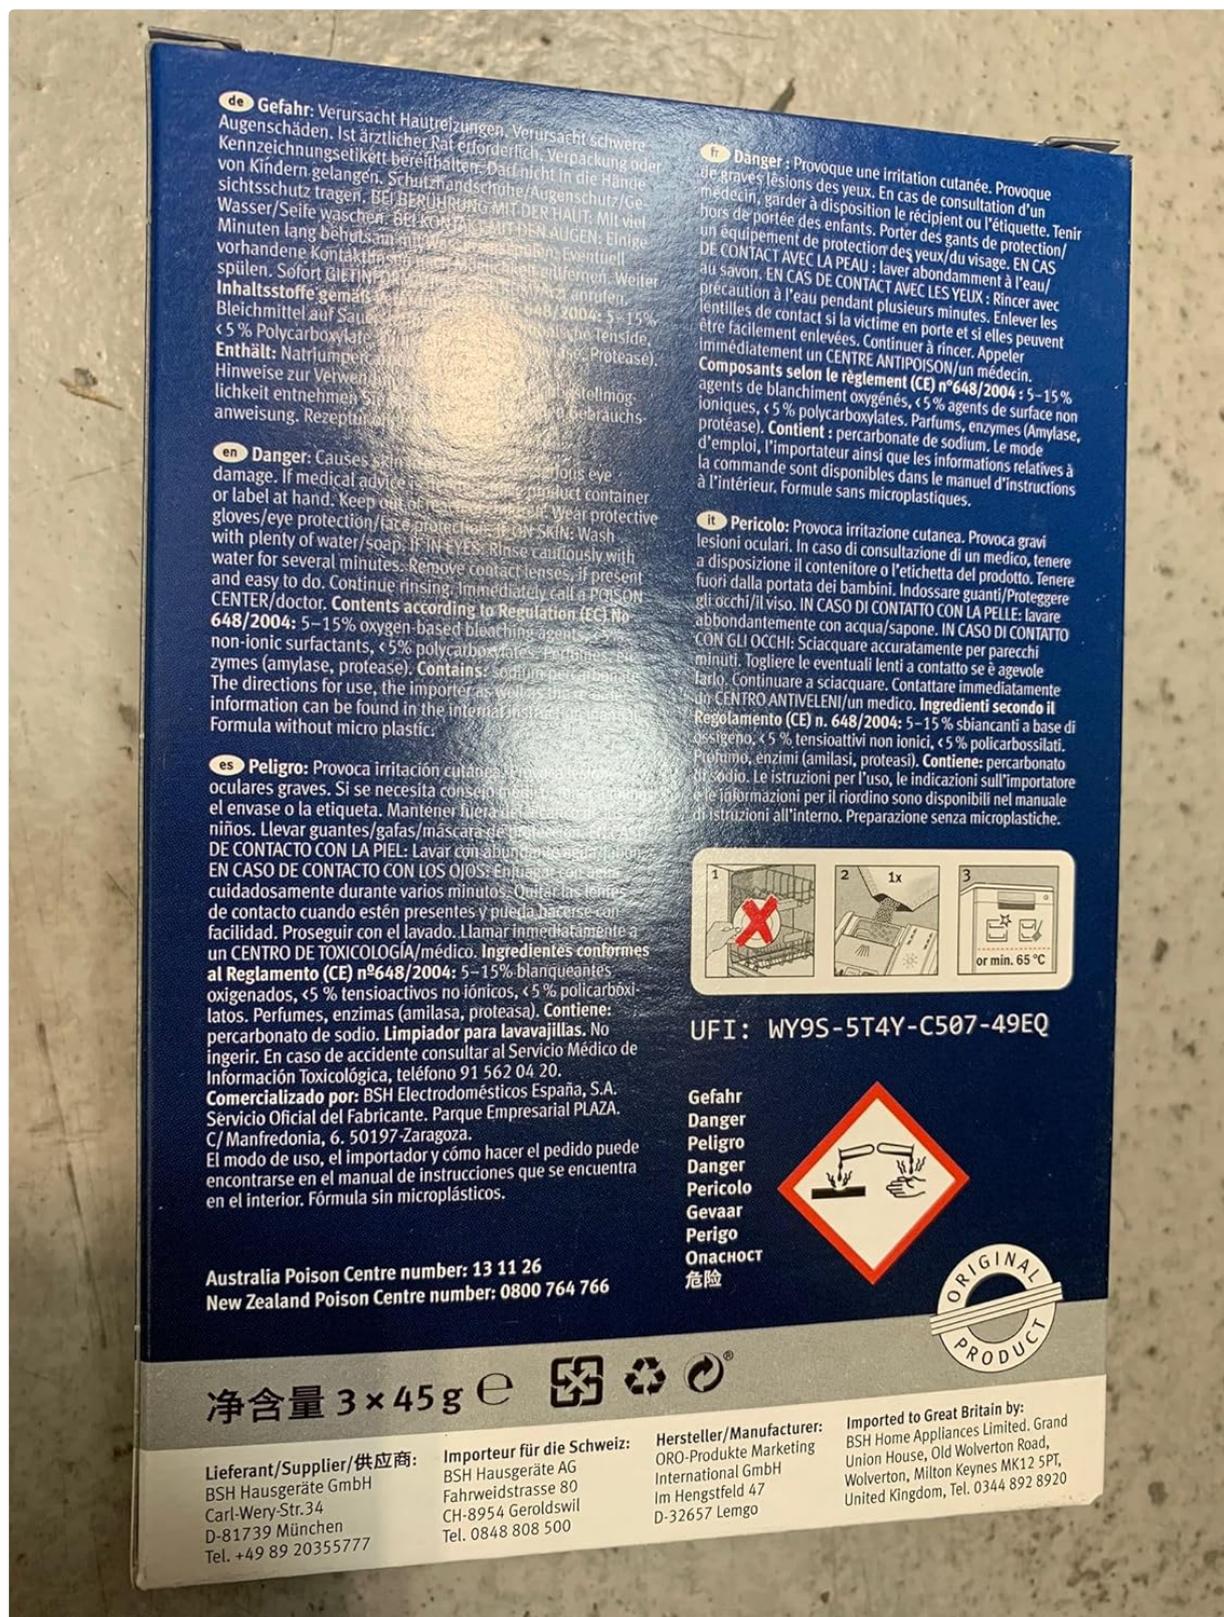

The back of the packaging displays usage instructions and safety warnings in multiple languages, including a California Proposition 65 warning.

SETUP

- 1. Empty Dishwasher:** Ensure your dishwasher is completely empty of dishes and cutlery before starting the cleaning cycle.
- 2. Clean Filter:** Locate and remove the dishwasher filter (typically at the bottom of the dishwasher). Clean it thoroughly under running water to remove any trapped food particles or debris. Reinstall the filter securely.

OPERATING INSTRUCTIONS

1. **Place Cleaner:** Open one packet of Bosch 00312193 Dishwasher Cleaner. Pour the entire contents directly into the main detergent dispenser of your dishwasher. Close the dispenser lid.



A single packet of Bosch Dishwasher Cleaner ready to be placed into the detergent dispenser of a dishwasher.

2. **Select Cycle:** Run an empty dishwasher cycle. For best results, use a dedicated "Machine Clean" cycle if your dishwasher has one. If not, select the hottest and longest wash cycle available.
3. **Smart Dishwashers:** If your dishwasher is a smart appliance and the "Machine Clean" cycle is not visible on the control panel, it may be accessible through the manufacturer's dedicated app. Download and connect to the app to initiate the cycle.

4. **Post-Cleaning Rinse (Recommended):** After the machine clean cycle is complete, it is recommended to run a short rinse cycle (typically 10-12 minutes) to ensure all cleaner residues are flushed out.

MAINTENANCE

To maintain optimal dishwasher performance and prevent residue buildup, use one packet of Bosch 00312193 Dishwasher Cleaner every few months. The frequency may vary depending on your dishwasher usage and water hardness.

TROUBLESHOOTING

If you experience persistent issues with your dishwasher's cleanliness or performance after using the cleaner, it is recommended to refer to your appliance's service manual, contact your appliance manufacturer, or consult a service professional for further assistance.

SPECIFICATIONS

- **Model Number:** 00312193
- **Brand:** Bosch
- **Item Form:** Powder
- **Scent:** Unscented
- **Specific Uses For Product:** Dishwasher Cleaning
- **Number of Items:** 3 (packs)
- **Item Weight:** 50 Grams (per pack)
- **Cleaning Agent Formulation:** Detergent

INGREDIENTS

- Sodium Carbonate
- Sodium Silicate
- Sodium Citrate
- Sodium Carbonate Peroxide
- Polymer based on Maleic Acid and Acrylic Acid
- TAED
- Alcohols, C12-15, Ethoxylated Propoxylated
- Amylase
- Subtilisin
- Parfum

WARRANTY AND SUPPORT

For specific warranty information or product support related to your Bosch dishwasher, please refer to your appliance's user manual or contact Bosch customer service directly. This cleaner is an accessory product designed for use with Bosch dishwashers.

