

soges US1-171-FG-DE

soges Baker's Rack Model US1-171-FG-DE Instruction Manual

Model: US1-171-FG-DE | Brand: soges

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Always secure the cabinet to the wall to prevent tip-overs.
- Do not overload the shelves to maintain stability.
- Ensure all screws and fasteners are tightened securely before use.
- Place the rack on a flat, stable surface.
- Keep small parts away from children during assembly.



Image 1.1: Assembled soges Baker's Rack. Ensure proper assembly for safety and stability.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Metal Frame Components (various sizes)
- Laminated Wooden Boards (4 leaves)
- Adjustable Foot Pads
- S-shaped Hooks (5 pieces)
- Assembly Hardware (screws, Allen wrench)
- Instruction Manual

3. SETUP AND ASSEMBLY

Assembly is straightforward. Each part is numbered to correspond with the enclosed instructions. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Attach Foot Pads:** Screw the adjustable foot pads into the bottom of the main frame legs.
3. **Assemble Side Frames:** Connect the vertical metal frame components using the provided screws. Ensure the X-frame design is correctly positioned for stability.
4. **Install Shelves:** Secure the laminated wooden boards to the metal frame using the designated screw holes. Start with the bottom shelf and work your way up.
5. **Attach Top Board:** Place and secure the largest wooden board as the top surface.
6. **Add Hooks:** Attach the S-shaped hooks to the side rail for hanging utensils.
7. **Final Tightening:** Once all parts are in place, gently tighten all screws to ensure the rack is stable and secure. Do not overtighten.



Image 3.1: Key features for assembly and stability: adjustable foot pads, X-frame support, and S-hooks for utensils.



Image 3.2: Product dimensions for planning placement. L x W x H = 35.43 x 15.75 x 32.68 inches.

4. OPERATING INSTRUCTIONS

The soges Baker's Rack is designed for versatile storage in your kitchen or other areas. Follow these guidelines for optimal use:

- **Placement:** Position the rack in a suitable location, ensuring it is on a level surface. Adjust the foot pads if necessary to eliminate wobbling.
- **Loading:** Distribute weight evenly across the shelves. The top surface is ideal for microwave ovens, coffee makers, or other small appliances. Lower shelves can hold dishes, pots, pans, and other kitchen items.
- **Hooks:** Utilize the side hooks for hanging kitchen utensils, towels, or oven mitts to keep them within easy reach.
- **Stability:** Avoid placing excessively heavy items on the top shelf without proper wall anchoring. Refer to the safety information.



Image 4.1: Example of the rack in use, holding a microwave, bottles, and other kitchen essentials.



Water
Resistant
Resistente
al Agua



Easy to
Clean Facil
de Limpiar



Image 4.2: The rack configured as a versatile coffee station, demonstrating its multi-functional storage capabilities.

Your browser does not support the video tag.

Video 4.1: A short demonstration showcasing the organization and space-saving benefits of the kitchen rack.

5. MAINTENANCE


Proper care will ensure the longevity of your soges Baker's Rack.

- **Cleaning:** Wipe the surfaces with a dry cloth. For spills, use a slightly damp cloth and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Spill Resistance:** The laminated wooden boards are water-resistant, making them easy to clean.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Avoid Overloading:** Do not exceed the recommended weight capacity for each shelf to prevent damage or instability.



1-2 cm adjustable foot pads,
maintain stability

5 additional hooks, can be used
to hang kitchen utensils

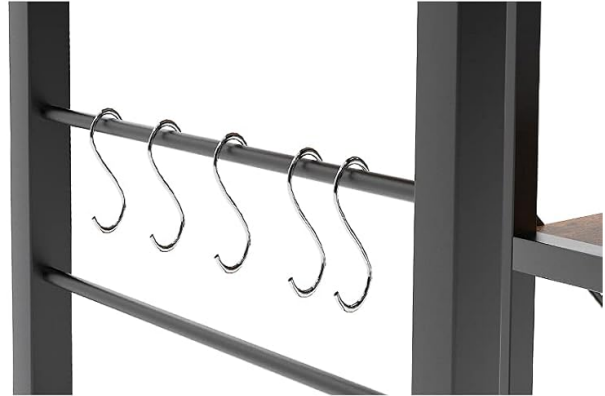

X frame design adds stability &
durability of the rack.

Image 5.1: The water-resistant and easy-to-clean surface simplifies maintenance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Uneven floor; loose screws; incorrect assembly.	Adjust the foot pads to level the rack. Check and tighten all assembly screws. Review assembly steps.
Parts do not fit together.	Incorrect orientation of parts; manufacturing defect.	Ensure parts are oriented as shown in the manual. Do not force parts. If still an issue, contact customer service.
Missing components.	Packaging error.	Contact soges customer service with your purchase details and the list of missing parts.

7. SPECIFICATIONS

Feature	Detail
Model Number	US1-171-FG-DE
Material	Powder-coated Metal Frame, Laminated Wooden Board
Dimensions (L x W x H)	35.43 x 15.75 x 32.68 inches (90 x 40 x 83 cm)
Weight	28.66 lbs (13 kg)
Number of Shelves	3
Color	Rustic Brown
Assembly Required	Yes
Special Features	Adjustable Foot Pads, X-Frame Design, 5 S-Hooks, Water-Resistant Surface

8. WARRANTY AND SUPPORT

soges is committed to providing competent and friendly customer service. If you have any questions, concerns, or require assistance with your product, please do not hesitate to contact us.

- **Customer Service:** For support, please refer to the contact information provided with your purchase or visit the official soges website.
- **Response Time:** We aim to reply and offer a solution within 24 hours of your inquiry.

Note: Warranty details may vary by region and retailer. Please retain your proof of purchase for any warranty claims.