

**little dove PLT-001**

## Little Dove Play Tent Instruction Manual

Model: PLT-001 | Brand: little dove

### PRODUCT OVERVIEW

The Little Dove Play Tent is designed to spark imagination and provide a comfortable, spacious area for children aged 3 and up. Measuring an impressive 52 x 35 x 52 inches, it comfortably accommodates multiple children and even adults, making it perfect for role-playing, reading, and quiet time. Crafted from premium polyester, this tent is built for lasting durability and features a solid structure for safety. It comes as an all-inclusive set, complete with enchanting star lights, charming tassel garlands, and a generously sized non-slip mat.



Figure 1: Fully assembled Little Dove Play Tent, showcasing its spacious design and included decorative elements.

## SETUP INSTRUCTIONS

The Little Dove Play Tent is designed for effortless assembly without the need for any tools. Follow these steps for quick setup:

- 1. Unpack Components:** Carefully remove all items from the packaging. The set includes the play tent fabric body, a set of sturdy assembly poles, enchanting star lights, charming tassel garlands, and a non-slip mat.

# Children's Secret Haven

Where Dreams Take Flight



Figure 2: All components of the play tent laid out for assembly.

2. **Assemble Poles:** Connect the assembly poles according to the diagram provided in the included guide. Ensure that **EVERY** pole is tightly connected. This is crucial for the fabric cover to fit properly and for the tent's stability.

# Skin-friendly Mat

Soft and comfortable for children's delicate skin

50% more filling



1. Soft fabric
2. Thick cotton
3. Machine washable

Figure 3: Step-by-step illustration of pole assembly.

3. **Attach Fabric Cover:** Drape the play tent fabric body over the assembled pole structure. Adjust the fabric to ensure it is taut and evenly distributed.
4. **Secure Mat:** Place the generously sized non-slip mat inside the tent on the floor. The mat provides a comfortable and secure surface for play.
5. **Add Decorations:** Hang the star lights and tassel garlands as desired to enhance the magical ambiance of the tent. The star lights are battery-operated.

The tent can be set up indoors, in the backyard, or at the park, offering versatile play options.

## OPERATING INSTRUCTIONS

The Little Dove Play Tent is designed for simple and intuitive use, allowing children to easily engage in imaginative play.

- **Accessing the Tent:** The tent features a main door opening. Children can easily enter and exit through this opening.
- **Window Interaction:** The tent includes three curtained windows. These windows can be opened or closed by tying back the curtains, allowing for varied play scenarios and ventilation.
- **Star Lights:** The included star lights are battery-operated. Locate the battery pack and switch them on/off as desired to create a cozy and enchanting atmosphere inside the tent.
- **Imaginative Play:** Encourage children to use the tent for various activities such as reading, playing games, hosting tea parties, or simply relaxing. The spacious interior provides ample room for creativity.



Figure 4: Children enjoying the spacious interior of the play tent.

## MAINTENANCE INSTRUCTIONS

Proper maintenance will ensure the longevity and cleanliness of your Little Dove Play Tent.

- **Fabric Cleaning:** The tent fabric is conveniently machine washable. For best results, wash on a gentle cycle with cold water. Use a mild detergent. Do not bleach.
- **Drying:** Air dry the fabric cover completely. Avoid tumble drying to prevent shrinking or damage to the material.
- **Mat Care:** The non-slip mat can be spot cleaned with a damp cloth and mild soap. Allow it to air dry thoroughly before placing it back in the tent.
- **Star Lights:** The star lights are not washable. If they become dirty, gently wipe them with a dry or slightly damp cloth. Ensure the battery pack remains dry.
- **Storage:** When not in use, the tent can be easily disassembled and folded for compact storage. Store all components in a dry place to prevent mold or damage.

## TROUBLESHOOTING GUIDE

If you encounter any issues with your Little Dove Play Tent, refer to the following common solutions:

Problem	Possible Cause	Solution
Fabric cover does not fit or is too tight.	Poles are not fully connected.	Press firmly and ensure EVERY pole is tightly connected. Re-check all connection points.
Tent feels unstable or wobbly.	Poles are not securely inserted into connectors or fabric loops.	Verify all pole connections are firm. Ensure the fabric is correctly aligned and secured to the frame.
Star lights are not working.	Dead batteries or switch is off.	Check the on/off switch on the battery pack. Replace batteries if necessary.
Mat slides on the floor.	Surface is too smooth or mat is not flat.	Ensure the mat is laid flat. If on a very smooth surface, consider placing a rug underneath for added grip.

## PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	35 x 52 x 52 inches
Item Weight	7.34 pounds
Item Model Number	PLT-001
Manufacturer Recommended Age	36 months - 3 years
Material	Premium Polyester
Care Instructions	Machine Washable (fabric)
Included Accessories	Assembly poles, star lights, tassel garlands, non-slip mat

## WARRANTY AND SUPPORT

Little Dove is committed to providing high-quality products and customer satisfaction. Your play tent is backed by:

- Superior Warranty Coverage:** For details regarding specific warranty terms and conditions, please refer to the product packaging or contact our customer support.
- 30-Day Satisfaction Guarantee:** If you are not completely satisfied with your purchase within 30 days, please

reach out to us for assistance.

- **Always-On Assistance:** For any questions, concerns, or support needs, our customer service team is available to help.

For further assistance, please visit the official little dove store on Amazon or contact customer support through your purchase platform.

© 2024 little dove. All rights reserved.