

ULANZI U200 Light

ULANZI U200 Light Smartphone Video Rig Instruction Manual

Model: U200 Light (2245-CA2) | Brand: ULANZI

1. INTRODUCTION

The ULANZI U200 Light Smartphone Video Rig is a versatile handheld stabilizer and ring light designed to enhance your smartphone video recording and photography. It features adjustable lighting, multiple mounting options, and a built-in power bank for extended use and device charging.

2. PRODUCT OVERVIEW

The ULANZI U200 Light combines a smartphone video rig with an integrated ring light, offering a compact and efficient solution for content creation. Key features include:

- **Wide Color Temperature:** Stepless adjustment from 2500K (warm) to 8500K (cool) with a dimming range of 20%-100%.
- **High Color Rendering:** CRI 96+ for natural and accurate color reproduction, featuring 200 high-brightness LED beads.
- **Built-in 8000mAh Battery:** Provides up to 2.5 hours of continuous use at maximum brightness and can function as a temporary power bank for mobile devices.
- **Multiple Mounting Options:** Equipped with 3 cold shoe mounts for attaching accessories like microphones or additional lights, and a 1/4-inch thread at the bottom for tripod mounting.
- **Adjustable Light-Emitting Surfaces:** Four light-emitting surfaces can be freely switched to adapt to different shooting scenarios.
- **Versatile Compatibility:** Universal phone clamp compatible with most smartphones (e.g., iPhone 12-17, Samsung, Huawei Mate) and supports horizontal and vertical shooting.
- **Integrated Stand:** Concealable pop-out legs with non-slip padding allow the rig to stand independently on a desktop.



Figure 2.1: ULANZI U200 Light Smartphone Video Rig.

3. SETUP

- 1. Unboxing:** Carefully remove the ULANZI U200 Light, phone clamp, USB charging cable, and remote control from the packaging.
- 2. Attach Phone Clamp:** Secure the phone clamp to the 1/4-inch screw thread located in the center of the rig. Ensure it is tightened firmly.
- 3. Insert Smartphone:** Gently expand the phone clamp and insert your smartphone. The clamp supports both horizontal and vertical orientations.
- 4. Optional Accessories:** If desired, attach external microphones, additional lights, or other accessories to the three cold shoe mounts on the top of the rig.
- 5. Tripod Mounting (Optional):** For stationary shooting, attach the rig to a tripod using the 1/4-inch thread at the bottom.
- 6. Desktop Stand (Optional):** Extend the pop-out legs on the bottom of the rig to stand it independently on a flat surface.



Figure 3.1: The ULANZI U200 Light with a smartphone mounted, showcasing the bottom support design and horizontal/vertical shooting capabilities.

4 Adjustable Light-Emitting Surfaces

The light-emitting surface can be freely switched according to different scenes

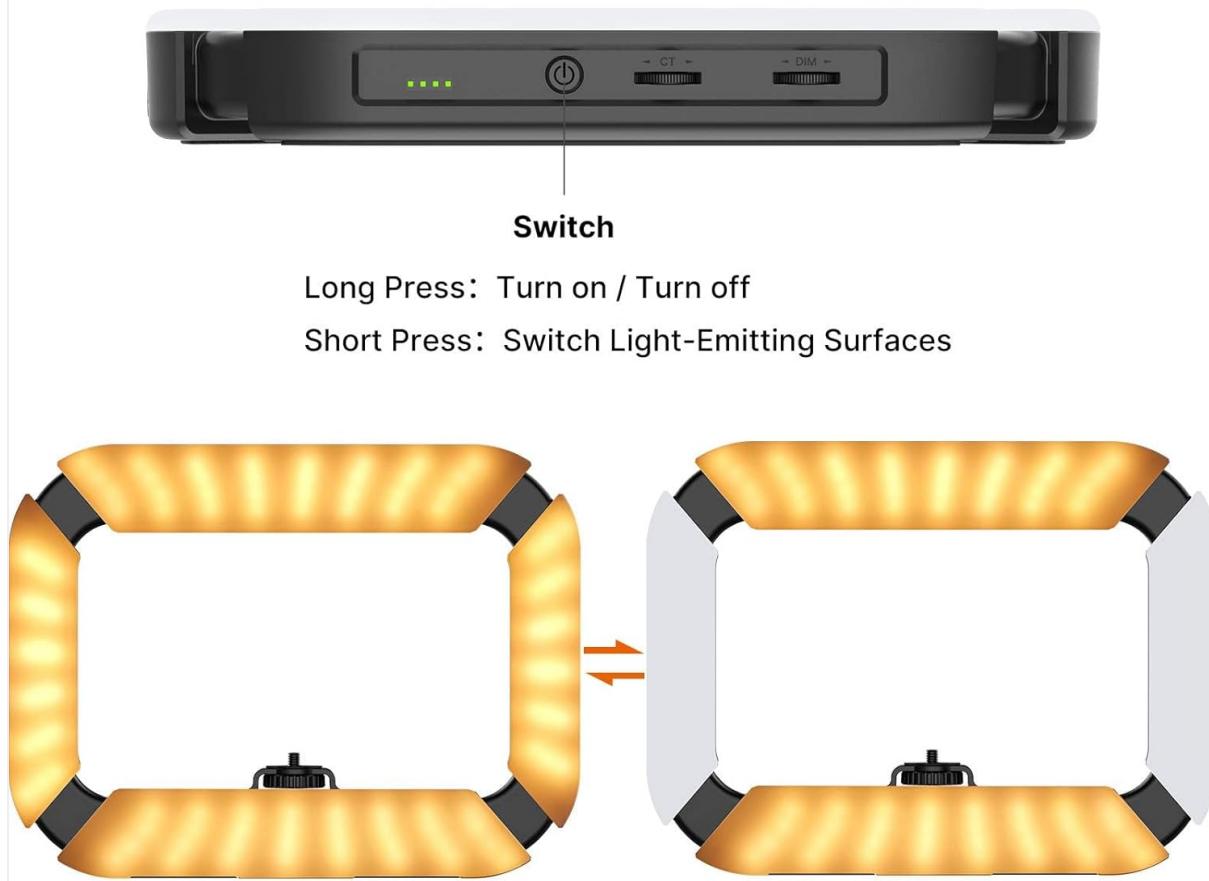


Figure 3.2: The Ulanzi U200 Light demonstrating compatibility with various devices including cameras, smartphones, and action cameras.

4. OPERATING INSTRUCTIONS


- Power On/Off:** Long press the power button located on the side handle to turn the device on or off.
- Adjust Brightness:** Use the dedicated dial on the side handle to steplessly adjust the light brightness from 20% to 100%.
- Adjust Color Temperature:** Use the dedicated dial on the side handle to steplessly adjust the color temperature from 2500K (warm) to 8500K (cool).
- Switch Light-Emitting Surfaces:** Short press the power button to cycle through the four adjustable light-emitting surfaces, allowing you to control the direction and spread of light.
- Remote Control:** The included remote control can be used to trigger your smartphone's camera shutter for photos or start/stop video recording. It can be stored in the rubber compartment on the handle.
- Charging the Rig:** Connect the provided USB Type-C cable to the charging port on the rig. The 8000mAh battery provides ample power.
- Using as Power Bank:** The rig can act as a temporary power bank. Connect your smartphone or other USB-powered device to the appropriate USB output port on the rig to charge it.

SCENES TO BE USED



Figure 4.1: Adjustable color temperature from 2500K to 8500K and dimming range from 20% to 100%.

QC fast charge and large capacity battery, support reverse charging

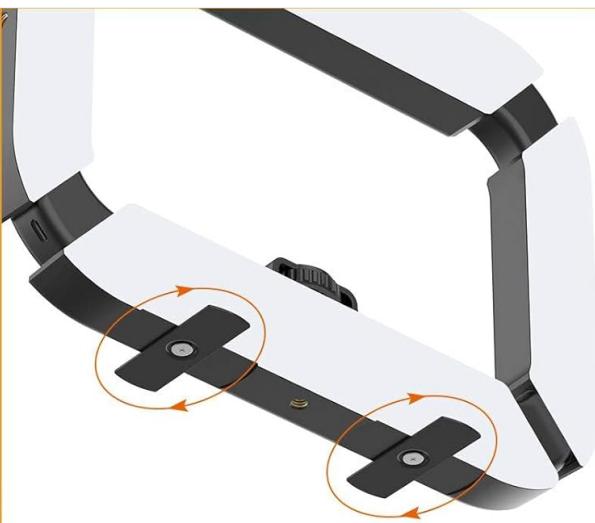

Bottom support design



Anti-slip rubber pad

Support horizontal and vertical shooting



Figure 4.2: The power button allows switching between four adjustable light-emitting surfaces.

5. MEDIA INTEGRATION EXAMPLES

The ULANZI U200 Light is designed for various content creation scenarios. Below are examples of its application:

Your browser does not support the video tag.

Video 5.1: An overview of the ULANZI U200 Hand Held Ring Light, demonstrating its features and ease of use. This video highlights the product's design and functionality for various shooting needs.

Your browser does not support the video tag.

Video 5.2: A demonstration of the ULANZI Smartphone Video Rig with Light Handheld Stabilizer in action. This video illustrates how the rig can be used to stabilize a smartphone while providing illumination for video recording.



Figure 5.1: Examples of the ULANZI U200 Light being used for different types of content creation, including vlogging, product photography, and live streaming.

6. SPECIFICATIONS

Feature	Detail
Model Number	2245-CA2
Color Temperature	2500K-8500K (Bi-color adjustable)
Dimming Range	20%-100%
CRI (Color Rendering Index)	96+
LED Beads	200 high-brightness
Battery Capacity	8000mAh (Built-in)
Battery Life (Max Brightness)	2.5 Hours
Charging Interface	USB Type-C

Feature	Detail
Mounting Points	3 Cold Shoes, 1/4-inch Thread
Product Dimensions	11.36" L x 8.61" W x 1.22" H
Item Weight	10.6 ounces

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the rig. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the device before first use and recharge it regularly, even if not in frequent use. Avoid completely draining the battery.
- **Handling:** Handle the rig with care to prevent damage to the LED panels or internal components.

8. TROUBLESHOOTING

- **Light Not Turning On:**
 - Ensure the battery is charged. Connect the rig to a power source using the USB Type-C cable.
 - Long press the power button to ensure it is properly activated.
- **Light Flickering:**
 - Check battery level; low battery can cause flickering.
 - Ensure the charging cable is securely connected if operating while charging.
- **Remote Control Not Working:**
 - Ensure the remote control has a working battery.
 - Verify Bluetooth connection between the remote and your smartphone.
- **Device Not Charging from Rig:**
 - Ensure the rig's battery has sufficient charge.
 - Check that the charging cable between the rig and your device is correctly connected.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official ULANZI website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.