

[Manuals.plus](#) /

> [Ancaixin](#) /

> Ancaixin 3-in-1 Toddler Tricycle Instruction Manual (Model B08R3QWKWS)

## Ancaixin B08R3QWKWS

# Ancaixin 3-in-1 Toddler Tricycle Instruction Manual

Model: B08R3QWKWS

## 1. PRODUCT OVERVIEW

---

The Ancaixin 3-in-1 Toddler Tricycle is designed to adapt to a child's developmental stages, functioning as a tricycle, a balance bike, and featuring a foldable design for portability. It is suitable for children aged 2 to 5 years, with an adjustable seat and detachable pedals to support various riding modes.



Image 1.1: The Ancaixin 3-in-1 Toddler Tricycle in its standard configuration, featuring a blue frame, black wheels, and an adjustable seat.

## 2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before allowing a child to use this product. Failure to follow these instructions may result in serious injury.

- **Adult Supervision Required:** Always ensure a responsible adult supervises the child during use.
- **Protective Gear:** Ensure the child wears a safety helmet and appropriate protective gear (e.g., knee and elbow pads) at all times.
- **Safe Riding Environment:** Use the tricycle on flat, paved, and safe surfaces. Avoid roads, steep inclines, stairs, swimming pools, or areas with vehicle traffic.
- **Pre-Ride Check:** Before each use, inspect all components, including wheels, handlebars, seat, and pedals, to ensure they are securely fastened and in good working condition.
- **Weight Limit:** Do not exceed the maximum load capacity of 55 lbs (25 kg).
- **Small Parts:** Keep small parts and packaging materials away from children under 3 years old to prevent choking hazards.


## 3. ASSEMBLY GUIDE

Assembly of the Ancaixin 3-in-1 Toddler Tricycle is designed to be straightforward and tool-free. Follow these steps for proper setup:

- Step 1: Attach Front Wheel to Bike Body.** Align the front wheel assembly with the main bike body and push them together until they click into place.
- Step 2: Install Handlebar.** Insert the handlebar into the designated slot on the front wheel assembly. Secure it using the M6\*25mm locking mechanism.
- Step 3: Attach Saddle (Seat).** Slide the seat post into the frame's seat tube. Adjust to the desired height and secure the quick-release clamp.
- Step 4: Attach Pedals.** Locate the pedal attachment points on the front wheel. Press the red button on each pedal and insert it firmly into the slot. Ensure the button is released and the pedal is locked in place.
- Step 5: Verify All Connections.** Double-check that all assembled parts are securely fastened before allowing a child to use the tricycle.

## Assembly Instructions

### Step1

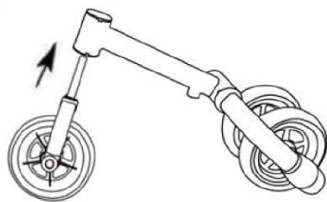

③ Front wheel + ② Bike body

### Step2



Step1 + ① Handlebar

### Step3




Arrows use M6\*25mm Locking


### Step4



Step3 + ④ Saddle


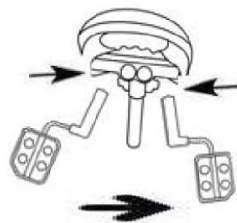


Step4 + ⑤ Pedal

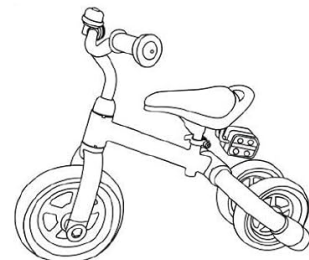


Taxi car


### Step5

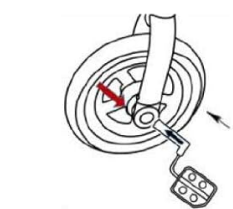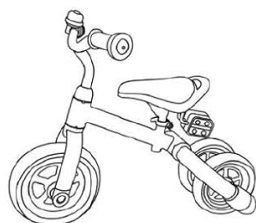

Press the red arrow and the pedal can be inserted or pulled out

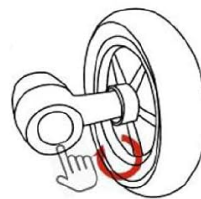

Press the button to rotate according to the arrow shown in the figure

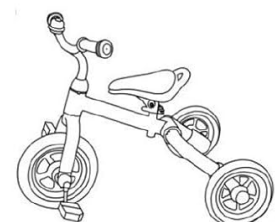

Tricycle

Image 3.1: Visual guide for the five-step assembly process, illustrating the connection of the front wheel, handlebar, saddle, and pedals.

## 4. OPERATING MODES

The Ancaixin tricycle offers three distinct modes to support a child's development and provide versatility:

#### 4.1. Tricycle Mode

In Tricycle Mode, the pedals are attached, and the rear wheels are separated to provide maximum stability. This mode is ideal for younger children (typically 24-32 months) who are learning to pedal and steer, offering a secure and balanced riding experience.

#### 4.2. Balance Bike Mode

To convert to Balance Bike Mode, detach the pedals and bring the two rear wheels together to form a single, narrower wheel. This mode is suitable for children aged 2-4 years, helping them develop balance and coordination without the distraction of pedals, preparing them for a two-wheeled bicycle.

#### 4.3. Folding Mode

The tricycle features a folding mechanism for convenient storage and transport. The rear wheels can be folded inwards, reducing the overall footprint of the tricycle. This is useful for carrying the tricycle in a car or storing it in small spaces.

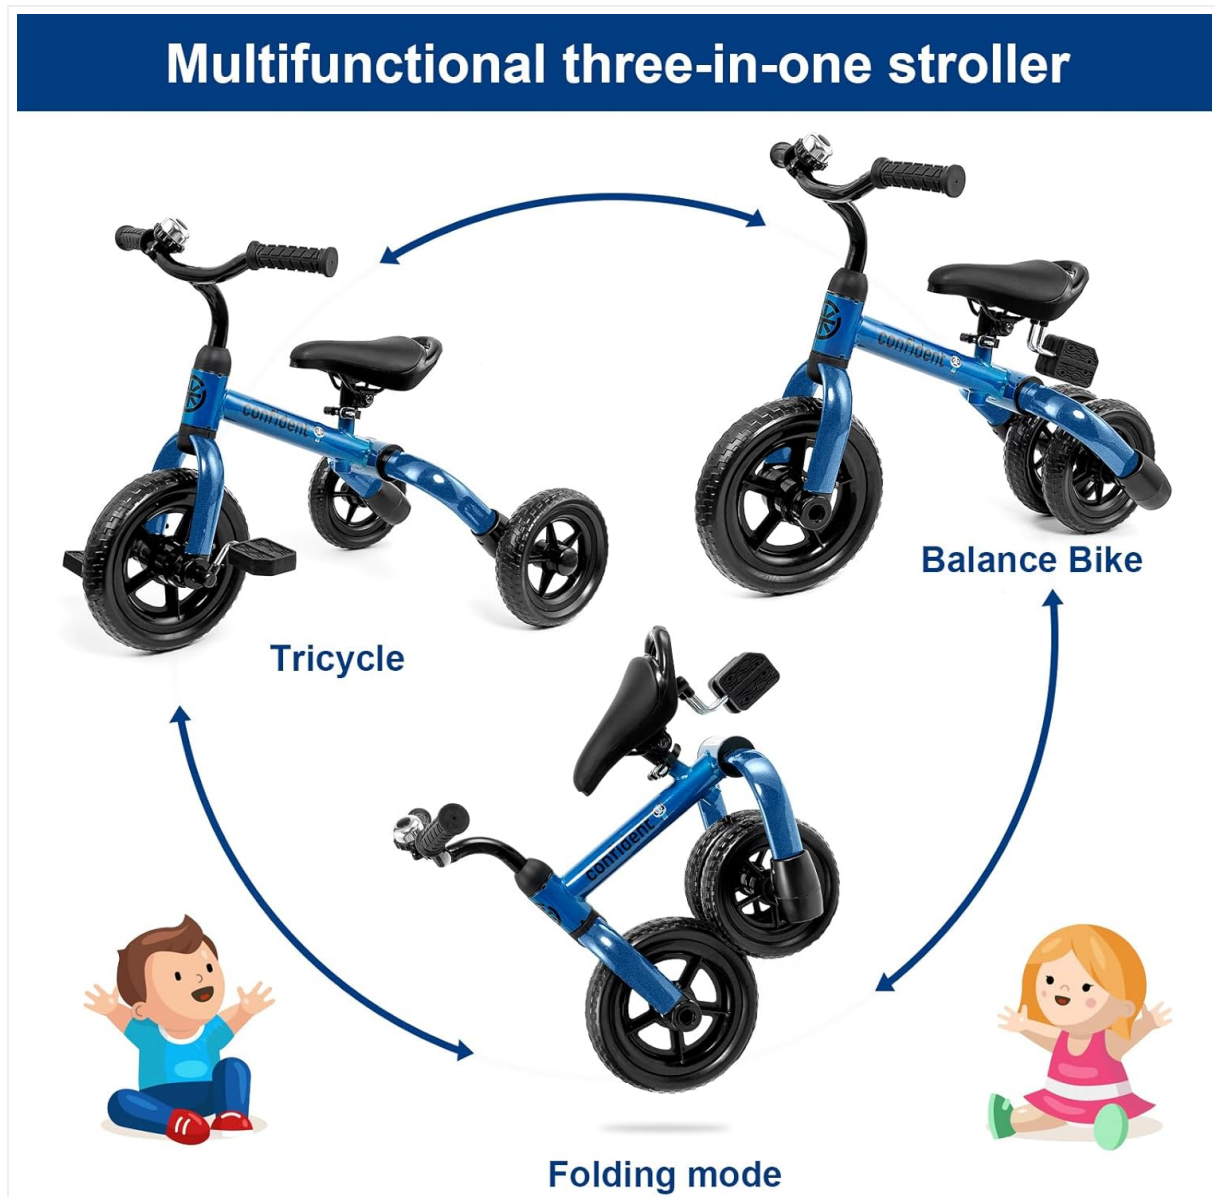


Image 4.1: Illustration of the three functional modes: Tricycle, Balance Bike, and Folding, demonstrating the product's adaptability.

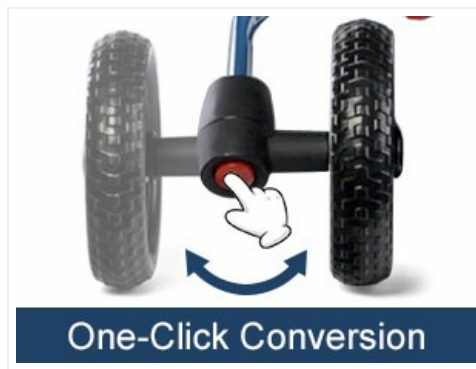


Image 4.2: Detail of the one-click conversion button for easily adjusting the rear wheel configuration between tricycle and balance bike modes.

## 5. ADJUSTMENTS

### 5.1. Seat Height Adjustment

The seat height is adjustable from 15.7 to 18.5 inches (40-47 cm) to accommodate children of varying heights. To adjust, loosen the quick-release clamp located beneath the seat, slide the seat post to the desired height, and firmly re-tighten the clamp. Ensure the seat is level and secure before use.



Image 5.1: Illustration demonstrating the adjustable seat feature, allowing for customization to fit the child's height.

### 5.2. Pedal Attachment and Removal

The pedals can be easily attached or detached to switch between tricycle and balance bike modes. To attach, press the red button on the pedal mechanism and insert the pedal until it locks securely. To remove, press the red button and pull the pedal outwards. Always ensure pedals are fully engaged or removed as intended for the chosen mode.



Image 5.2: Detail showing the detachable pedal mechanism, highlighting the ease of switching between modes.

## 6. CARE AND MAINTENANCE

Regular care and maintenance will extend the life of your Ancaixin tricycle:

- **Cleaning:** Clean the tricycle with a damp cloth and mild soap. Avoid using abrasive cleaners or harsh chemicals, which can damage the finish or components.
- **Inspection:** Periodically check all screws, bolts, and moving parts for tightness and signs of wear. Tighten any loose fasteners.
- **Lubrication:** Apply a small amount of appropriate lubricant to moving parts, such as wheel axles, if they become stiff.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

## 7. TROUBLESHOOTING

---

This section addresses common issues you might encounter with the Ancaixin tricycle:

Issue	Possible Cause	Solution
Pedals detach during use.	Pedals not fully inserted or locked.	Ensure pedals are fully inserted until a click is heard, and the red button is released, locking them in place.
Tricycle feels unstable.	Loose connections or incorrect assembly.	Verify all connections (handlebars, seat, wheels) are securely tightened. Refer to the assembly guide.
Difficulty adjusting seat height.	Seat clamp not sufficiently loosened.	Loosen the quick-release seat clamp completely before attempting to adjust the seat height.

## 8. PRODUCT SPECIFICATIONS

---

Key specifications for the Ancaixin 3-in-1 Toddler Tricycle:

- **Product Dimensions:** 27.5 x 9 x 21.6 inches (72 x 23 x 55 cm)
- **Item Weight:** 10.25 pounds (4.65 kg)
- **Maximum Load Capacity:** 55 lbs (25 kg)
- **Recommended Age:** 24 months and up (2-5 years old)
- **Adjustable Seat Height:** 15.7 to 18.5 inches (40-47 cm)
- **Certifications:** ASTM F963-11, EN71



Image 8.1: Detailed diagram illustrating the dimensions and weight of the tricycle for reference.

## 9. WARRANTY AND CUSTOMER SUPPORT

Ancaixin is committed to product quality and customer satisfaction:

- **Money-Back Guarantee:** This product includes a 30-day money-back assurance from the date of purchase.
- **Warranty:** A 2-year guarantee is provided for manufacturing defects.
- **Customer Service:** Life-time customer service is available for support. For assistance, please refer to your purchase documentation for specific contact details or reach out to the seller through the platform where the product was acquired. When contacting support, please provide your order number for efficient service.