

LogiLink ET0008

LogiLink ET0008 Digital Outdoor Timer User Manual

Model: ET0008 | Brand: LogiLink

INTRODUCTION

Thank you for choosing the LogiLink ET0008 Digital Outdoor Timer. This device is designed to help you save energy by precisely controlling the power supply to your electrical appliances, both indoors and outdoors. With its IP44 rating, it offers protection against water splashes and the ingress of foreign objects larger than 1mm, making it suitable for various environments. This manual provides detailed instructions for setting up, operating, and maintaining your timer to ensure optimal performance and longevity.

SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the timer is correctly installed and connected to a grounded outlet.
- Do not immerse the timer in water or expose it to direct jets of water. While IP44 rated, it is not fully waterproof.
- Do not open the casing of the timer. There are no user-serviceable parts inside.
- Keep out of reach of children.
- Do not overload the timer. Refer to the specifications for maximum load capacity (1800W).
- Unplug the timer from the power outlet before cleaning or when not in use for extended periods.
- If the timer is damaged, do not use it. Contact customer support.

PRODUCT FEATURES

- 1 grounded outlet with enhanced contact protection.
- IP44 protection against water splashes and penetration of foreign objects > 1 mm.
- Digital timer with LCD screen for easy programming.
- Individually programmable with 8 function keys.
- Minimum minute setting: 1 minute.
- Adjustable time: 24 hours / 7 days.

- Up to 20 ON/OFF programs per day.
- Schuko plug for European outlets.
- Power: 230 V AC, 50 Hz, 7.8 A, 1800 W.

PACKAGE CONTENTS

The package should contain the following items:

- 1 x LogiLink ET0008 Digital Outdoor Timer
- 1 x User Manual (this document)



Image: LogiLink ET0008 Digital Outdoor Timer in its clear retail packaging.

SETUP

1. **Initial Power-up:** Plug the LogiLink ET0008 timer into a standard 230V AC, 50Hz wall outlet. The LCD screen should illuminate.



Image: Angled view of the LogiLink ET0008 Digital Outdoor Timer, showing the LCD display and control buttons.

2. **Charging the Internal Battery:** The timer has an internal battery to retain settings during power outages. For first-time use, plug the timer into an outlet for at least 10-15 minutes to charge this battery.
3. **Resetting the Timer:** If the display is erratic or you wish to clear all previous settings, use a pointed object (like a pen tip) to press the recessed **RESET** button. This will clear all programs and reset the clock to default.



Image: Front view of the LogiLink ET0008 Digital Outdoor Timer, highlighting the LCD screen and button layout.

OPERATING INSTRUCTIONS

The LogiLink ET0008 features an LCD screen and 8 function keys for programming.

Button Functions:

- **CLOCK:** Used to set the current time and day.
- **V+/ON:** Increases value or confirms ON setting.
- **A-/AUTO:** Decreases value or sets to AUTO mode.
- **SET:** Enters programming mode or confirms settings.
- **RESET:** Resets all settings (recessed button).
- **OFF/RND:** Sets OFF time or activates Random mode.
- **ON/OFF:** Manual override for ON/OFF state.
- **C.D.:** Activates Countdown function.

Setting the Current Time and Day:

1. Press and hold the **CLOCK** button.
2. While holding **CLOCK**, press **V+** or **A-** to adjust the hour.
3. Release **CLOCK**, then press and hold **CLOCK** again and use **V+** or **A-** to adjust the minute.
4. To set the day, press and hold **CLOCK** and press **ON/OFF** repeatedly until the correct day is displayed.
5. Release all buttons to save the settings.

Programming ON/OFF Times:

The timer allows up to 20 different ON/OFF programs.

1. Press the **SET** button once to enter program mode. The display will show "1 ON".
2. Use **V+** or **A-** to set the desired ON time (hour and minute).
3. Press **SET** again. The display will show "1 OFF".

4. Use **V+** or **A-** to set the desired OFF time (hour and minute).
5. To select the days for this program, press **ON/OFF** repeatedly. You can choose specific days, weekdays, weekends, or all days.
6. Press **SET** to move to the next program ("2 ON") or press **CLOCK** to exit program mode.
7. Repeat for up to 20 programs.

Manual Override and Modes:

- **ON/AUTO/OFF Mode:** Press the **ON/OFF** button repeatedly to cycle through ON (always on), AUTO (follows programs), and OFF (always off) modes. Ensure the timer is in **AUTO** mode for programmed settings to take effect.
- **Random (RND) Function:** Press **OFF/RND** to activate the random function. This will randomly turn the connected appliance ON and OFF within a certain time frame, useful for security purposes when away. Press again to deactivate.
- **Countdown (C.D.) Function:** Press **C.D.** to enter countdown mode. Use **V+** or **A-** to set the desired countdown duration. Press **C.D.** again to start the countdown. The appliance will turn ON or OFF after the set time.



Image: Front view of the LogiLink ET0008 Digital Outdoor Timer with the protective socket cover lifted, revealing the grounded outlet.



Image: The LogiLink ET0008 Digital Outdoor Timer with a black power cable plugged into its outlet, demonstrating its use.

MAINTENANCE

To ensure the longevity and proper functioning of your LogiLink ET0008 Digital Outdoor Timer, follow these maintenance guidelines:

- **Cleaning:** Disconnect the timer from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use abrasive cleaners, solvents, or immerse the unit in water.
- **IP44 Protection:** The IP44 rating protects against splashes and small foreign objects. Ensure the protective cover over the socket is properly closed when not in use or when exposed to outdoor elements to maintain its protection level.
- **Storage:** When not in use for extended periods, store the timer in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your LogiLink ET0008 Digital Outdoor Timer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or not working.	No power, internal battery depleted, or unit malfunction.	Ensure the timer is securely plugged into a live outlet. Plug the timer in for at least 15 minutes to charge the internal battery. If still blank, try pressing the RESET button.
Programs are not running.	Timer is not in AUTO mode, incorrect program settings, or internal battery low.	Press ON/OFF until "AUTO" is displayed on the screen. Review your program settings (ON/OFF times, days) to ensure they are correct. Ensure the internal battery is charged (plug in for 15 mins).

Problem	Possible Cause	Solution
Difficulty setting time/programs (User review: "Too complicated").	Unfamiliarity with button functions or sequence.	Carefully re-read the "Operating Instructions" section, paying attention to button presses and holds. Use the RESET button to clear all settings and start fresh if you get lost. Practice setting a simple ON/OFF program first.
Connected appliance does not turn ON/OFF.	Appliance issue, timer not receiving power, or timer malfunction.	Test the appliance by plugging it directly into a wall outlet. Ensure the timer is receiving power (display is on). Check the timer's mode (ON/AUTO/OFF).

SPECIFICATIONS

Model Number	ET0008
Brand	LogiLink
Manufacturer	2direct GmbH
Product Dimensions (L x W x H)	23 x 11 x 7.5 cm (9.06 x 4.33 x 2.95 inches)
Item Weight	200 Grams (0.44 lbs)
Color	White
Power Input	230 V AC, 50 Hz
Max Load	7.8 A, 1800 W
Protection Rating	IP44 (Splash-proof, protection against solid objects > 1mm)
Programmable Operations	Up to 20 ON/OFF programs
Minimum Setting Time	1 minute
Time Setting Range	24 hours / 7 days
Country of Origin	China
Included Components	1 x Digital Timer IP44 for outdoor use



Image: Back view of the LogiLink ET0008 Digital Outdoor Timer, displaying the product label with specifications and certifications.

WARRANTY AND SUPPORT

LogiLink products are designed for reliability and performance. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official LogiLink website.

For technical support, troubleshooting assistance beyond this manual, or to inquire about spare parts, please contact LogiLink customer service. Contact details can typically be found on the manufacturer's website or on the product packaging.

