

Doro 7080

Doro 7080 User Manual

Comprehensive instructions for your Doro 7080 mobile phone.

INTRODUCTION

Welcome to the user manual for your new Doro 7080 mobile phone. This guide provides detailed instructions on how to set up, operate, maintain, and troubleshoot your device. Please read this manual carefully to ensure optimal performance and longevity of your phone.

The Doro 7080 is designed with ease of use in mind, featuring a large display, clear buttons, and essential functions for communication. It supports 4G connectivity, Wi-Fi, and includes a 5MP camera.

IMPORTANT SAFETY INFORMATION

- Always follow local regulations for mobile phone usage, especially in hospitals, aircraft, or near medical devices.
- Do not expose the phone to extreme temperatures, direct sunlight, or excessive moisture.
- Use only Doro-approved batteries, chargers, and accessories.
- Avoid dropping or subjecting the phone to severe impact.
- Keep the phone and its accessories out of reach of small children.

SETUP GUIDE

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Doro 7080 Mobile Phone
- Charging Cradle
- Battery
- USB Cable
- Power Adapter
- Quick Start Guide





Figure 1: Doro 7080 phone placed in its charging cradle, showing the external display with time and battery status.

2. Inserting the SIM Card and Battery

1. Open the battery cover on the back of the phone.
2. Insert the Nano SIM card into the designated slot with the gold contacts facing down. Ensure it clicks into place.
3. Place the battery into the battery compartment, aligning the contacts.
4. Replace the battery cover, ensuring it is securely closed.





Figure 2: The Doro 7080 phone in an open position, revealing the internal screen and keypad. Various icons around the phone highlight its features, including WhatsApp, Facebook, Wi-Fi, 4G, GPS, Nano SIM support, a 5MP camera, favorite contacts, a 2-year warranty, internet access, email, and financial applications.

3. Charging the Battery

Before first use, fully charge the phone's battery. Connect the USB cable to the charging cradle and the power adapter, then plug the adapter into a wall outlet. Place the phone in the cradle. The charging indicator will illuminate.



Figure 3: A composite image displaying three different views of the Doro 7080 phone. The first view shows the phone resting in its charging cradle, displaying the external screen. The second view is a side profile, highlighting the charging port and headphone jack. The third view shows the back of the phone, featuring the camera lens and speaker grille.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on: Press and hold the red End Call/Power button until the screen lights up.
- To power off: Press and hold the red End Call/Power button, then select "Power off" from the options.

2. Making and Receiving Calls

- **Making a call:** Dial the number using the keypad and press the green Call button.
- **Receiving a call:** Press the green Call button when the phone rings.
- **Ending a call:** Press the red End Call button.



Figure 4: The Doro 7080 phone's external display showing an incoming call notification with the text "Call Anne".

3. Sending and Receiving Messages

Navigate to the 'Messages' menu from the main screen. Select 'New message' to compose an SMS or MMS. Enter the recipient's number and your message. Press 'Send'.

4. Camera Usage

The Doro 7080 features a 5-megapixel camera. To access the camera, open the phone and navigate to the 'Camera' application. Use the central 'OK' button to take a photo.





Figure 5: The Doro 7080 phone in its closed, red casing, displaying the external screen with the current time and battery level. The 5-megapixel camera lens is visible just above the external display.

5. Internet and Applications

The Doro 7080 supports 4G and Wi-Fi connectivity, allowing access to the internet and pre-installed applications like WhatsApp and Facebook. Navigate to the 'Internet' or 'Applications' menu to access these features.



Figure 6: Icons representing pre-installed applications such as WhatsApp and Facebook, indicating the phone's smart features.

Maintenance and Care

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid overcharging and allow the battery to discharge periodically. Store the phone in a cool, dry place when not in use for extended periods.
- **Software Updates:** Periodically check for software updates to ensure optimal performance and security. Updates can usually be found in the phone's settings menu.



Figure 7: An image of the Doro 7080's removable battery, emphasizing proper battery handling for maintenance.

Troubleshooting

Problem	Possible Cause	Solution
Phone does not turn on	Low battery; Battery not inserted correctly	Charge the battery; Re-insert battery securely
Cannot make/receive calls	No network signal; SIM card issue	Move to an area with better signal; Check SIM card insertion
Poor sound quality	Volume too low; Speaker/microphone blocked	Adjust volume; Clean speaker/microphone openings
Phone freezes/slows down	Too many applications open; Low memory	Restart the phone; Close unused applications

Technical Specifications

- **Model:** Doro 7080
- **Color:** Red/White
- **Display Size:** 2.8 inches
- **Display Resolution:** 320 x 240 pixels
- **Camera:** 5 Megapixels
- **Connectivity:** 2G, 3G, 4G Cellular, Wi-Fi, Bluetooth
- **SIM Card Type:** Nano SIM (Single SIM slot)
- **Internal Storage:** 4 GB

WARRANTY AND SUPPORT

The Doro 7080 comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact Doro customer service. Contact information can typically be found on the Doro official website or in the quick start guide included with your product.

For more information, visit the official Doro website: www.doro.com

