

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER BDXHHV005G 3-in-1 Ultra Lightweight Stick Vacuum Instruction Manual

BLACK+DECKER BDXHHV005G

BLACK+DECKER BDXHHV005G 3-in-1 Ultra Lightweight Stick Vacuum Instruction Manual

Model: BDXHHV005G

1. INTRODUCTION

The BLACK+DECKER BDXHHV005G is a versatile 3-in-1 vacuum cleaner designed for efficient and convenient cleaning of various surfaces. Its ultra-lightweight design allows for easy maneuverability, transforming seamlessly from an upright stick vacuum to a detachable handheld unit for targeted cleaning. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance of your new vacuum.



Image: The BLACK+DECKER 3-in-1 Ultra Lightweight Stick Vacuum shown with its main unit, stick handle, floor head, crevice tool, small brush attachment, and washable HEPA filter.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read and understand all instructions before using this appliance.

- Always unplug the vacuum cleaner from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors. Put away after use to prevent accidents.

3. PACKAGE CONTENTS

Your BLACK+DECKER 3-in-1 Vacuum package should include the following items:

- Main Vacuum Unit (Handheld)
- Extension Wand/Handle
- Floor Head Attachment
- Crevice Tool
- Small Brush Attachment
- Washable HEPA Filter (pre-installed)



Image: All components of the vacuum laid out, including the main unit, extension wand, floor head, crevice tool, small brush, and filter.

4. ASSEMBLY

Your BLACK+DECKER 3-in-1 Vacuum is designed for quick and easy assembly. Follow these steps to set up your vacuum:

1. **Attach the Floor Head:** Align the floor head with the main vacuum unit's suction opening. Push firmly until it clicks securely into place.
2. **Attach the Extension Wand:** Insert the bottom end of the extension wand into the top of the main vacuum unit. Ensure it clicks firmly into place.
3. **Attach the Handle:** Slide the handle onto the top of the extension wand until it is secure.

To convert to handheld mode, simply press the release button on the main unit and detach it from the extension

wand and floor head.

Powerful Motor with Unlimited Runtime



Image: A visual representation of the vacuum in its upright, handheld, and stair vacuum configurations, demonstrating its 3-in-1 versatility.

5. OPERATING INSTRUCTIONS

5.1 General Operation

- Ensure the dustbin and filter are properly installed before use.
- Plug the power cord into a suitable electrical outlet.
- Press the power button located on the handle to turn the vacuum on/off.

5.2 Stick Vacuum Mode

For general floor cleaning, use the vacuum in its upright stick mode. The swivel base allows for easy navigation

around furniture and obstacles.

Includes Crevice Attachment



Image: A person using the stick vacuum on a hardwood floor, showcasing its ability to maneuver under furniture with swivel steering.

Washable HEPA Filter



Image: A person operating the stick vacuum on a carpeted floor, highlighting its powerful motor for various surfaces.

Video: BLACK+DECKER 3-In-1 Upright, Stick & Handheld Vacuum Cleaner Overview

Your browser does not support the video tag.

Description: This video provides a comprehensive overview of the BLACK+DECKER 3-in-1 vacuum, demonstrating its functionality as an upright, stick, and handheld cleaner, highlighting its versatility and ease of use for various cleaning tasks around the home.

5.3 Handheld Vacuum Mode

For quick clean-ups, stairs, or hard-to-reach areas, detach the main unit to use it as a handheld vacuum.

Large, Easy-to-Empty Dustbin



Image: A person using the detachable handheld vacuum to clean crumbs from a couch, illustrating its convenience for spot cleaning.

Includes Small Brush Attachment



Image: A person cleaning stairs with the handheld vacuum attached to the floor head, showing its utility for stair cleaning.

5.4 Using Attachments

The included attachments enhance the vacuum's versatility:

- **Crevice Tool:** Ideal for narrow spaces, corners, and between cushions.
- **Small Brush Attachment:** Perfect for dusting delicate surfaces, upholstery, and vents.



Image: The handheld vacuum with the crevice tool attached, being used to clean tight spaces between couch cushions.



Image: The handheld vacuum with the small brush attachment, used for cleaning dust from window blinds.

6. MAINTENANCE

Regular maintenance ensures your vacuum operates efficiently and prolongs its lifespan.

6.1 Emptying the Dustbin

Empty the dustbin regularly, ideally after each use or when debris reaches the "MAX" fill line.

1. Ensure the vacuum is unplugged.
2. Locate the dustbin release button on the main unit.
3. Press the button and carefully detach the dustbin.
4. Hold the dustbin over a trash can and open the bottom flap to empty debris.
5. Close the flap and reattach the dustbin to the main unit until it clicks securely.



Image: A person demonstrating how to easily empty the large dustbin of the vacuum into a trash can.

6.2 Cleaning the Washable HEPA Filter

The HEPA filter is washable and should be cleaned periodically to maintain suction power. It is recommended to replace the filter every 6 to 9 months, depending on usage and household conditions.

1. Ensure the vacuum is unplugged and the dustbin is removed.
2. Twist and pull the HEPA filter out of the dustbin.
3. Tap the filter gently over a trash can to remove loose debris.
4. Rinse the filter under cool, running water until the water runs clear. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dustbin. Ensure it is completely dry to prevent mold or mildew.



Image: A person washing the orange and white HEPA filter under a kitchen faucet, demonstrating the washable feature.

7. TROUBLESHOOTING

If you encounter issues with your vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; Power outlet not working; Power button not pressed.	Ensure plug is fully inserted; Check outlet with another appliance; Press power button firmly.
Poor suction.	Dustbin full; Filter clogged; Blockage in nozzle/hose.	Empty dustbin; Clean/replace filter; Remove any blockages.

Problem	Possible Cause	Solution
Vacuum overheats and shuts off.	Clogged filter/dustbin; Motor overload.	Empty dustbin and clean filter. Allow vacuum to cool down for at least 30 minutes before restarting.
Does not pick up large debris on carpet.	Designed for hard floors and small area rugs.	This vacuum is optimized for hard floors and light debris on low-pile carpets/rugs. For thick carpets, a more powerful vacuum may be required.
Air vents blow debris away.	Normal operation for side vents.	Adjust vacuuming angle or use handheld mode for concentrated areas.

8. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	BDXHHV005G
Special Feature	Lightweight, HEPA Filter, 3-in-1 Versatility
Filter Type	Cloth (Washable HEPA)
Power Source	Corded Electric
Wattage	480 watts
Capacity	0.2 Gallons
Product Dimensions	6"L x 3"W x 26"H
Item Weight	3.6 pounds
Noise Level	84 dB
Included Components	Handheld vac, crevice tool, washable HEPA filter, small brush attachment

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official BLACK+DECKER website or contact their customer service. Keep your purchase receipt as proof of purchase for any warranty claims. Visit the [BLACK+DECKER Store](#) for more products and information.

