



Manuals.plus /

› Whirlpool /

› Whirlpool WIS7030PEF Fully Integrated Dishwasher User Manual

## Whirlpool WIS7030PEF

# Whirlpool WIS7030PEF Fully Integrated Dishwasher User Manual

Model: WIS7030PEF

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool WIS7030PEF fully integrated dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Sharp items should be loaded with points down to prevent injury.

## PRODUCT OVERVIEW

---

The Whirlpool WIS7030PEF is a 60cm fully integrated dishwasher designed for seamless integration into your kitchen cabinetry. It offers a capacity of 14 place settings and operates at a quiet 43 dB.



Figure 1: Front view of the Whirlpool WIS7030PEF fully integrated dishwasher. The control panel is visible at the top edge of the door, with the interior racks partially shown.

### Key Features:

- 14 Place Settings capacity.
- Low noise level of 43 dB for quiet operation.
- Fully integrated design for a sleek kitchen aesthetic.
- Efficient washing and drying performance.

### INSTALLATION AND SETUP

Installation of the Whirlpool WIS7030PEF dishwasher should be performed by a qualified technician to ensure proper functioning and safety. Refer to the detailed installation guide provided separately with the appliance for specific instructions.

### General Steps:

1. **Unpacking:** Carefully remove all packaging materials.

2. **Positioning:** Place the dishwasher in its intended cabinet opening, ensuring it is level.
3. **Water Connection:** Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain.
4. **Electrical Connection:** Connect the appliance to a grounded electrical outlet.
5. **Cabinet Door Installation:** Attach the custom cabinet door panel to the dishwasher door.
6. **First Use:** Before first use, ensure salt and rinse aid dispensers are filled according to the operating instructions.

## OPERATING INSTRUCTIONS

---

To achieve optimal cleaning results and ensure the longevity of your dishwasher, follow these operating guidelines.

### Loading the Dishwasher:

- Scrape off large food particles from dishes.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Ensure that spray arms can rotate freely and are not blocked by dishes.
- Load cutlery into the cutlery basket with handles down for most items, but sharp knives with points down.

### Adding Detergent and Rinse Aid:

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser when necessary.

### Selecting a Wash Program:

The control panel, located on the top edge of the door, allows you to select various wash programs. Refer to the program chart in your full manual for detailed descriptions of each cycle.

1. Close the dishwasher door.
2. Press the Power button to turn on the appliance.
3. Select your desired wash program using the program selection buttons.
4. Press the Start button to begin the cycle.

*Note: Some models feature an automatic door opening at the end of the cycle to improve drying performance.*

## CARE AND MAINTENANCE

---

Regular cleaning and maintenance will help keep your dishwasher performing optimally and extend its lifespan.

### Cleaning the Filters:

- Regularly check and clean the filter assembly at the bottom of the dishwasher.
- Remove food debris and rinse the filters under running water.
- Reassemble the filters correctly before operating the dishwasher.

### Cleaning the Spray Arms:

- Periodically remove the spray arms and clean the nozzles to prevent blockages.

### Exterior and Interior Cleaning:

- Wipe the exterior with a soft, damp cloth.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and water to remove limescale and odors.

## TROUBLESHOOTING

---

Before contacting customer service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, add more detergent.
Water not draining	Clogged drain hose or filter, drain pump issue.	Clean filters, check drain hose for kinks or blockages.
Excessive noise	Dishes rattling, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

## TECHNICAL SPECIFICATIONS

---

Below are the key technical specifications for the Whirlpool WIS7030PEF dishwasher:

**Model Number:** WIS7030PEF

**Built-in Dimensions (H x W x D):** Approximately 82 cm x 60 cm x 56 cm (as per energy label)

**Overall Product Dimensions:** 68 cm (Depth) x 62 cm (Width) x 92 cm (Height)

**Capacity:** 14 Place Settings

**Noise Level:** 43 dB

**Weight:** 38 kg

**Energy Efficiency Class:** D (New EU Label)

**Water Consumption per Cycle (Eco):** 9.5 Liters

**Energy Consumption per 100 Cycles (Eco):** 85 kWh

**Program Duration (Eco):** 3 hours 10 minutes

Fiche d'information sur le produit - (UE) 2019/2017				
Nom du fournisseur ou marque commerciale: Whirlpool				
Adresse du fournisseur: VIA CARLO PISACANE, 1 20016 PERO (MI) ITALY				
Référence du modèle: WIS 7030 PEF				
Paramètres généraux du produit:				
Paramètre	Valeur	Paramètre	Valeur	
Capacité nominale [ps]	14	Dimensions en cm	Hauteur	82
			Largeur	60
			Profondeur	56
IEE	49,9	Classe d'efficacité énergétique	D	
Indice de performance de lavage	1,13	Indice de performance de séchage	1,07	
Consommation d'énergie en kWh [par cycle], sur la base du programme éco avec alimentation en eau froide. La consommation réelle d'énergie dépend des conditions d'utilisation de l'appareil.	0,848	Consommation d'eau en litres [par cycle], sur la base du programme éco. La consommation d'eau réelle dépend des conditions d'utilisation de l'appareil et de la dureté de l'eau.	9,5	
Durée du programme (h:min)	3:10	Type	Encastrable	
Émissions de bruit acoustique dans l'air (dB(A) re 1 pW)	43	Classe d'émissions de bruit acoustique dans l'air	B	
Mode arrêt (W)	-	Mode veille (W)	0,50	
Démarrage différé (W) (le cas échéant)	4,00	Mode veille avec maintien de la connexion au réseau (W) (le cas échéant)	-	
Durée minimale de la garantie offerte par le fournisseur: 24mois				
Informations supplémentaires:				
Lien internet vers le site web du fabricant où se trouvent les informations visées au point 6 a) de l'annexe du règlement				

Figure 2: Technical data sheet providing detailed specifications for the dishwasher.

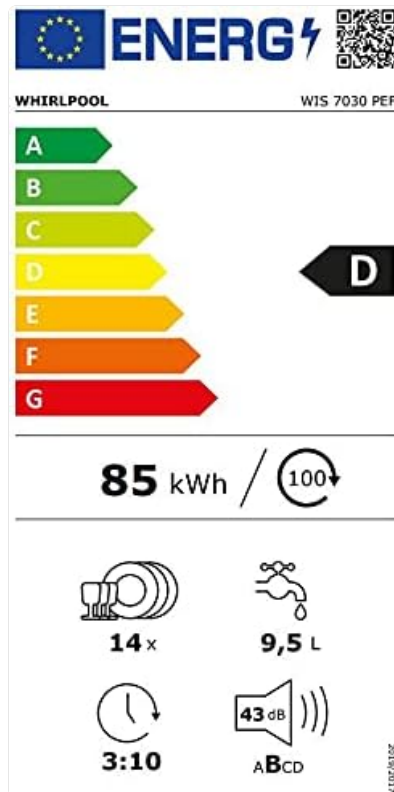


Figure 3: EU Energy Label for the Whirlpool WIS7030PEF dishwasher, indicating its energy consumption and performance ratings.

## WARRANTY AND SUPPORT

Your Whirlpool WIS7030PEF dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions. For technical support, spare parts, or service requests, please contact Whirlpool customer service or visit the official Whirlpool website.

**Whirlpool Customer Service:** Visit Whirlpool Support

