

[Manuals.plus](#) /

› [uehba](#) /

› User Manual for RC-799M Replacement Remote Control

uehba RC-799M

User Manual for RC-799M Replacement Remote Control

Model: RC-799M | Brand: uehba

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your uehba RC-799M Replacement Remote Control. This remote is designed to function as a direct replacement for the original RC-799M remote, compatible with a range of Onkyo A/V AV Receivers. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SETUP

Battery Installation

The remote control requires two (2) 1.5V AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert the two AA batteries.

Initial Use

This replacement remote control is pre-programmed and does not require any setup or pairing. Once batteries are installed, it is ready for immediate use with compatible Onkyo A/V receivers. Simply point the remote at your receiver and begin operation.

OPERATING INSTRUCTIONS

Basic Operation

To operate your Onkyo A/V receiver, point the RC-799M remote control directly at the receiver's infrared sensor. Press the desired function button. Ensure there are no obstructions between the remote and the receiver.



Image: Front view of the RC-799M remote control, displaying the layout of all control buttons.

Compatible Models

This remote control is compatible with the following Onkyo A/V AV Receiver models:

- HT-R391
- HT-R558
- HT-R590
- HT-R591
- HT-RC330
- HT-RC430
- HT-S3500
- HT-S5400
- HTS-5500
- TX-SR309
- TX-SR313
- HT-R560

Key Functions

The remote features standard controls for A/V receiver functions, including power, input selection, volume control, menu navigation, and playback controls. Please refer to the button labels on the remote for specific functions. *Note: This replacement remote may not include a dedicated mute button, which might differ from some original Onkyo remotes.*



Image: A hand holding the remote control, providing a sense of its size and ergonomic feel.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Drops:** Protect the remote from physical shocks and drops, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote is not responding.	• Check if the batteries are inserted correctly with the correct polarity (+/-). • Replace old or depleted batteries with new ones. • Ensure there are no obstructions between the remote and the receiver's IR sensor. • Make sure you are within the effective range of the receiver.
Certain buttons do not work.	• Ensure the remote is pointed directly at the receiver. • Verify that the function you are trying to use is supported by your specific Onkyo receiver model. • Clean the remote's surface, especially around the buttons, to remove any debris.
Remote works intermittently.	• Batteries may be low; replace them. • Ensure a clear line of sight to the receiver. • Avoid strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.

If the problem persists after attempting these solutions, please contact customer support for further assistance.

SPECIFICATIONS

Model	RC-799M
Brand	uehba
Product Dimensions	7.64 x 2.13 x 0.79 inches
Item Weight	3.17 ounces
Batteries Required	2 x AA (not included)
Color	Black
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (specific Onkyo A/V receivers)
Compatible Devices	Onkyo Home Theater A/V Receivers (listed above)

WARRANTY AND SUPPORT

This product is designed for reliable performance. While specific warranty details are not provided in this manual, for any questions, concerns, or issues regarding your RC-799M replacement remote control, please contact the seller directly through

your purchase platform. They will be able to provide assistance and support for your product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08R44FHJX>

More documents and user manuals: <https://manuals.plus/>