

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EROMMY](#) /

› [EROMMY Adjustable Reclining Accent Lounge Chair User Manual](#)

EROMMY Accent Chair

EROMMY Adjustable Reclining Accent Lounge Chair User Manual

Model: Accent Chair (B08R5DL97K)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of the chair.
- Keep children and pets away from the assembly area.
- Use the chair only for its intended purpose as a lounge chair.

2. PACKAGE CONTENTS

Verify that all components are included in your package:

- Chair Backrest
- Chair Seat with Retractable Footrest Mechanism
- Left Armrest
- Right Armrest
- Left Leg Frame
- Right Leg Frame
- Hardware Pack (screws, bolts, washers, Allen wrench)
- User Manual

3. ASSEMBLY INSTRUCTIONS

Assembly of this lounge chair is designed to be straightforward and can be completed in a few minutes. All parts are labeled, and necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, flat surface to prevent damage.

2. **Attach Leg Frames:** Connect the left and right leg frames to the chair seat using the provided hardware. Ensure the frames are oriented correctly as per the diagrams in the included physical manual.
3. **Secure Backrest:** Attach the chair backrest to the seat and leg frame assembly. Align the pre-drilled holes and secure with bolts. Ensure the fabric does not obstruct any bolt holes; gently clear if necessary.
4. **Install Armrests:** Fasten the wooden armrests to the side frames of the chair. Make sure they are firmly attached.
5. **Final Tightening:** Once all components are loosely assembled, go back and tighten all screws and bolts securely with the provided Allen wrench. Do not overtighten.



The EROMMY Accent Lounge Chair, fully assembled, showcasing its grey fabric, wooden armrests, and black metal frame, with the footrest extended.



A diagram illustrating the chair's dimensions: 19.5 inches back width, 23.6 inches seat width, 36.2 inches total height, 21.5 inches seat height, 19.7 inches seat depth, and 33.9 inches total depth with footrest extended.

4. OPERATING INSTRUCTIONS

The EROMMY Accent Lounge Chair features adjustable components for personalized comfort.


4.1 Backrest Adjustment

The chair's backrest offers five adjustable angles, allowing you to customize your seating position for various activities such as reading, watching television, or resting. To adjust, gently lean back or forward while applying slight pressure to the backrest until it clicks into your desired position.



Backrest 5-Level Adjustment

Suitable for use in different situations: reading, sleeping resting, can let you find a comfortable angle

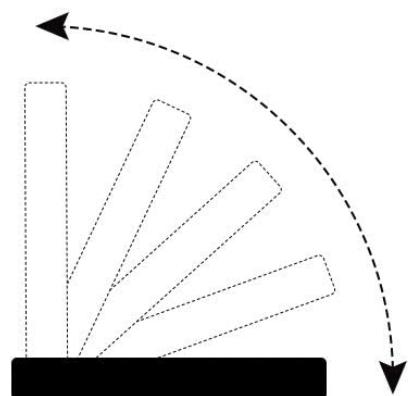


The chair's backrest can be adjusted to five different angles, suitable for various activities like reading, sleeping, or resting. An illustration demonstrates the range of motion.

4.2 Retractable Footrest

The integrated retractable footrest provides additional leg support and comfort. To extend the footrest, pull it outwards from beneath the seat. To retract, push it back inwards until it is fully stored under the seat. The footrest can be adjusted to accommodate different user heights.

ERGONOMIC DESIGN

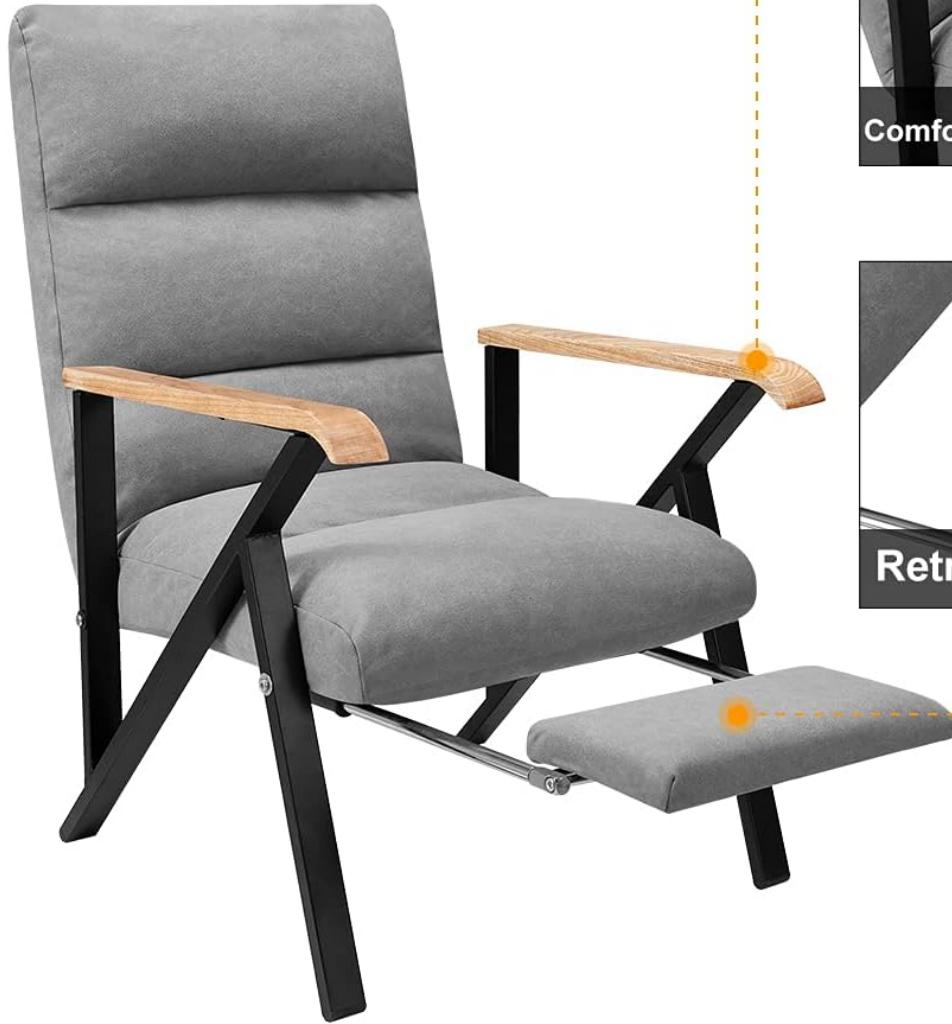

Comfortable Wooden Armrest



Retractable Footrest

This image details the ergonomic design, featuring comfortable wooden armrests and the retractable footrest, which can be adjusted for leg support.

4.3 Ergonomic Design

The chair is designed with an ergonomic structure, including an adjustable headrest, to provide optimal support for the head, neck, and lumbar region. This design aims to enhance comfort during prolonged sitting.

5. MAINTENANCE

Proper care and maintenance will extend the life of your EROMMY Accent Lounge Chair.

- **Cleaning Fabric:** For general cleaning, use a soft cloth or brush to remove dust and loose debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner according to the product instructions, testing on an inconspicuous area first.
- **Cleaning Metal Frame:** Wipe the metal frame with a damp cloth and mild soap. Dry thoroughly to prevent rust.
- **Wooden Armrests:** Wipe with a soft, damp cloth. Avoid harsh chemicals that may damage the wood finish.

- **Hardware Check:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability and safety.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading and material degradation.



Details of the chair's construction, including the comfortable and breathable technical fabric, excellent sponge padding, sturdy metal frame, and protective floor mats to prevent floor damage.

6. TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common problems and solutions:

- **Chair feels unstable or wobbly:**

Solution: Ensure all bolts and screws are securely tightened. Check that the leg frames are correctly installed and on a flat surface.

- **Difficulty adjusting backrest or footrest:**

Solution: Ensure there are no obstructions in the adjustment mechanisms. Apply gentle, even pressure when adjusting. If the mechanism feels stiff, check for any debris or misalignment.

- **Discomfort when sitting:**

Solution: Verify that the chair was assembled correctly and no internal components are misaligned or exposed.

Ensure the backrest and footrest are adjusted to a comfortable position.

- **Missing parts or damaged components:**

Solution: Do not proceed with assembly. Contact EROMMY customer support immediately for assistance and replacement parts.

7. SPECIFICATIONS

Feature	Detail
Brand	EROMMY
Model	Accent Chair
Color	Grey
Product Dimensions (D x W x H)	23.6"D x 19.7"W x 36.2"H
Material	Alloy Steel, Metal, Technical Cloth Fabric
Special Features	Adjustable backrest (5 levels), Retractable footrest
Recommended Uses	Reading, Resting
Room Type	Bedroom, Living Room
Indoor/Outdoor Usage	Indoor
Form Factor	Ergonomic

8. WARRANTY INFORMATION

Specific warranty details for the EROMMY Accent Lounge Chair are typically provided with the product packaging or can be obtained directly from the manufacturer. Please refer to the documentation included with your purchase for comprehensive warranty terms and conditions.

9. CUSTOMER SUPPORT

For further assistance, questions, or to report missing/damaged parts, please contact EROMMY customer service. You may also visit the official EROMMY store for more product information and support resources.

EROMMY Official Store: <https://www.amazon.com/stores/EROMMY/page/59E006BB-C7D3-4B77-B450-F95396D2E20A>