



Manuals.plus /

› Westpoint /

› Westpoint Front Loading Washer Dryer WDMT-81420E User Manual

## Westpoint WDMT-81420E

# Westpoint Front Loading Washer Dryer WDMT-81420E User Manual

Model: WDMT-81420E

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Westpoint Front Loading Washer Dryer, model WDMT-81420E. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1: Westpoint WDMT-81420E Washer Dryer highlighting Super Silent Technology, Inverter Compressor, Anti-Vibration Side Panel, and Delayed Start 24H features.

The Westpoint WDMT-81420E is a versatile appliance designed for both washing and drying, offering an 8 kg washing capacity and a 5 kg drying capacity. It features a 1400 RPM spin speed and 12 washing programs, along with 4 drying programs, to cater to various fabric types and laundry needs.

## 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.

## 3. SETUP AND INSTALLATION

---

Proper installation is crucial for the optimal performance and longevity of your washer dryer.

### 3.1 Unpacking

- Carefully remove all packaging materials.
- Remove all transit bolts from the rear of the machine. These bolts are designed to secure the drum during transport and must be removed before use.
- Keep packaging materials out of reach of children.

### 3.2 Location

- Place the appliance on a firm, level floor.
- Ensure there is adequate space around the machine for ventilation and access. Dimensions are approximately 85 cm (Height) x 59.5 cm (Width) x 56 cm (Depth).
- Avoid direct sunlight or extreme temperatures.

### 3.3 Leveling the Appliance

The appliance must be perfectly level to prevent excessive vibration and noise during operation. Use the adjustable feet at the bottom of the machine to achieve this.

1. Use a spirit level to check the machine's stability.
2. Adjust the feet by turning them clockwise or counter-clockwise until the machine is stable and level.
3. Tighten the lock nuts on the adjustable feet to secure them in position.

### 3.4 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. Note: The appliance does not come with all necessary pipes and accessories; these may need to be purchased separately.
- Plug the power cord into a grounded electrical outlet. The appliance operates on 220-240V, 50Hz power

supply with a maximum power of 2000W.



Image 2: Front view of the Westpoint WDMT-81420E Washer Dryer, showing its sleek design and front-loading door.

## 4. OPERATING INSTRUCTIONS

Your Westpoint WDMT-81420E washer dryer is equipped with an intuitive LED display and control panel for easy operation.

### 4.1 Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine; respect the maximum capacities of 8 kg for washing and 5 kg for drying.
- Close the door firmly until it clicks.

## LARGE DRUM



56L VOLUME



Image 3: Close-up view of the large 56-liter stainless steel drum of the Westpoint WDMT-81420E, designed for efficient washing and drying.

### 4.2 Adding Detergent and Softener

- Pull out the detergent drawer located on the top left of the control panel.
- Add appropriate amounts of detergent to the main wash compartment and softener to the designated compartment.
- Push the drawer back in gently.

### 4.3 Selecting a Program

Turn the program selector dial to choose one of the 12 washing programs or 4 drying programs.

# 12 WASHING PROGRAMS



 **WESTPOINT**<sup>®</sup>

Image 4: Control dial illustrating the 12 available washing programs: Underwear, Jeans, Quick 15', Intensive, Spin, Rinse + Spin, Mix, Cotton, Synthetics, Wool, Down Jacket, and Allergy Care.

## 4 DRYING PROGRAMS



Super  
Dryer



Dryer



Deodorize



Anti-Milte



Image 5: Control dial illustrating the 4 available drying programs: Super Dryer, Dryer, Deodorize, and Anti-Milte.

### Washing Programs:

- **Cotton:** For cotton items.
- **Synthetics:** For synthetic fabrics.
- **Mix:** For mixed loads.
- **Daily Laundry:** General everyday wash.
- **Underwear:** Gentle wash for delicate undergarments.
- **Jeans:** Specific program for denim.
- **Quick 15':** Fast wash for lightly soiled items.
- **Intensive:** For heavily soiled items.
- **Spin:** Drains water and spins clothes.
- **Rinse + Spin:** Rinses and spins clothes.
- **Wool:** Gentle program for woolens.
- **Down Jacket:** Specialized program for down-filled items.
- **Allergy Care:** For enhanced hygiene, suitable for allergy sufferers.

## Drying Programs:

- **Super Dryer:** For thorough drying.
- **Dryer:** Standard drying cycle.
- **Deodorize:** Refreshes clothes without washing.
- **Anti-Milte:** Helps reduce mites in fabrics.

## 4.4 Additional Functions

- **Delay Start:** Set a time for the wash/dry cycle to begin later.
- **Remaining Time:** The LED display shows the estimated time left for the current cycle.
- **Quick Wash:** Reduces the duration of selected wash programs.

## 4.5 Starting and Pausing a Program

- Press the Start/Pause button to begin the selected program.
- Press the Start/Pause button again to temporarily stop the program. Press it once more to resume.



**INVERTER TECHNOLOGY**

- LOW ENERGY CONSUMPTION
- LOW NOISE
- SAVE ENERGY
- SAVE MONEY

**WESTPOINT®**

Image 6: The Westpoint WDMT-81420E Washer Dryer highlighting Inverter Technology, which contributes to low energy consumption, low noise, and overall energy and cost savings.

## 5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your appliance.

### 5.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

### 5.2 Cleaning the Detergent Drawer

The self-cleaning detergent tray helps maintain hygiene, but occasional manual cleaning is recommended.

1. Pull out the detergent drawer completely.
2. Rinse it under running water to remove any detergent residue.
3. Clean the drawer housing with a brush if necessary.
4. Reinsert the drawer.

**EASY & GENTLER THAN  
HAND WASHING**

**WESTPOINT**

**SELF CLEANING DETERGENT TRAY**

**NO DAMAGE TO CLOTHES**

**NO CHANGE IN DIMENSION OF FABRIC**

**NO CHANGE IN SMOOTHNESS OF FABRIC**

**WESTPOINT®**

Image 7: The Westpoint WDMT-81420E Washer Dryer highlighting features like the self-cleaning detergent tray and gentle

fabric care, ensuring no damage, dimension change, or smoothness alteration to clothes.

### 5.3 Cleaning the Drum

The stainless steel drum is designed for durability. For optimal hygiene, run a maintenance wash cycle (e.g., a hot wash without laundry) periodically.

### 5.4 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages and ensure efficient draining.

1. Locate the filter cover at the bottom front of the machine.
2. Open the cover and place a shallow container underneath to catch any residual water.
3. Unscrew the filter slowly and allow water to drain.
4. Remove any lint, debris, or foreign objects from the filter.
5. Clean the filter under running water.
6. Screw the filter back in tightly and close the cover.

## 6. TROUBLESHOOTING

---

Before contacting customer service, please refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Excessive vibration/noise	Machine not level; transit bolts not removed; uneven load.	Adjust adjustable feet; ensure transit bolts are removed; redistribute laundry evenly.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Check drain hose for obstructions; clean the drain filter.
Drying not effective	Overloaded dryer; incorrect drying program selected.	Reduce load size; select an appropriate drying program for the fabric type.
Water leakage	Loose hose connections; damaged hose; clogged drain filter.	Check all hose connections; inspect hoses for damage; clean drain filter.

If the problem persists after attempting these solutions, please contact qualified service personnel.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the Westpoint WDMT-81420E Washer Dryer.

Feature	Specification
Model Number	WDMT-81420E
Type	Front Loading Washer Dryer
Washing Capacity	8 kg
Drying Capacity	5 kg
Spin Speed	1400 RPM
Washing Programs	12
Drying Programs	4
Drum Volume	56 liters
Power Supply	220-240V, 50Hz
Max Power	2000W
Annual Energy Consumption	1296 kWh
Efficiency Class	B
Dimensions (HxWxD)	85 x 59.5 x 56 cm
Net Weight	63 kg
Gross Weight	65 kg
Inverter Technology	Yes
Finish	Glossy
Control Panel	LED Display
Door	Chrome

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

The Westpoint WDMT-81420E Washer Dryer comes with a **one-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

### 8.2 Customer Support

For technical assistance, service requests, or inquiries regarding your warranty, please contact your retailer or the authorized Westpoint service center in your region. Ensure you have your model number (WDMT-81420E)

and purchase details available when contacting support.

---