

[Manuals.plus](#) /

› [WINFLIKE](#) /

› WINFLIKE BN59-01241A Replacement Voice Remote Control User Manual

WINFLIKE BN59-01241A

WINFLIKE BN59-01241A Replacement Voice Remote Control User Manual

Model: BN59-01241A

INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE BN59-01241A Replacement Voice Remote Control. This remote is designed to be compatible with various Samsung Smart TV models, offering both button control and voice command functionalities via Bluetooth connectivity. Please read this manual carefully to ensure proper setup and operation.





Figure 1: Front view of the WINFLIKE BN59-01241A Remote Control.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Pairing with Your Samsung TV

This remote control uses Bluetooth for connectivity and voice commands. It must be paired with your Samsung TV before use.

- **Automatic Pairing:** In many cases, after inserting batteries, the remote will automatically attempt to pair with your Samsung Smart TV. If successful, a pairing confirmation message may appear on your TV screen.
- **Manual Pairing:** If automatic pairing does not occur, or if you are pairing with a new TV:
 1. Ensure your TV is powered on.
 2. Point the remote control towards the TV.
 3. Press and hold the **Return** button (curved arrow) and the **Play/Pause** button (play and pause symbols) simultaneously for 3-5 seconds.
 4. A pairing icon or message should appear on your TV screen, indicating that the remote is pairing.
 5. Release the buttons once the pairing is successful.

Note: Ensure your TV's Bluetooth function is enabled if you encounter issues with pairing. Refer to your TV's user manual for specific Bluetooth settings.

OPERATING INSTRUCTIONS

The WINFLIKE BN59-01241A remote control features a minimalist design with essential buttons for navigating your Samsung Smart TV.





Figure 2: Button layout of the remote control.

Button Functions:

- **Power Button (Red Circle with Line):** Turns the TV on or off.
- **Microphone Button (Mic Icon):** Activates voice command. Press and hold to speak, then release.
- **123 Button:** Accesses the virtual numeric keypad on the TV screen.
- **EXTRA Button:** Provides access to additional TV functions or information.
- **Directional Pad (Circular):** Navigates menus and selects items.
 - **Center Button:** Confirms selection.
 - **Up/Down/Left/Right:** Moves cursor or selection.
- **Return Button (Curved Arrow):** Returns to the previous screen or menu.
- **Home Button (House Icon):** Accesses the Smart Hub or main menu.
- **Play/Pause Button (Play and Pause Symbols):** Controls media playback.
- **Volume Button (VOL):** Adjusts the TV volume. Press up for louder, down for quieter. Press the center to mute/unmute.
- **Channel Button (CH):** Changes TV channels. Press up for next channel, down for previous. Press the center to display the channel list.

Using Voice Commands:

The remote's voice command feature allows for hands-free control and navigation.

1. Ensure your TV is connected to the internet for optimal voice recognition performance.
2. Press and hold the **Microphone Button**.
3. Speak your command clearly into the remote's microphone. For example, say "Open YouTube," "Change to Channel 5," or "Search for action movies."
4. Release the **Microphone Button** after speaking your command.
5. The TV will process your command and execute the action or display relevant results.

Tip: For first-time voice interaction, your TV may guide you through a brief tutorial. Follow the on-screen prompts.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement:

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both AAA batteries at the same time with new ones.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

Storage:

- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

• Remote not responding:

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the TV.
- Re-pair the remote with the TV following the "Manual Pairing" steps in the Setup section.

• Voice command not working:

- Ensure the remote is properly paired via Bluetooth.
- Verify that your Samsung TV has an active internet connection.
- Speak clearly and hold the Microphone button throughout your command.
- Check your TV's settings for voice recognition or Bixby/Voice Assistant options.

• Limited range or intermittent connection:

- Ensure the remote is within 33 feet (10 meters) of the TV.
- Minimize interference from other wireless devices.
- Re-pair the remote.

- **Specific buttons not working:**

- Clean the remote to ensure no debris is obstructing the buttons.
- If only certain buttons are unresponsive after troubleshooting, the remote may require replacement.

SPECIFICATIONS

Feature	Detail
Brand	WINFLIKE
Model Number	BN59-01241A
Connectivity Technology	Bluetooth
Controller Type	Button Control, Voice Control
Maximum Range	33 Feet (approx. 10 meters)
Batteries Required	2 x AAA (not included)
Compatible Devices	Samsung Televisions (e.g., UN43KU7500F, UN40KU7000FXZA, UN49KU7000F, UN55KU7500F, UN60KS8000F, UN65KS8000F, UN75KS9800F, UN78KS9800, UN88KS9800, and many more listed in product description)
Dimensions (L x W x H)	6" x 2" x 0.5" (approx. 15.24 cm x 5.08 cm x 1.27 cm)
Item Weight	1 Ounce (approx. 28 grams)

WARRANTY INFORMATION

Specific warranty details for the WINFLIKE BN59-01241A Replacement Voice Remote Control are not provided in this manual. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty terms and conditions.

SUPPORT

If you have any questions regarding the remote control, its compatibility, or require further assistance, please contact WINFLIKE customer support. Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.



