

[manuals.plus](#) /

› [Fastrack](#) /

› [Fastrack Street Line Quartz Digital Analog Watch NR68016PP01 User Manual](#)

## Fastrack NR68016PP01

# Fastrack Street Line Quartz Digital Analog Watch - Model NR68016PP01 User Manual

Your guide to setting up, operating, and maintaining your Fastrack watch.

## INTRODUCTION

Welcome to your new Fastrack Street Line Quartz Digital Analog Watch, model NR68016PP01. This timepiece combines the classic appeal of analog timekeeping with the modern functionality of digital features. Designed for durability and versatility, it is a suitable accessory for various daily activities. Key features of your watch include:

- **Hybrid Display:** Combines digital features with analog hands for a dual-time experience.
- **Durable Polyurethane Strap:** Lightweight, strong, and designed for daily use.
- **Multifunctional Utility:** Includes stopwatch, alarm, date, backlight, and more.
- **Water-Resistant Design:** Suitable for everyday adventures and outdoor activities.



Image: Front view of the Fastrack Street Line Quartz Digital Analog Watch, showcasing its hybrid display and black polyurethane strap.

## SETUP

Before using your watch, please familiarize yourself with its buttons and basic functions.



Image: Close-up of the watch face and side, indicating the positions of the 'RESET', 'MODE', 'ST/STP', and 'LIGHT' buttons.

### Button Functions:

- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **RESET Button (Top Left):** Used for resetting values or selecting options during setting.
- **ST/STP Button (Top Right):** Starts/stops functions like the stopwatch or adjusts values during setting.
- **LIGHT Button (Bottom Right):** Activates the backlight for the digital display.
- **Crown (Right Side):** Used to set the analog time.

### Setting Analog Time:

1. Pull the crown out to the first position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog time.

### Setting Digital Time and Date:

1. Press the **MODE** button repeatedly until the digital time display starts flashing (indicating setting mode).

2. Use the **RESET** button to cycle through the settings (seconds, hour, minute, month, date, day).
3. Use the **ST/STP** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

## OPERATING INSTRUCTIONS

---

### Using the Stopwatch:

1. Press the **MODE** button until "ST" or "STOPWATCH" appears on the digital display.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause the stopwatch.
4. To resume, press **ST/STP**. To reset to zero, press **RESET** while the stopwatch is paused.
5. Press **MODE** to return to time display.

### Setting and Using the Alarm:

1. Press the **MODE** button until "AL" or "ALARM" appears on the digital display.
2. Press the **RESET** button to select the hour or minute to set. The selected value will flash.
3. Use the **ST/STP** button to adjust the flashing value.
4. Once the alarm time is set, press **MODE** to exit.
5. To turn the alarm ON/OFF, press **ST/STP** while in alarm mode. An alarm icon will appear/disappear.
6. When the alarm sounds, press any button to stop it.

### Using the Backlight:

Press the **LIGHT** button (bottom right) to illuminate the digital display for a few seconds in low-light conditions.



Image: Side view of the Fastrack Street Line Watch, highlighting the 'LIGHT' button on the bottom right.

## MAINTENANCE

Proper care will ensure the longevity and performance of your Fastrack watch.

### Cleaning Your Watch:

- Wipe the watch case and strap with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

### Water Resistance:

Your watch is designed to be water-resistant. However, it is important to note the following:

- Do not operate any buttons or the crown while the watch is wet or submerged in water.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the water seals.
- Water resistance is not a permanent condition and may decrease over time with normal wear and tear. Have your watch checked periodically by an authorized service center.

## Battery Replacement:

The watch is powered by a Lithium Polymer battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by an authorized Fastrack service center to ensure proper sealing and functionality.



Image: Back view of the Fastrack Street Line Watch, showing the case back where the battery is housed.

## TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Analog hands not moving.	Check if the crown is pushed in completely. Battery may be low or depleted. Seek professional battery replacement.
Digital display is blank or dim.	Battery may be low or depleted. Seek professional battery replacement. Ensure the watch is not in a power-saving mode (if applicable, though not a common feature for this model).

Problem	Possible Cause / Solution
Digital time is incorrect.	Re-set the digital time following the "Setting Digital Time and Date" instructions.
Buttons are unresponsive.	Ensure the watch is dry. Do not operate buttons when wet. Battery may be low. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
<b>Brand</b>	Fastrack
<b>Model Number</b>	NR68016PP01
<b>Model Name</b>	Street Line
<b>Display Type</b>	Analog-Digital
<b>Special Features</b>	Light Up, Second Hand
<b>Power Source</b>	Battery Powered
<b>Battery Type</b>	Lithium Polymer (included)
<b>Product Dimensions</b>	14 x 7 x 10 cm
<b>Item Weight</b>	200 g
<b>Country of Origin</b>	India

## WARRANTY AND SUPPORT

Your Fastrack watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period.

For service, repairs, or further assistance, please contact an authorized Fastrack service center. You can find contact information and service center locations on the official Fastrack website or through your retailer.

*Note: Unauthorized repairs or modifications may void your warranty.*