

[Manuals.plus](#) /

> [Steve Silver](#) /

> Steve Silver Furniture Ottawa Power Lift Chair Recliner with Heat and Massage (Model TT850CW) User Manual

Steve Silver TT850CW

Steve Silver Furniture Ottawa Power Lift Chair Recliner User Manual

Model: TT850CW

INTRODUCTION

Thank you for choosing the Steve Silver Furniture Ottawa Power Lift Chair Recliner. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Keep children and pets away from the chair during operation to prevent injury.
- Do not allow children to play on or with the recliner.
- Keep hands and feet clear of the reclining mechanism to avoid pinching.
- Only use the chair on a level, stable surface.
- Do not stand on the footrest or armrests.
- Unplug the power cord from the outlet before cleaning or servicing the chair.
- Do not expose the chair to excessive moisture or direct sunlight.
- Consult a qualified technician for any repairs or electrical issues.

PACKAGE CONTENTS

Please verify that all components are included in your package:

- Recliner Base
- Backrest

- Armrests (2)
- Power Adapter and Cord
- Remote Control
- User Manual (this document)

SETUP AND ASSEMBLY

Assembly is required for this recliner. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent damage.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding receivers on the recliner base. Slide the backrest down firmly until it locks into place. You should hear a click.
3. **Connect Power:** Locate the power cord and adapter. Connect the adapter to the chair's power input, usually located at the back or underneath the base. Plug the power cord into a standard wall outlet.
4. **Verify Connections:** Ensure all connections are secure before operating the chair.



Image: The Ottawa Power Lift Chair Recliner fully assembled, showcasing its design and color. This image represents the final assembled product.



Image: Diagram illustrating the dimensions of the recliner: 43 inches high, 37 inches deep, and 33.5 inches wide. This helps in planning placement.

OPERATING INSTRUCTIONS

Your Ottawa Power Lift Chair Recliner is equipped with multiple functions for enhanced comfort. All functions are controlled via the wired remote control.

Remote Control Overview



Image: A detailed view of the remote control, highlighting buttons for Heat, Massage (Wave, Standby, Pulse), and Massage Intensity (+/-). This shows the user interface for controlling chair functions.

The remote control features dedicated buttons for lift, recline, heat, and massage functions. Familiarize yourself with the button layout before use.

Power Lift Function

To activate the power lift function, press and hold the **UP** arrow button on the remote. The chair will slowly tilt forward and lift, assisting you in standing up. Release the button to stop at your desired height.



Image: The recliner shown in its elevated, forward-tilting position, demonstrating the power lift function designed to assist users in standing up from the chair.

Recline Mechanism (Lay-Flat, Headrest, Footrest)

To recline, press and hold the **DOWN** arrow button. The footrest will extend, and the backrest will recline. Continue holding to reach the lay-flat position. Release the button to stop at any desired recline angle. The power headrest and footrest adjust simultaneously or independently depending on the model's specific programming.



Image: The recliner fully extended into a reclined position, showing the footrest raised and the backrest lowered for maximum comfort.



Image: A side profile of the recliner in a partially reclined state, illustrating the extension of the footrest and the angle of the backrest.

Heat Function

Press the **HEAT** button on the remote control to activate the heating function. Press again to cycle through heat settings or turn off. The heat function may have an automatic shut-off for safety.

Massage Function

Press the **MASSAGE** button to activate the massage function. Repeated presses will cycle through different massage modes: Wave, Standby, and Pulse. Use the **+**, and **-** buttons to adjust the massage intensity.

USB Charging

A USB charging port is integrated into the chair, typically located on the side of the remote control or within the side pouch. Connect your compatible devices to charge them while relaxing.



Side Pouch
holds Controls,
Remotes,
Magazines,
Tablets or other
items

Image: A close-up of the recliner's side pouch, designed to conveniently store the remote control, magazines, or other small items. The USB port is often located near this area.

MAINTENANCE AND CARE

Proper care will extend the life of your recliner.

- **Cleaning:** For general cleaning, wipe the fabric with a soft, damp cloth. For spills, blot immediately with a clean, dry cloth. Do not use harsh chemicals or abrasive cleaners. Refer to the product care instructions for specific fabric cleaning recommendations.
- **Mechanism:** Periodically check all bolts and screws to ensure they are tight. Do not lubricate the reclining mechanism unless specifically instructed by the manufacturer.
- **Power Cord:** Inspect the power cord regularly for any damage. If damaged, discontinue use and contact customer support.



Image: A magnified view of the recliner's faux leather fabric, showing its texture and finish. This helps in understanding the material for proper cleaning and care.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not operate (no power).	<ul style="list-style-type: none">◦ Power cord not securely plugged in.◦ Outlet not functioning.◦ Power adapter issue.	<ul style="list-style-type: none">◦ Ensure all power connections are firm.◦ Test the outlet with another device.◦ Contact customer support if the adapter is suspected to be faulty.

Problem	Possible Cause	Solution
Reclining mechanism is stuck or noisy.	<ul style="list-style-type: none"> ◦ Obstruction in the mechanism. ◦ Loose hardware. 	<ul style="list-style-type: none"> ◦ Check for any objects obstructing the mechanism. ◦ Ensure all assembly bolts are tightened. ◦ Do not force the mechanism. Contact support if the issue persists.
Heat or massage function not working.	<ul style="list-style-type: none"> ◦ Not properly activated via remote. ◦ Internal wiring issue. 	<ul style="list-style-type: none"> ◦ Ensure the chair is powered on and you are pressing the correct buttons on the remote. ◦ Contact customer support for further assistance.

SPECIFICATIONS

Model Name	Ottawa Power Lift Chair w/ Heat
Model Number	TT850CW
Brand	Steve Silver
Color	Tan/Sand
Product Dimensions (D x W x H)	37"D x 33.5"W x 43"H
Item Weight	109 Pounds
Material	Wood, Faux Leather, Foam, Alloy Steel
Additional Features	Power lift, heat, massage, USB charging, Lay-Flat Recline, Power Headrest/Footrest
Reclining Position Count	3
Required Assembly	Yes
GTIN / UPC	635178308896

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the product description on the retailer's website or contact Steve Silver Furniture customer support directly. Keep your purchase receipt for warranty claims.

If you encounter any issues not covered in this manual or require further assistance, please contact Steve Silver Furniture customer support.

- **Manufacturer:** Steve Silver Company
- **Website:** [Steve Silver Furniture Store](#) (for general information)



