

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UYIKOO](#) /

› [UYIKOO Spy Camera Pen Y8 1080P Instruction Manual](#)

UYIKOO Y8

UYIKOO Spy Camera Pen Y8 1080P Instruction Manual


Model: Y8 | Brand: UYIKOO

INTRODUCTION

The UYIKOO Spy Camera Pen Y8 is a discreet and portable device designed for video, photo, and voice recording. It features 1080P HD video capability, a single-button operation for ease of use, and includes a 32GB Micro SD card for storage. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device.



Utilisation d'un Seul Bouton

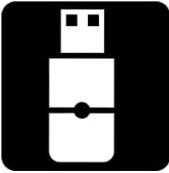

Plug and Play



Prendre des Photos



Enregistrer la Vidéo



Enregistreur Vocal



Image: The UYIKOO Spy Camera Pen Y8, illustrating its core functionalities: one-button control, plug-and-play connectivity, photo capture, video recording, and voice recording.

This device is suitable for various applications, including meetings, conferences, investigations, or personal surveillance, offering a discreet way to capture important moments.

PACKAGE CONTENTS

Please check the package for the following items:

- UYIKOO Spy Camera Pen Y8
- 32GB Micro SD Card
- USB Card Reader
- Ink Refills (5 pieces)
- Mini Screwdriver (for ink refill replacement)
- User Manual

Image: All items included in the UYIKOO Spy Camera Pen Y8 package.

PRODUCT OVERVIEW

Familiarize yourself with the different parts of your UYIKOO Spy Camera Pen Y8:



Image: Labeled diagram of the spy camera pen, indicating the pen tip, reset button, indicator light, mode switch, camera lens, and TF card slot.

- **Pen Tip:** Standard writing pen function.
- **Camera Lens:** Located discreetly for video and photo capture.
- **Indicator Light:** Provides status feedback (e.g., charging, recording, standby).
- **Mode Switch:** Used to select different operating modes.
- **Reset Button:** For restarting the device if it becomes unresponsive.
- **TF Card Slot:** For inserting the Micro SD card.

SETUP

1. Charging the Device

Before first use, fully charge the pen camera. Connect the pen to a computer's USB port or a USB wall adapter using the integrated USB connector. The indicator light will show charging status and turn off when fully charged. A full charge provides up to 60 minutes of video recording.

2. Inserting the Micro SD Card

The device requires a Micro SD card for storing recordings. A 32GB Micro SD card is included.

1. Ensure the Micro SD card is formatted before use. You can format it on your computer.
2. Locate the TF card slot on the pen (refer to Product Overview).
3. Gently insert the Micro SD card into the slot until it clicks into place.



Image: Proper insertion of the 32GB Micro SD card into the pen camera.

3. Setting the Time (Optional)

To ensure your recordings have accurate timestamps, you may need to set the device's internal clock. Refer to the detailed instructions in the included paper manual for specific steps on time synchronization, usually involving creating a text file on the Micro SD card.

OPERATING INSTRUCTIONS

The UYIKOO Spy Camera Pen Y8 operates with a single button for various functions.



Image: Simplified steps for using the pen camera: insert Micro SD, press button to record, connect to computer to view data.

1. Power On/Off

- **Power On:** Press and hold the single button for approximately 3 seconds until the indicator light turns on. The device will enter standby mode.
- **Power Off:** Press and hold the single button for approximately 3 seconds until the indicator light turns off. The device will save any current recording and shut down.

2. Video Recording (1080P)

From standby mode:

- Press the button once briefly. The indicator light will flash and then turn off, indicating that video recording has started.
- To stop recording, press the button once briefly again. The device will save the video file and return to standby mode.



Image: The pen camera capturing high-definition 1080P video.

3. Photo Taking

From standby mode:

- Consult the included paper manual for specific instructions on switching to photo mode, as this often involves a different button press sequence or mode switch setting.
- Once in photo mode, a brief press of the button will capture a photo.

4. Voice Recording

The pen also functions as a voice recorder.

- Consult the included paper manual for specific instructions on switching to voice recording mode.
- Once in voice recording mode, a brief press of the button will start/stop audio recording.



Image: The pen camera's voice recording capability, useful for capturing audio in meetings or lectures.

5. Connecting to a Computer

To view or transfer your recorded files:

- Ensure the pen is powered off.
- Connect the pen directly to your computer's USB port. The device will be recognized as a removable disk.
- You can then access the files (videos, photos, audio) stored on the Micro SD card. Compatible with Mac and Windows operating systems.



Image: The pen camera connected to a laptop, demonstrating its compatibility with Mac and Windows for data transfer and charging.

6. Loop Recording

The device supports loop recording. When the Micro SD card is full, the oldest video files will be automatically overwritten by new recordings. This ensures continuous recording without manual deletion of old files.



Image: Explanation of the loop recording function, showing how new recordings replace the oldest files when storage is full.

Maintenance

1. Changing Ink Refills

To replace the ink refill:

1. Twist the pen body to separate the upper and lower halves.
2. Carefully pull out the old ink refill.
3. Insert a new ink refill.
4. Reassemble the pen by twisting the halves back together.

2. Cleaning

Wipe the pen's exterior with a soft, dry cloth. Do not use liquid cleaners or immerse the device in water.

Troubleshooting

- **Device not turning on:** Ensure the battery is fully charged. If the issue persists, try pressing the reset button with a small pin.
- **Cannot record:** Check if the Micro SD card is properly inserted and formatted. Ensure there is sufficient storage space or that loop recording is enabled.
- **Poor video/audio quality:** Ensure the camera lens is clean and unobstructed. Record in well-lit environments for best video results.
- **Computer not recognizing device:** Ensure the pen is powered off before connecting to the computer. Try a different USB port or cable.
- **Short recording time:** Ensure the device is fully charged before each use. Battery performance may decrease over time.

Specifications

Model Number	Y8
Video Resolution	1080P (1920 x 1080 pixels)
Material	Plastic
Storage	Supports Micro SD card (32GB included)
Battery Capacity	200mAh
Recording Time	Up to 60 minutes (video) on a full charge
Connectivity	USB (for charging and data transfer)
Compatible OS	Windows, Mac
Control Type	Single Button

Warranty and Support

UYIKOO is committed to providing high-quality products and excellent customer service.

Image: UYIKOO's commitment to customer satisfaction, including quick response, lifetime technical support, and a 2-year warranty.

- **Warranty:** This product comes with a 2-year warranty from the date of purchase.
- **Technical Support:** UYIKOO offers lifetime professional technical support for its products.
- **Customer Service:** For any inquiries, issues, or support needs, please contact our customer service team. We aim for quick responses to assist you.

Contact Us

You can reach our support team via the following methods:



Image: Scan this QR code to access UYIKOO customer support resources.

Alternatively, visit our support page: <http://qr61.cn/osMGrn/qxA8f7w>