

VINABTY AKB75095304

VINABTY AKB75095304 Replacement Remote Control User Manual

For LG LCD LED 3D Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the VINABTY AKB75095304 replacement remote control. It is designed to operate various LG LCD LED 3D Smart TV models without requiring any programming. Please read this manual carefully to ensure proper use and to maximize your remote control's functionality.

2. PRODUCT OVERVIEW

The VINABTY AKB75095304 is a direct replacement remote control for a wide range of LG Smart TVs. It features an ergonomic design for comfortable handling and includes all essential functions found on original LG remote controls, such as dedicated buttons for popular streaming services.





Image 2.1: Front view of the VINABTY AKB75095304 replacement remote control. This image displays the full layout of the remote, including power, number pad, navigation, volume, channel, and dedicated app buttons like Netflix and Amazon.

2.1. Compatible LG TV Models

This remote control is compatible with numerous LG LCD LED 3D Smart TV models, including but not limited to:

- 49UK7500PTA, 49SK8000PVA, 55SK8000PTA, 49UK7700PTA, 49UK7500PVA, 55SK8000PVA, 55UK7500PTA, 55UK7550PTA, 55UK7500PVA, 55UK7700PTA
- 65SK8000PTA, 65SK8000PVA, 65UK7500PVA, 65UK7500PTA, 65UK7550PTA, 65UK7700PTA, 75SK8100PTA, 75SK8000PTA, 75SK8100PVA, 49UK7550PTA
- 32LK6200PLA, 32LK6100PLB, 32LK610bPLB, 32LK6190PLA, 32LK615bPLB, 49LK6100PLA, 43LK6100PLA, 43LK5900PLA, 43LK5910pIC, 49LK5900PLA
- 43LK5990ple, 49LK5910pIC, 43LK6100PLB, 43LK6200PLD, 49LK6100PLB, 43LK6000PLF, 49LK6000PLF, 49LK6200PLD
- OLED55C8PTA, OLED65C8PVA, OLED65C8PTA, OLED65C8YVA, OLED55C8PVA, OLED77C8PTA, OLED55C8YVA, OLED77C8YVA, OLED77C8PVA
- 43UK6950PLB, 43UK6710PLB, 43UK6510PLB, 43UK6550PLD, 43UK6750PLD, 50UK6950PLB, 50UK6710PLB, 50UK6510PLB, 50UK6750PLD, 50UK6550PLD
- 55UK6950PLB, 55UK6710PLB, 55UK6510PLB, 55UK6550PLD, 55UK6750PLD, 65UK6950PLB, 65UK6710PLB, 65UK6750PLD, 70UK6950PLA

This remote also serves as a sub-remote for models AKB75095305, AKB75095306, AKB75095308, and AKB75095303.

3. SETUP

3.1. Battery Installation

The VINABTY AKB75095304 remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image 3.1: Back view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Important: Ensure batteries are inserted correctly. Incorrect polarity can damage the remote control.

4. OPERATING INSTRUCTIONS

This replacement remote control is designed for immediate use with compatible LG Smart TVs. No programming or pairing is required. Simply install the batteries, point the remote at your TV, and begin using it.

4.1. Basic Functions

- **Power Button (●)**: Turns the TV on or off.
- **Number Pad (0-9)**: Directly select channels.
- **Volume Up/Down (▲/▼)**: Adjusts the TV volume.
- **Channel Up/Down (▲/▼)**: Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Guide Button**: Displays the electronic program guide.
- **Q.VIEW Button**: Quickly switches between previously viewed channels.
- **Info Button**: Displays information about the current program.
- **Mute Button**: Mutes or unmutes the TV sound.

4.2. Smart TV and App Functions

The remote includes dedicated buttons for quick access to popular streaming services and Smart TV features:

- **NETFLIX Button**: Launches the Netflix application.
- **Amazon Button**: Launches the Amazon Prime Video application.
- **Home Button**: Accesses the Smart TV home screen.
- **Quick Access / FAV Button**: Provides quick access to favorite channels or apps.
- **T.OPT / MAGIC LINK Button**: Accesses TV options or Magic Link features (functionality may vary by TV model).



Image 4.1: A user operating the VINABTY AKB75095304 remote control to interact with a television.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Care:**
 - Replace batteries when the remote's response becomes sluggish or inconsistent.
 - Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage.
 - Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you encounter issues with your VINABTY AKB75095304 remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is unresponsive.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote works intermittently.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Certain buttons do not work.	Button stuck or internal fault.	Gently press the button multiple times. If the issue persists, the remote may be faulty.
Remote does not control the TV.	Incompatible TV model or TV's IR receiver issue.	Verify your TV model is listed in the compatibility section. Test with another remote if available to rule out TV issues.

7. SPECIFICATIONS

- **Model Number:** AKB75095304
- **Brand:** VINABTY
- **Compatible Devices:** LG LCD LED 3D Smart Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 7.5 x 2 x 0.7 inches (approximately)
- **Item Weight:** 0.035 ounces (approximately)
- **Special Feature:** Ergonomic design
- **Color:** Black

8. WARRANTY AND SUPPORT

For any questions, concerns, or technical support regarding your VINABTY AKB75095304 replacement remote control, please contact the seller or refer to your purchase documentation for warranty information. As a replacement product, specific warranty terms may vary.

For general inquiries, you may visit the VINABTY brand page on Amazon: [VINABTY Store](#)