

## RISEBASS 0

# Risebass Portable Karaoke Machine User Manual

Model: 0

## INTRODUCTION

The Risebass Portable Karaoke Machine is a versatile and compact audio system designed for entertainment. It features Bluetooth connectivity, FM radio, and support for various media inputs, along with integrated LED party lights and a wired microphone for an immersive karaoke experience. Its portable design makes it suitable for use in various settings.

## WHAT'S IN THE Box

Please check the contents of your package to ensure all items are present:

- Risebass Portable Karaoke Machine (Bluetooth Speaker)
- Wired Microphone
- Shoulder Strap
- Microphone Cable
- Charging Cable



BLUETOOTH SPEAKER



MICROPHONE



SHOULDER STRAP



MICROPHONE CABLE



CHARGING CABLE


*Image: The package contents, showing the main unit, microphone, shoulder strap, microphone cable, and charging cable.*

## SETUP INSTRUCTIONS

- Charging the Unit:** Before first use, fully charge the karaoke machine using the provided charging cable. Connect the small end of the charging cable to the 'DC 5V/AUX-in' port on the unit and the USB end to a compatible USB power adapter (not included). The charging indicator light will show charging status.
- Attaching the Shoulder Strap:** Locate the two attachment points on the sides of the karaoke machine. Securely clip each end of the shoulder strap to these points for easy portability.
- Connecting the Microphone:** Insert the microphone cable's XLR end (the larger, round end) into the microphone's input port. Then, insert the 6.35mm (1/4 inch) jack end of the microphone cable into the 'MIC' input port on the karaoke machine.

## INSTRUCTIONS FOR PAIRING:

Unit starts automatically in Wireless Mode. To pair, turn on speaker and Bluetooth mode on your device. Search for "Rise Bass" on your device and pair. Devices will remain paired for future use.

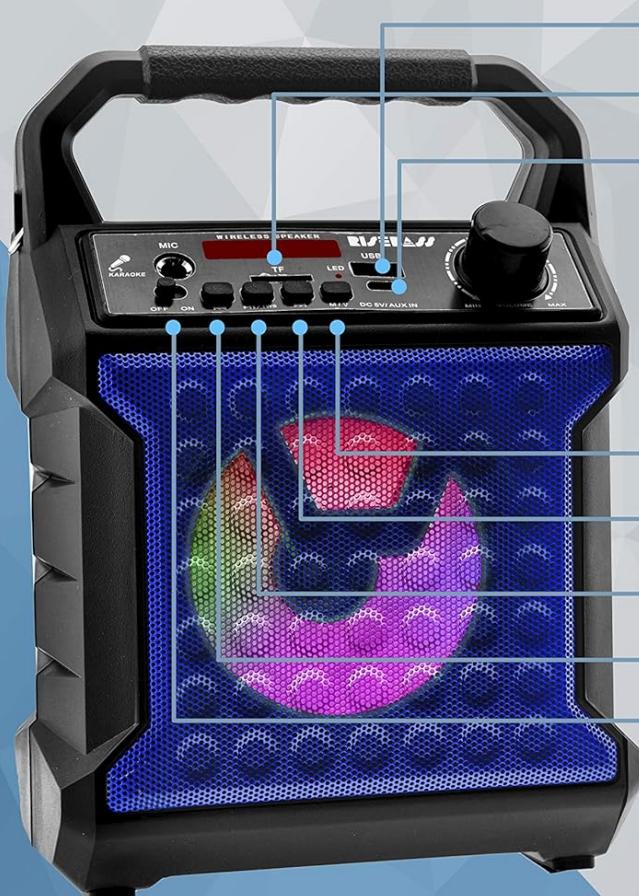

### Input Controls:

- USB Input
- TransFlash Input
- Charging Port/AUX

### Operation Controls:

- MODE  
[Bluetooth, USB/TF/AUX, FM, Light on/off]
- Next Song
- Play / Pause  
[FM mode: Station selection/auto-search]
- Previous Song
- Power ON/OFF

**RISEBASS**

*Image: A detailed view of the input and operation controls on the karaoke machine, including USB, TransFlash, Charging/AUX, Mode, Next Song, Play/Pause, Previous Song, and Power ON/OFF.*

## OPERATING INSTRUCTIONS

### Power On/Off

To power on the unit, press and hold the **Power ON/OFF** button. Press and hold again to power off.

### Mode Selection

Press the **MODE** button to cycle through available modes: Bluetooth, USB, TF Card, FM Radio, and AUX input.

### Bluetooth Pairing

1. Turn on the karaoke machine. It will automatically enter Wireless (Bluetooth) Mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.

3. Select "Rise Bass" from the list of devices to pair. Once paired, the unit will confirm the connection. Devices will remain paired for future use.

## FM Radio Operation

- Switch to FM Radio mode using the **MODE** button.
- Press the **Play/Pause** button to initiate an automatic station search. The unit will scan and save available FM stations.
- Use the **Next Song** and **Previous Song** buttons to navigate through saved stations.

## USB/TF Card Playback

- Insert a USB drive or TF (microSD) card with audio files into the respective port.
- The unit will automatically switch to USB or TF Card mode and begin playback. If not, use the **MODE** button to select the correct input.
- Use the **Next Song** and **Previous Song** buttons to skip tracks.
- Press the **Play/Pause** button to pause or resume playback.

## AUX Input

Connect an external audio device (e.g., smartphone, MP3 player) to the 'DC 5V/AUX-in' port using a 3.5mm audio cable (not included). Switch to AUX mode using the **MODE** button. Audio will play through the karaoke machine's speaker.

## Microphone Usage

Ensure the microphone is properly connected to the 'MIC' input. Adjust the microphone volume using the dedicated knob on the unit. Sing or speak into the microphone for amplified sound.

## LED Lighting Effects

The unit features multicolor LED lights that activate automatically when powered on. There is a dedicated button to turn the lights on or off.

## MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the unit away from water, moisture, and direct sunlight.
- Store in a cool, dry place when not in use for extended periods.
- Ensure all ports are free from dust and debris.

## TROUBLESHOOTING

Problem	Possible Solution
Unit does not power on.	Ensure the unit is fully charged. Connect to a power source and allow it to charge for a few hours.
No sound from speaker.	Check the volume level on both the karaoke machine and the connected device. Ensure the correct input mode is selected (Bluetooth, USB, TF, AUX).
Microphone not working.	Ensure the microphone cable is securely connected to both the microphone and the 'MIC' input on the unit. Check the microphone's volume knob.

Problem	Possible Solution
Bluetooth pairing fails.	Make sure the karaoke machine is in Bluetooth mode. Ensure your device's Bluetooth is enabled and within range. Try unpairing and re-pairing the device.
Poor FM radio reception.	Adjust the unit's position to improve signal reception. Ensure no strong interference sources are nearby.

## SPECIFICATIONS

---

Feature	Detail
Brand	RISEBASS
Model Number	0
Item Weight	1.92 pounds
Product Dimensions	4 x 6 x 8.75 inches
Connectivity	Bluetooth, USB, SD/TF Card, AUX-in, FM Radio
Speaker Count	1
Battery Type	Lithium (included)
Special Features	Portable, Rechargeable, Wireless, Built-in Microphone, LED Lighting Effects, All-in-One Sound System

# PRODUCT DIMENSIONS



*Image: Product dimensions of the karaoke machine (8.75" H x 6" W x 4" D) and microphone (6.5" H x 1.5" D).*

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official RISEBASS website. Keep your purchase receipt for warranty claims.