



Manuals.plus /

- › GOPLUS /
- › GOPLUS Kids Play Tent Model IX78127FR Instruction Manual

## GOPLUS IX78127FR

# GOPLUS Kids Play Tent Instruction Manual

Model: IX78127FR

## INTRODUCTION

---

The GOPLUS Kids Play Tent provides a private and comfortable space for children to play, read, and relax. Designed for both indoor and outdoor use, this tent features durable Oxford fabric, a stable pine wood frame, and easy assembly. It includes a thick, washable mat for added comfort and convenience. The tent's design incorporates small windows for ventilation and visibility, along with decorative gauze curtains.



Image: The GOPLUS Kids Play Tent in blue, highlighting its key features such as stable wood construction, soft fabric, high breathability, and overall aesthetic appeal.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** Always supervise children when the tent is in use.
- **Fire Safety:** Keep the tent away from open flames, heat sources, and electrical heaters. The fabric is not fireproof.
- **Choking Hazard:** Ensure all small parts are securely fastened and kept out of reach of young children.
- **Stable Placement:** Place the tent on a flat, stable surface to prevent tipping.
- **No Climbing:** Do not allow children to climb on the tent frame or fabric, as this may cause damage or injury.
- **Ventilation:** Ensure adequate ventilation, especially during outdoor use, to prevent overheating.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly:

- Tent Fabric (1 piece)
- Pine Wood Poles (various lengths, quantity as per diagram)
- Plastic Connectors (various types, quantity as per diagram)
- Thick Washable Mat (1 piece)
- Instruction Manual (1 piece)

## SETUP INSTRUCTIONS

---

Assembly is designed to be straightforward and can typically be completed within 10 minutes without additional tools. Refer to the diagrams for visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Identify the pine wood poles, plastic connectors, tent fabric, and mat.
2. **Assemble the Base Frame:** Connect the shorter pine wood poles using the appropriate plastic connectors to form the rectangular base of the tent. Ensure all connections are secure.
3. **Construct Vertical Supports:** Insert the longer pine wood poles into the vertical connectors at each corner of the base frame.
4. **Form the Roof Structure:** Use the remaining poles and connectors to create the triangular roof frame. Connect this structure to the top of the vertical supports.
5. **Drape the Tent Fabric:** Carefully drape the tent fabric over the assembled wooden frame. Ensure the fabric is aligned correctly, with windows and openings in their intended positions.
6. **Secure the Fabric:** Fasten the tent fabric to the frame using the integrated velcro straps or ties. Ensure the fabric is taut and evenly distributed.
7. **Place the Mat:** Lay the thick washable mat inside the tent on the base.



Image: Close-up details of the tent's construction, showing breathable mesh windows, practical velcro fasteners, and stable plastic connectors for the pine wood frame.



Image: The assembled play tent from the front, with its decorative mesh curtains open, providing a clear view of the interior and entrance.

## OPERATING INSTRUCTIONS

---

The GOPLUS Kids Play Tent is designed for simple and enjoyable use.

- **Entry and Exit:** The tent features a main opening with gauze curtains. These can be tied back for an open entrance or left down for a more enclosed space.
- **Ventilation:** Small mesh windows on the sides allow for air circulation, ensuring a comfortable environment inside the tent.
- **Indoor/Outdoor Use:** The tent is suitable for both indoor playrooms and outdoor garden settings. When used outdoors, ensure it is placed on a dry, level surface and protected from strong winds or heavy rain.



Image: The play tent shown in two different environments: indoors in a child's room and outdoors in a garden, illustrating its suitability for both settings.

## MAINTENANCE

---

Proper maintenance will extend the life of your play tent.

- **Fabric Cleaning:** The Oxford fabric can be spot cleaned with a damp cloth and mild soap. For deeper cleaning, the fabric can be carefully removed from the frame and hand washed with cold water. Allow to air dry completely before reassembly.
- **Mat Cleaning:** The thick mat is washable. Follow the care instructions on the mat's label, typically machine wash cold on a gentle cycle and tumble dry low or air dry.
- **Frame Care:** Wipe the pine wood poles with a dry or slightly damp cloth to remove dust. Avoid harsh chemicals.
- **Storage:** When not in use, disassemble the tent and fold the fabric and mat. Store all components in a dry, cool place away from direct sunlight to prevent fading and material degradation.



**Coussin en coton  
souple et lavable**

Image: A child and a puppy enjoying the interior of the tent, emphasizing the comfort provided by the soft, washable cotton cushion.

## TROUBLESHOOTING

---

If you encounter any issues, refer to the following common solutions:

- **Tent is Unstable:** Ensure all pine wood poles are fully inserted into the plastic connectors and that the fabric is securely fastened to the frame. Check that the tent is placed on a flat, level surface.
- **Missing Parts:** Double-check the packaging and compare contents with the 'Package Contents' list. If parts are genuinely missing, contact customer support.
- **Fabric Not Fitting:** Ensure the fabric is oriented correctly and that the frame is assembled according to the instructions. Sometimes rotating the fabric or re-checking pole connections can resolve this.

## SPECIFICATIONS

---

<b>Feature</b>	<b>Detail</b>
Brand	GOPLUS
Model Number	IX78127FR
Color	Blue
Material	Oxford fabric, Pine wood, Plastic
Dimensions (L x W x H)	105 x 120 x 140 cm
Item Weight	5.56 kg
Frame Material	Pine wood
Style/Theme	Castle
Assembly Required	Yes
Recommended Minimum Age	36 months
Recommended Maximum Age	72 months



**Peut accueillir 4 personnes en même temps**

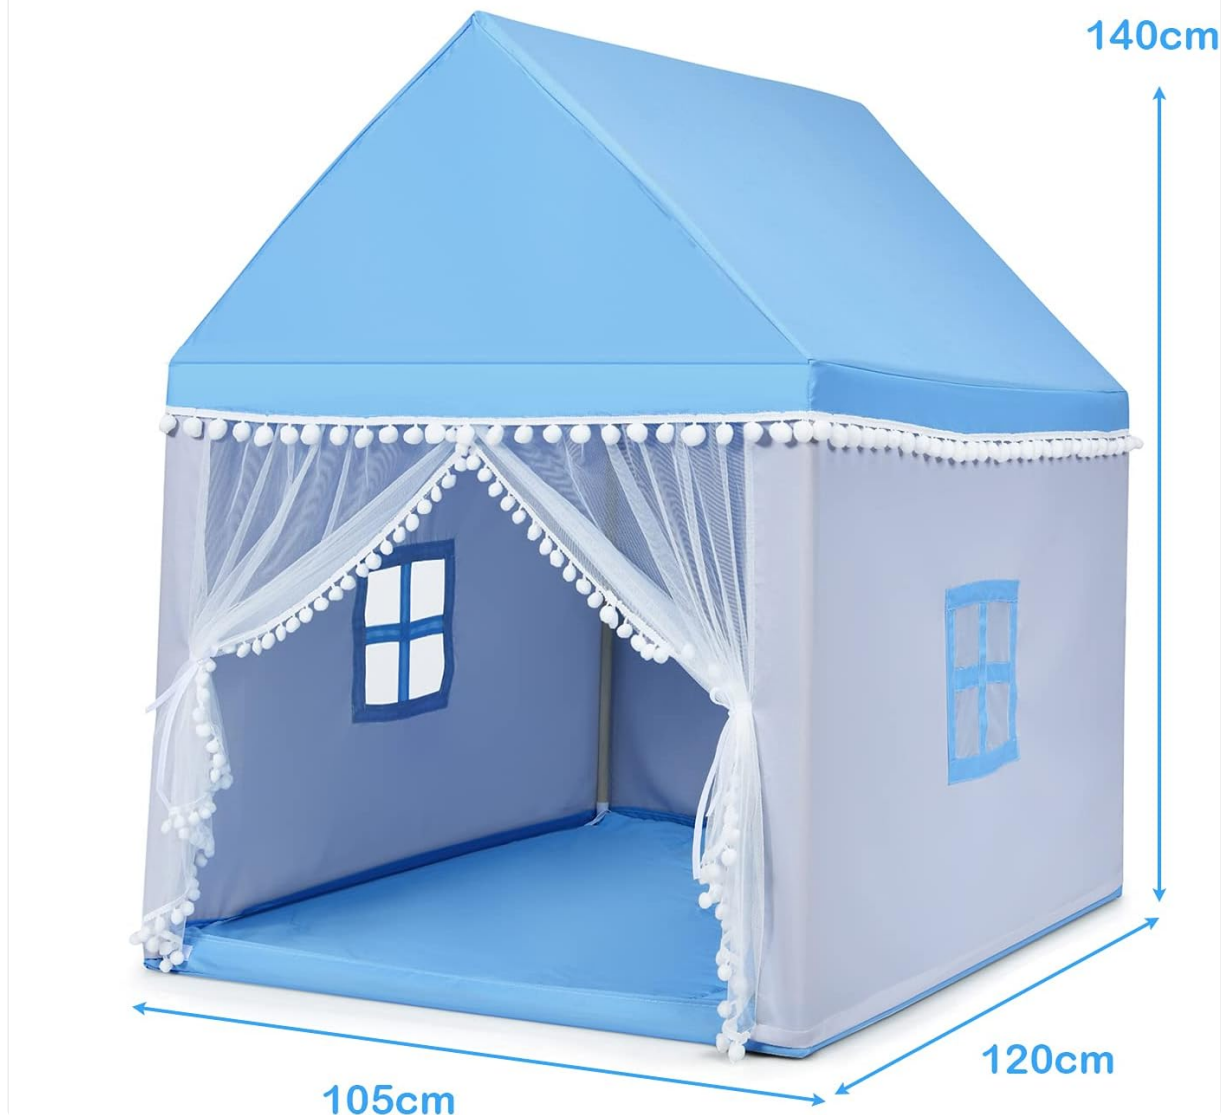


Image: A visual representation of the tent's dimensions, indicating its length (105 cm), width (120 cm), and height (140 cm).

## **WARRANTY AND SUPPORT**

---

For warranty information or product support, please refer to the retailer's policy or contact GOPLUS customer service directly. Keep your purchase receipt for any warranty claims.