

PAXCESS P3.2-1

PAXCESS Powerful Pressure Washer Instruction Manual

Model: P3.2-1

Brand: PAXCESS

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the PAXCESS Powerful Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before initial use and keep it for future reference.

Important Safety Instructions:

- Always wear appropriate safety gear, including eye protection, when operating the pressure washer.
- Ensure the power cord and connections are intact and free from damage before each use.
- Do not direct the water stream at people, pets, or electrical devices.
- Always disconnect the power supply before performing any maintenance or cleaning.
- Keep children and pets away from the operating area.
- Operate the pressure washer on a stable, level surface.
- Do not operate the unit if any parts are damaged or missing.

2. PRODUCT OVERVIEW

The PAXCESS Powerful Pressure Washer is designed for effective cleaning of various surfaces, offering high pressure and versatile features.

Key Features:

- **Powerful Cleaning:** Up to 3000 PSI Max pressure and 2.5 GPM Max water flow for quick and efficient cleaning.
- **Adjustable Pressure:** All-in-one adjustable nozzle for easy control of water pressure, suitable for various cleaning tasks (high pressure, low pressure, detergent mode).
- **Safety and Intelligent Technology:** Total Stop System (TSS) automatically shuts off the pump when the trigger is not engaged, prolonging pump life and saving energy. Features leakproof connections with professional-grade brass garden hose connectors.

 
- **Convenient Storage:** Built-in on-board hose reel prevents kinks and simplifies storage. Power cord hook for tidy cable management.
- **Wide Application:** Ideal for cleaning homes, buildings, cars, boats, decks, driveways, patios, and more, effectively removing dirt, gunk, oil, and rust.

Product Components:




Includes the main unit, spray gun, adjustable nozzle wand, high-pressure hose, garden hose adapter, and cleaning needle.

All-in-one Adjustable Nozzle

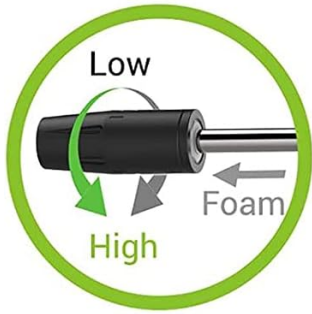

Soap Mode

 Low Pressure+Soap Detergent

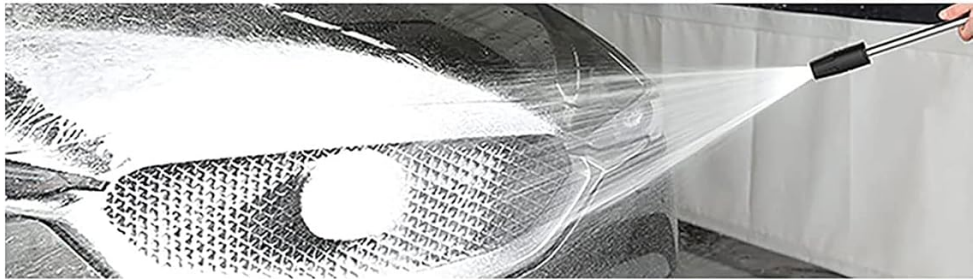

Fan Mode

Low Pressure



Jet Line Mode

High Pressure

 


The all-in-one adjustable nozzle allows switching between Soap Mode (low pressure + detergent), Fan Mode (low pressure), and Jet Line Mode (high pressure).

Two Ways for Water Sucking

Allows you to take water easily at anywhere

1 Water Tap

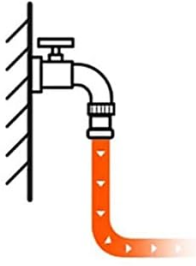

2 Suck Water Automatically



The unit can draw water from a standard water tap or automatically suck water from a static source like a bucket for increased portability.

Pressure Hose Reel and Effortless Wheels

Convenient to Use



Before



 
After



Easy to Move

Integrated hose reel for tangle-free storage and large wheels for effortless mobility.

Multi-Purpose

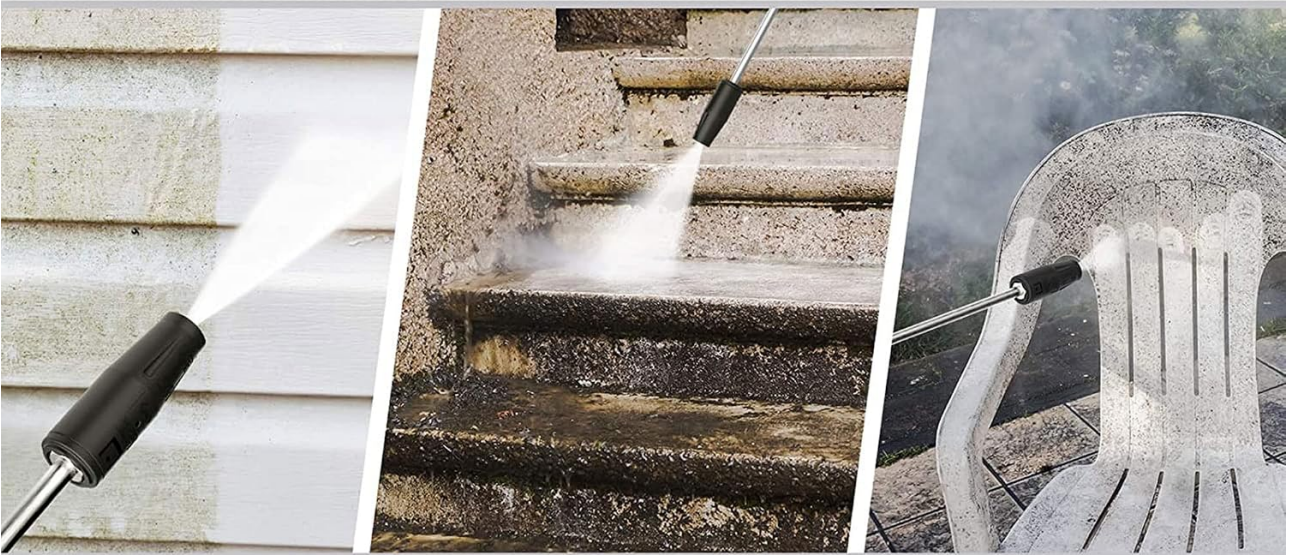

Demonstration of multi-purpose cleaning on a car, siding, steps, and patio furniture.

3. SETUP

Follow these steps to set up your pressure washer for first use:

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components listed in the product overview are present.
2. **Assemble Handle and Hose Reel:** Attach the handle and hose reel assembly to the main unit. Ensure all connections are secure.
3. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer and the other end to the spray gun. Tighten securely.
4. **Connect Water Supply:**
 - For tap connection: Attach a standard garden hose (not included) to the water inlet on the pressure washer. Ensure the connection is tight to prevent leaks.
 - For static water source: Submerge the water intake hose (if included or purchased separately) into a bucket or other static water source.

5. **Connect Power:** Plug the power cord into a grounded 110-120V GFCI outlet. Ensure the power switch on the unit is in the "OFF" position before plugging in.
6. **Purge Air from System:** Before turning on the power, turn on the water supply completely and squeeze the trigger on the spray gun to allow water to flow through the system and purge any air. Continue until a steady stream of water emerges from the nozzle.

Setup Demonstration:

Your browser does not support the video tag.

Video demonstrating the setup and initial use of the Paxcess pressure washer, including connecting the water supply and power.

Your browser does not support the video tag.

Detailed video showcasing the assembly, water connection, and power connection for the Paxcess 3000PSI Pressure Washer.

4. OPERATING INSTRUCTIONS

Once set up, your pressure washer is ready for operation. Always ensure the water supply is fully open before turning on the unit.

1. **Turn On:** Flip the power switch to the "ON" position. The motor will start when the trigger is squeezed and stop when released (Total Stop System).
2. **Adjust Nozzle:** The adjustable nozzle allows you to change the spray pattern and pressure.
 - Rotate the nozzle collar to switch between high-pressure jet, fan spray, and low-pressure/detergent modes.
 - For detergent application, ensure the nozzle is set to the low-pressure/detergent mode.
3. **Apply Detergent (Optional):** If using detergent, fill the built-in detergent tank with appropriate pressure washer detergent. The unit will automatically mix detergent when the nozzle is set to detergent mode.
4. **Begin Cleaning:** Hold the spray gun firmly with both hands and direct the spray at the surface to be cleaned, maintaining a safe distance. Start with a wider spray pattern and lower pressure, then adjust as needed.
5. **After Use:**
 - Turn off the power switch.
 - Turn off the water supply.
 - Squeeze the spray gun trigger to release any remaining pressure in the system.
 - Disconnect the garden hose and high-pressure hose.

Operation Demonstration:

Your browser does not support the video tag.

Video showcasing the powerful cleaning performance of the electric pressure washer on various surfaces like fire pits, wooden decks, and roofs.

Your browser does not support the video tag.

Demonstration of the adjustable nozzle and its effectiveness on different cleaning tasks, including car tires and floor mats.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Hose and Cord Storage:** Use the integrated hose reel to neatly store the high-pressure hose. Wrap the power cord around the designated hooks to prevent tangles and damage.

- **Nozzle Cleaning:** If the nozzle becomes clogged, use the included cleaning needle to clear any debris from the nozzle opening.
- **Detergent Tank:** After using detergent, rinse the detergent tank thoroughly with clean water to prevent residue buildup.
- **Water Inlet Filter:** Periodically check and clean the water inlet filter to ensure unrestricted water flow and protect the pump from debris.
- **Winter Storage:** If storing the pressure washer in an area where temperatures may drop below freezing, drain all water from the pump, hoses, and spray gun to prevent damage from freezing. Consider using a pump protector.
- **General Cleaning:** Wipe down the exterior of the unit with a damp cloth after each use.

6. TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor does not start	No power supply; GFCI tripped; Power switch off.	Check power connection; Reset GFCI; Turn power switch ON.
No water pressure or low pressure	Water supply off or restricted; Air in pump; Clogged nozzle; Kinked hose.	Ensure water supply is fully open; Purge air from system; Clean nozzle; Straighten hose.
Water leaking from connections	Loose connections; Damaged O-rings.	Tighten all connections; Inspect and replace O-rings if damaged.
Motor cycles on and off when trigger is not pressed	Air in pump; Leak in system.	Purge air from system; Check all connections for leaks.

If the problem persists after attempting these solutions, please contact PAXCESS customer support for assistance.

7. SPECIFICATIONS

Specification	Value
Brand	PAXCESS
Model Number	P3.2-1
Max Pressure	3000 PSI (Rated: 2150 PSI)
Max Water Flow	2.5 GPM (Rated: 1.76 GPM)
Motor Power	1800W
Rated Voltage	110-120V
Rated Frequency	60Hz
Hose Length	26 FT
Power Cable Length	35 FT
IP Rating	IPX5

Specification	Value
Water Temperature	40°C / 140°F (Max)
Net Weight	21.6 lb (Product data) / 23.3 pounds (Specifications data)
Product Dimensions (L x W x H)	24" x 18" x 54"
Color	Orange
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

Specific warranty details and support contact information are typically provided with the product packaging or on the manufacturer's official website. Please refer to the documentation included with your purchase for comprehensive warranty terms and conditions.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please visit the official PAXCESS website or contact their customer service directly.