

[Manuals.plus](#) /

> [Greenote](#) /

> Greenote GSC30 Corded Stick Vacuum Cleaner User Manual

Greenote GSC30

Greenote GSC30 Corded Stick Vacuum Cleaner User Manual

Model: GSC30

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Greenote GSC30 Corded Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

Important Safety Notes:

- The GSC30 is equipped with an automatic heating lockout device. If the vacuum's temperature reaches a critical point, it will automatically power off. Allow 30 minutes for the unit to cool down before resuming operation.
- Regularly clean the filter and brushes to maintain optimal suction power and prolong the vacuum cleaner's lifespan.
- When vacuuming large debris with the floor brush, avoid repeatedly pushing and pulling. Instead, slightly lift the brush, place it over the debris, and hold for a few seconds to allow absorption.

2. PRODUCT OVERVIEW AND COMPONENTS

The Greenote GSC30 is a powerful 4-in-1 corded stick vacuum cleaner designed for versatile home cleaning. It features 18KPA suction power and a 600W motor.

Included Components:

- Main Motor Unit
- Adjustable Extension Tube
- Rotary Brush Head (Floor Brush)
- Corner Brush
- Flat Brush
- Crevice Nozzle
- Wall Mount
- Receiver Clip

- Instruction Manual (this document)
- Warranty Card

Key Features:

- **Powerful Suction:** 18 KPA suction with a 600W motor, effective for pet hair, crumbs, and dust.
- **Cyclonic Filtration System:** Utilizes 3-Cyclone technology to separate dust from air and an integrated high-density HEPA filter for purified exhaust air.
- **Lightweight and Corded:** Weighs 1.2 kg, easy to maneuver. The 5m power cord provides continuous power without battery concerns.
- **Multi-purpose 4-in-1 Design:** Includes various attachments and an adjustable extension tube for cleaning floors, carpets, ceilings, stairs, sofas, corners, and curtains.
- **Easy Dustbin Emptying:** One-click emptying mechanism for convenience.



Corded Vacuum GSC30

Clean anytime anywhere, no need worry about battery concerns

Figure 2.1: The Greenote GSC30 Corded Stick Vacuum Cleaner in its assembled form, being used on a wooden floor.



Figure 2.2: Illustration of the vacuum's cyclone filtration system, showing how dust is separated from the air.

18000KPA Power Suction

One click to empty without any dust, hair, dog food etc.



Figure 2.3: The floor brush of the GSC30 vacuum, highlighting its 18KPA powerful suction capability on debris.

Multifunctional Extendable Tube

Lightweight and scalable,
sweeping high places anytime.



Figure 2.4: The adjustable extension tube of the Greenote GSC30, allowing for extended reach during cleaning.



Figure 2.5: A collage demonstrating the versatility of the GSC30 with its various attachments for different cleaning tasks, including the floor brush, flat brush, and crevice nozzle.

3. SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all components from the packaging. Verify that all listed items in Section 2

are present.

2. **Assemble Extension Tube:** Connect the adjustable extension tube to the main motor unit. Ensure it clicks securely into place.
3. **Attach Cleaning Head:** Select the desired cleaning head (e.g., rotary brush head for floors/carpets, crevice nozzle for tight spaces) and attach it to the other end of the extension tube. For direct handheld use, attach the cleaning head directly to the main motor unit.
4. **Wall Mount Installation (Optional):** If desired, install the wall mount in a convenient location using appropriate hardware (not included). The receiver clip can be used to secure the vacuum to the wall mount for storage.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet (110V).

4. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the main motor unit to turn the vacuum cleaner on or off.
2. **Adjusting Extension Tube:** To adjust the length of the extension tube, locate the adjustment mechanism (refer to Figure 2.4) and slide it to extend or retract the tube to your desired length.
3. **Using Attachments:**
 - **Rotary Brush Head:** Ideal for floors and carpets.
 - **Corner Brush:** Use for cleaning corners and edges.
 - **Flat Brush:** Suitable for upholstery, curtains, and delicate surfaces.
 - **Crevice Nozzle:** Perfect for narrow gaps, crevices, and hard-to-reach areas.
4. **Vacuuming Large Debris:** For large particles of trash, avoid pushing and pulling the floor brush repeatedly. Instead, slightly lift the brush, position it over the debris, and hold it for a few seconds to allow the vacuum to absorb the trash effectively.
5. **Cord Management:** The 5-meter power cord allows for extensive reach. Ensure the cord is not tangled or obstructing your path during operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Greenote GSC30 vacuum cleaner.

1. Emptying the Dustbin:

The dustbin has a 1.2L capacity. To empty, locate the one-click release button on the dustbin. Press the button to open the dustbin and dispose of collected debris. It is recommended to empty the dustbin after each use or when it reaches its MAX fill line.

2. Cleaning the Filter:

The vacuum uses a high-density HEPA filter. To clean the filter:

- Remove the dustbin from the main motor unit.
- Carefully remove the HEPA filter from the dustbin.
- Tap the filter gently to dislodge loose dust. For a more thorough clean, rinse the filter under cold running water.
- **Important:** Ensure the filter is completely dry before reinserting it into the vacuum cleaner. Allow at least 24 hours for air drying. Do not use a dryer or direct heat.
- Reassemble the filter and dustbin, then reattach to the main motor unit.

It is recommended to clean the filter regularly, depending on usage, to maintain suction power.

3. Cleaning the Brushes:

Periodically check the rotary brush head and other attachments for tangled hair or debris. Use scissors or a brush to

remove any obstructions. Ensure the brushes are free of blockages for effective cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Power cord not properly plugged in. Automatic heating lockout activated.	Ensure the power cord is securely plugged into a working outlet. If the unit was recently in use, allow 30 minutes for it to cool down before attempting to restart.
Loss of suction power.	Dustbin is full. Filter is clogged. Brush head or tube is blocked.	Empty the dustbin. Clean or replace the HEPA filter (refer to Section 5). Check the brush head, extension tube, and nozzles for any obstructions and remove them.
Unusual noise during operation.	Obstruction in the brush head or air path.	Turn off and unplug the vacuum. Check the brush head and all air passages for any foreign objects and remove them.

7. SPECIFICATIONS

Feature	Specification
Brand	Greenote
Model	GSC30
Suction Power	18 KPA
Motor Power	600 Watts
Dustbin Capacity	1.2 Liters
Power Source	Corded Electric (110 Volts)
Cord Length	5 meters
Weight	1.2 Kilograms
Filter Type	HEPA, Cartridge
Special Features	Cyclonic Technology, Automatic Heating Lockout
Recommended Surfaces	Carpet, Hard Floors
Included Attachments	Rotary Brush Head, Corner Brush, Flat Brush, Crevice Nozzle, Adjustable Extension Tube
GTIN / UPC	613497323530, 613497324698, 613497324681

8. WARRANTY AND SUPPORT

Your Greenote GSC30 Corded Stick Vacuum Cleaner comes with a warranty card included in the packaging. Please refer to this card for specific warranty terms and conditions.

Customer Support:

For any issues, questions, or support needs, please contact Greenote customer service:

- **Email:** vc.support@greenotehome.com
- **Official YouTube Channel:** For product information and usage videos, please visit [Greenote Official](#) on YouTube.
- **Social Media:** Follow Greenote on Facebook, Instagram, and Twitter by searching for "Greenote" for community engagement and updates.

