

[manuals.plus](#) /› [Gdrasuya10](#) /› [Gdrasuya10 Portable Countertop Dishwasher User Manual](#)

Gdrasuya10 HG-HJWJL-4128-Z

Gdrasuya10 Portable Countertop Dishwasher User Manual

Model: HG-HJWJL-4128-Z

1. INTRODUCTION

Thank you for choosing the Gdrasuya10 Portable Countertop Dishwasher. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Do not operate the dishwasher if it has a damaged power cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep children away from detergent and rinse aid.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.
- Ensure the dishwasher is properly grounded.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Use only detergents and rinse aids recommended for automatic dishwashers.

3. PRODUCT OVERVIEW AND COMPONENTS

The Gdrasuya10 Portable Countertop Dishwasher is designed for compact spaces, offering efficient dishwashing with multiple wash programs.

- Intelligent Countertop Dishwasher

- Large Capacity

- High Temperature Disinfection



Figure 3.1: Overview of the Gdrasuya10 Portable Countertop Dishwasher, highlighting its intelligent design, large capacity, and high-temperature disinfection capabilities.

Key Features:

- **Compact Design:** Measures 17.72 x 15.75 x 17.6 inches, ideal for small kitchens.
- **Large Capacity:** Accommodates 12 to 20 pieces of dishes, including plates, bowls, cutlery, and cups.
- **3-in-1 Washing Modes:** Quick Wash, Standard Wash, and Power Wash.
- **360° Water Spray:** Ensures thorough cleaning.
- **Autonomous Water Fill:** Maintains sufficient water during operation.
- **Touch Panel:** Easy one-button operation.



Figure 3.2: Illustration of the dishwasher's internal capacity, showing how various items like dishes, knives, cups, spoons, rice bowls, and chopsticks can be arranged.

Detailed Components:

- **Flip-up Lid:** Easy access for loading and unloading.

- **Stainless Steel Frame:** Durable and resistant to high temperatures.
- **Practical Filter:** Removable for easy cleaning of food scraps.
- **Water Inlet and Outlet:** For connecting water supply and drainage.

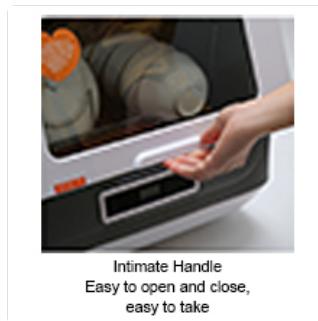


Figure 3.3: Intimate Handle for easy opening and closing.



Figure 3.4: Lumen Structure for high-pressure washing.



Figure 3.5: Removable and Washable Filter for efficient filtration.

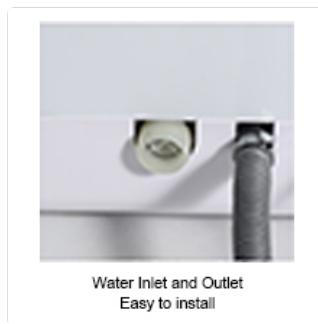


Figure 3.6: Water Inlet and Outlet for easy installation.

4. SETUP AND INSTALLATION

The Gdrasuya10 Portable Countertop Dishwasher is designed for easy setup without the need for complex modifications.

Placement:

Place the dishwasher on a stable, level countertop near a water source and drain. Ensure there is adequate space around the unit for ventilation and access.

Connecting Water Hoses:

1. Connect the water inlet hose to a suitable water tap.

2. Connect the drain hose to a sink or a dedicated drain.
3. Ensure all connections are secure to prevent leaks.



Figure 4.1: Installation options, including desktop placement and embedded installation, demonstrating no drilling or cabinet modification is required.

5. OPERATING INSTRUCTIONS

Loading Dishes:

Arrange dishes in the racks, ensuring they do not block the spray arms. Place bowls and cups upside down. Cutlery should be placed in the designated basket.

Your browser does not support the video tag.

Video 5.1: Demonstration of loading dishes into the Gdrasuya10 Portable Countertop Dishwasher, showing proper arrangement for effective cleaning.

Adding Detergent:

This model does not feature a dedicated detergent dispenser. Add a small amount of liquid or gel dishwasher detergent directly to the bottom of the dishwasher tub before starting a wash cycle. Avoid using excessive amounts to prevent oversudsing.

Selecting a Wash Program:

The dishwasher offers three main wash programs:

- **Quick Wash (30 minutes / 55°C):** For lightly soiled dishes.
- **Standard Wash (40 minutes / 60°C):** For normally soiled dishes.
- **Power Wash (50 minutes / 65°C):** For heavily soiled dishes and pots.

Select the desired program using the touch panel controls.

• 3-in-1 Washing Modes •



30mins/55°C
Fast Washing



40mins/60°C
Standard Washing



50mins/65°C
Strong Washing



Temperature



! The package does not include any tableware.

Figure 5.1: Display of the three intelligent wash modes available on the dishwasher, indicating duration and temperature for each.

Starting the Dishwasher:

1. Load dishes and add detergent.
2. Close the lid securely.
3. Select your desired wash program.
4. Press the 'Start/Pause' button to begin the cycle.

Your browser does not support the video tag.

Video 5.2: Demonstration of the dishwasher's display and controls during operation, showing program selection and start sequence.

6. MAINTENANCE AND CLEANING


Regular maintenance ensures optimal performance and longevity of your dishwasher.

Cleaning the Filter:

The dishwasher features a removable filter to collect food particles. Clean the filter regularly to prevent blockages and ensure efficient washing.

1. Turn off and unplug the dishwasher.
2. Open the lid and locate the filter at the bottom of the tub.
3. Twist and lift the filter to remove it.
4. Rinse the filter under running water to remove any trapped food debris. Use a brush if necessary.
5. Reinsert the clean filter and twist to secure it in place.

• More Details •

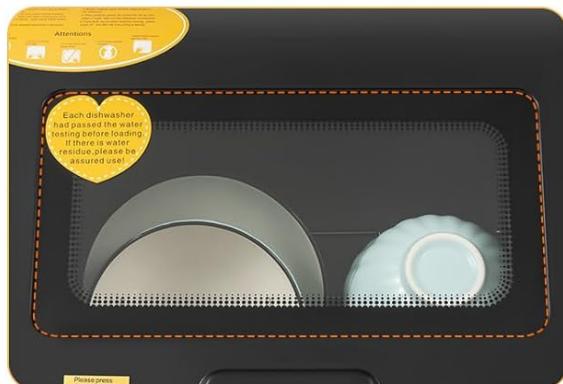

Transparent Design

See Working Status and Progress at a Glance



Stainless Steel Frame

Wear and High-temperature Preventions



Practical Filter

Easy to Dump Food Scraps



Flip-up Lid

Easy to Open and Close by Hand

⚠ The package does not include any tableware.

Figure 6.1: Close-up of the practical filter, designed for easy removal and cleaning of food scraps.

General Cleaning:

- Wipe the exterior of the dishwasher with a damp cloth.

- Clean the interior periodically with a dishwasher cleaner or a mixture of vinegar and water to remove mineral buildup and odors.
- Ensure the spray arms are free from blockages.

7. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Power outage.	Ensure the power cord is securely plugged in. Close the door firmly until it latches. Check your home's circuit breaker.
Dishwasher displays an error code (e.g., 'E1')	Water supply issue; Drain issue; Internal malfunction.	Check water inlet and drain hoses for kinks or blockages. Ensure water supply is turned on. If the problem persists, contact customer support.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filter.	Reload dishes correctly, ensuring spray arms are not blocked. Clean spray arm nozzles. Add appropriate amount of detergent. Clean the filter as described in Section 6.
Water not draining	Clogged drain hose; Clogged filter; Drain pump issue.	Check and clear any blockages in the drain hose. Clean the filter. If the issue continues, professional service may be required.

8. SPECIFICATIONS

Feature	Detail
Model Number	HG-HJWJL-4128-Z
Brand	Gdrasuya10
Dimensions (L x W x H)	17.72 x 15.75 x 17.6 inches (45 x 40 x 44.7 cm)
Item Weight	23.1 pounds (10.5 Kilograms)
Voltage	110 Volts
Capacity	7.8 Liters (approx. 2 gallons)
Wash Programs	4 (Quick Wash, Standard Wash, Power Wash, Fruit Wash)
Installation Type	Countertop
Material	Glass (door), ABS (finish)
Special Feature	High-efficiency

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for warranty claims.

