

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [ASPES](#) /
- › ASPES ALF2106 6kg Washing Machine User Manual

ASPES ALF2106

ASPES ALF2106 6kg Washing Machine User Manual

Model: ALF2106 | Brand: ASPES

INTRODUCTION

This user manual provides essential information for the correct installation, safe operation, and proper maintenance of your new ASPES ALF2106 6kg washing machine. Please read these instructions carefully before using the appliance to ensure optimal performance and to prevent damage or injury. Keep this manual for future reference.

SAFETY INFORMATION

Always adhere to the following safety precautions to reduce the risk of fire, electric shock, injury to persons, or damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded electrical outlet. Do not use extension cords or adapters. Disconnect the power supply before any cleaning or maintenance.
- **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all hose connections are tight to prevent leaks.
- **Installation:** The appliance must be installed on a firm, level surface. Remove all transit bolts before operation to prevent severe vibration and damage.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow children to play with the washing machine.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents) as they give off vapors that could ignite or explode.
- **Appliance Use:** This appliance is intended for household use only. Do not attempt to repair or replace any part of the washing machine unless specifically recommended in this manual.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your ASPES ALF2106 washing machine.



Figure 1: Front view of the ASPES ALF2106 washing machine. This image displays the appliance's white exterior, the front-loading door with a visible drum, the detergent dispenser drawer on the top left, and the control panel with a program selection dial and digital display on the top right. A circular access panel for the drain filter is located at the bottom right.

Main Components:

- **Detergent Dispenser Drawer:** Located on the top left, used for adding detergent and fabric softener.
- **Control Panel:** Positioned on the top right, featuring a program selection dial, a digital display, and various function buttons.
- **Door:** The large circular door on the front for loading and unloading laundry.
- **Drum:** The inner cylinder where laundry is washed.
- **Drain Filter Access:** A small circular cover at the bottom right, providing access to the drain pump filter for cleaning.

INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine.

1. Unpacking and Transit Bolts Removal:

- Carefully remove all packaging materials.
- Locate and remove the transit bolts from the rear of the machine. These bolts secure the drum during transport and **must** be removed before use. Keep them for future transport.

2. Leveling the Appliance:

- Place the washing machine on a solid, level floor.
- Adjust the adjustable feet at the bottom of the machine until it is perfectly level and stable. Use a spirit level to verify.

3. Water Connection:

- Connect the supplied inlet hose to the cold water tap and to the water inlet valve on the back of the machine. Ensure a tight seal.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. The drain hose should not be kinked or obstructed.

4. Electrical Connection:

- Plug the power cord into a grounded 220V electrical outlet.
- Do not use multi-plugs or extension cords.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your washing machine.

1. Preparing Laundry:

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers or hooks to prevent damage.

2. Loading Laundry:

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 6kg.
- Close the door firmly until it clicks.

3. Adding Detergent and Softener:

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment (usually marked 'II').
- If desired, add fabric softener to the designated compartment (usually marked with a flower symbol).
- Close the dispenser drawer gently.

4. Selecting a Wash Program:

- Turn the program selection dial on the control panel to choose the desired wash program (e.g., Cotton, Synthetics,

Wool, Quick Wash, Spin).

- The digital display will show the default temperature and spin speed for the selected program.
- Use the option buttons (if available) to adjust temperature, spin speed, or add extra rinses as needed.

5. Starting the Wash Cycle:

- Press the Start/Pause button to begin the wash cycle.
- The machine will automatically proceed through the selected program.
- To pause a cycle, press the Start/Pause button again. Press it once more to resume.

6. End of Cycle:

- The machine will signal the end of the cycle (e.g., with a sound or display message).
- Open the door and remove the laundry promptly to prevent creasing.
- Leave the door slightly ajar to allow the drum to air dry and prevent odors.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your washing machine.

1. Cleaning the Detergent Dispenser Drawer:

- Pull the drawer out completely.
- Remove any removable inserts and rinse all parts under running water to remove detergent residue.
- Clean the drawer housing with a brush.
- Reassemble and reinsert the drawer.

2. Cleaning the Drum:

- Periodically run a maintenance wash (e.g., a hot wash cycle with no laundry and a descaling agent or washing machine cleaner) to prevent odor and mold buildup.

3. Cleaning the Drain Pump Filter:

- **Warning:** Ensure the machine is unplugged and cool before cleaning the filter.
- Open the access panel at the bottom right of the machine.
- Place a shallow container beneath the filter to catch residual water.
- Slowly unscrew the filter counter-clockwise.
- Remove any lint, coins, or foreign objects.
- Rinse the filter under running water.
- Screw the filter back in clockwise until tight, ensuring a proper seal. Close the access panel.

4. Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the door seal regularly to remove any trapped debris or mold.

TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Machine does not start.	No power supply; Door not closed properly; Program not selected; Start button not pressed.	Check power plug and fuse; Ensure door is firmly closed; Select a program; Press the Start button.
Water does not fill.	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open the water tap; Straighten the hose; Check household water pressure.
Water does not drain.	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten the drain hose; Clean the drain pump filter (refer to Maintenance section).
Excessive vibration during spin cycle.	Transit bolts not removed; Machine not level; Uneven load in drum.	Remove transit bolts; Adjust leveling feet; Redistribute laundry evenly in the drum.
Detergent residue in dispenser.	Insufficient water pressure; Detergent dispenser clogged.	Check water pressure; Clean the detergent dispenser drawer.

If the problem persists after attempting these solutions, please contact qualified service personnel.

SPECIFICATIONS

Key technical specifications for the ASPES ALF2106 washing machine.

Feature	Specification
Brand	ASPES
Model Number	ALF2106
Capacity	6 Kilograms
Spin Speed	1000 rpm
Dimensions (L x W x H)	60 x 80 x 82 cm
Weight	64 Kilograms
Voltage	220 Volts
Special Feature	Inverter Motor
Loading Type	Frontal (Front Load)
Color	White
Interface Input	Buttons

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card provided with your appliance or contact your retailer. Keep your proof of purchase for any warranty claims.

For spare parts availability, please consult your retailer or the manufacturer's official support channels, as information on

spare parts availability is not provided in this document.