

[Manuals.plus](#) /

> [CAZOKASI](#) /

> CAZOKASI 9 Inch White Digital Clock User Manual

CAZOKASI 9 Inch White

CAZOKASI 9 Inch White Digital Clock User Manual

Model: 9 Inch White

PRODUCT OVERVIEW

The CAZOKASI 9 Inch White Digital Clock is designed for clear and versatile time display, featuring multiple user interfaces and automatic brightness adjustment. It includes extensive alarm and reminder functions, making it suitable for various users, including the elderly and children.



Image: The CAZOKASI 9 Inch White Digital Clock, showing its main display and a remote control. The display clearly shows "SATURDAY MORNING 10:46 AM MAY 16 2022". Below it are three smaller examples of different display interfaces.

KEY FEATURES

- **3 User Interface (UI) Displays:** Offers UI-1 for large, non-abbreviated fonts (ideal for elderly), UI-2 as a wall clock, and UI-3 with a colorful display for younger users.
- **Large Font and High Contrast:** Ensures clear visibility of 12/24H time, AM/PM, date, week, month, and year.
- **Automatic Brightness:** Adjusts display brightness automatically for optimal viewing during the day and to prevent glare at night.
- **Multiple Alarms and Reminders:** Features 5 alarms and 3 medicine reminders to assist with daily schedules.
- **Ultra-wide Viewing Angle:** Provides clear visibility from various angles.
- **Power-off Memory:** Retains settings and automatically updates to the current time upon power restoration.
- **Multi-language Support:** Supports 10 country system languages.



Image: Rear view of the digital clock showing ports and a kickstand, with icons and text highlighting features like high contrast, 10 languages, 5 alarms/3 reminders, and power-off memory.

SETUP GUIDE

1. Unpacking and Placement

Carefully remove the clock and all accessories from the packaging. Place the clock on a stable, flat surface or mount it on a wall using the integrated mounting holes. Ensure it is within reach of a power outlet.



Image: The digital clock mounted on a wall in a living room setting, demonstrating its use as a large wall clock.

2. Power Connection

Connect the provided power adapter to the DC input port on the back of the clock. Plug the adapter into a standard electrical outlet. The clock will power on automatically.

3. Initial Setup (Time and Date)

Upon first power-on or after a prolonged power outage, the clock may require time and date adjustment. Use the remote control or buttons on the back of the clock to navigate the settings menu. Refer to the "Operating Instructions" section for detailed steps on setting time, date, and other preferences.

OPERATING INSTRUCTIONS

1. Navigating Display Modes (UI)

The clock offers three distinct user interfaces. Use the dedicated UI button on the remote control or the clock itself to cycle through UI-1 (large font), UI-2 (wall clock style), and UI-3 (colorful display).



Image: The digital clock displaying its three distinct user interfaces: a large black and white display, a classic analog clock face, and a colorful digital display.

2. Setting Time and Date

1. Press the "Menu" button on the remote control.
2. Navigate to "Time Settings" using the arrow keys.

3. Adjust the hour, minute, year, month, and day using the number keys or arrow keys.
4. Select 12-hour or 24-hour format as desired.
5. Press "OK" or "Exit" to save settings.

3. Alarm Settings

The clock supports up to 5 alarms. Each alarm can be set with a specific time and recurrence (e.g., once, daily, weekdays).

1. From the main menu, select "Alarm Settings".
2. Choose an alarm (Alarm 1-5) to configure.
3. Set the alarm time, status (On/Off), and mode (Once, Daily, Weekdays, Weekends).
4. Adjust alarm volume if applicable.
5. Save changes.



Image: A close-up of the clock's display showing the interface for setting up to 5 alarms and 3 medication reminders, with options for time, status, and mode.

4. Medication Reminders

The clock provides 3 dedicated medication reminders (Morning, Afternoon, Evening Medicine).

1. Navigate to "Medication Reminder Settings" in the menu.
2. Select the reminder (Morning, Afternoon, Evening).
3. Set the desired time and status (On/Off).
4. Save changes.

5. Brightness Adjustment

The clock features automatic brightness adjustment. If manual adjustment is desired, refer to the "Display Settings" menu to override automatic mode or fine-tune brightness levels.

6. Language Selection

To change the display language, go to "Language Settings" in the menu and select from the available 10 country system languages.

MAINTENANCE

To ensure the longevity and optimal performance of your CAZOKASI Digital Clock, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the display and casing. Avoid abrasive cleaners, solvents, or spray directly onto the clock.
- **Placement:** Keep the clock away from direct sunlight, extreme temperatures, high humidity, and strong magnetic fields.
- **Power:** Always use the original power adapter. Disconnect power during electrical storms or if the clock will be unused for extended periods.
- **Battery Backup:** The clock includes a lithium metal battery for power-off memory. This battery is not user-replaceable for general operation and primarily serves to retain settings during brief power interruptions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power; power adapter disconnected or faulty.	Ensure power adapter is securely connected to the clock and a working electrical outlet. Check the outlet with another device.
Time/Date is incorrect.	Not set correctly; power interruption.	Manually set the time and date using the operating instructions. The clock has power-off memory, but significant power outages may require re-sync.
Alarms/Reminders not sounding.	Alarm/Reminder is off; volume too low; incorrect time set.	Verify that the alarm/reminder is enabled ("On") in settings. Check the volume level. Confirm the set time for the alarm/reminder.
Display is too dim or too bright.	Automatic brightness adjustment; manual override.	The clock features automatic brightness. If you prefer a different setting, adjust it in the "Display Settings" menu.
Remote control not working.	Battery depleted; obstruction; not pointed at sensor.	Replace the remote control battery. Ensure there are no obstructions between the remote and the clock's IR sensor. Point the remote directly at the clock.

SPECIFICATIONS

Brand: CAZOKASI

Model: 9 Inch White

Display Type: Digital

Product Dimensions: 6.14"W x 9.56"H

Power Source: Corded Electric

Material: Acrylonitrile Butadiene Styrene (ABS)

Mounting Type: Wall Mount, Tabletop (with stand)

Item Weight: 0.5 Kilograms (1.1 pounds)

Battery (for backup): 1 Lithium Metal battery (included)

Special Features: Alarm, Calendar Display, Auto Dimmable, Multi-UI, Medication Reminders, Ultra-wide Viewing Angle

UPC: 049500028138

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your product packaging

or visit the official CAZOKASI website. Keep your purchase receipt for warranty claims.

For technical assistance or inquiries not covered in this manual, please contact CAZOKASI customer service.