

[Manuals.plus](#) /

› [VASAGLE](#) /

› VASAGLE Extendable Garment Rack RGR110B01 Instruction Manual

VASAGLE RGR110B01

VASAGLE Extendable Garment Rack

Model: RGR110B01 - Instruction Manual

1. INTRODUCTION

Thank you for choosing the VASAGLE Extendable Garment Rack, Model RGR110B01. This industrial-style clothing rack is designed to provide robust and versatile storage for your garments, shoes, and accessories. Featuring a durable steel frame, rustic brown particleboard shelf, and smooth-rolling wheels, it offers both functionality and aesthetic appeal. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of your new garment rack.



Image 1.1: The VASAGLE Extendable Garment Rack (Model RGR110B01) featuring its industrial design with black steel pipes and a rustic brown base.

2. SAFETY INSTRUCTIONS

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Assembly:** Assemble the product on a soft, clean surface to prevent scratches. Ensure all parts are present and undamaged before beginning assembly. Do not overtighten screws.
- **Stability:** Ensure the garment rack is placed on a flat, stable surface. Lock the wheels when the rack is in its desired position to prevent accidental movement.
- **Weight Capacity:** Do not exceed the maximum weight capacities for each section:

- Central top bar: 27 kg (59.5 lbs)
- Extendable ends: 9 kg (19.8 lbs) per end
- Bottom shelf: 81 kg (178.6 lbs)

Overloading can cause damage to the product or lead to injury.

- **Children:** Keep small parts away from children during assembly. This product is not a toy.
- **Movement:** When moving the rack, ensure the wheels are unlocked and move it slowly to prevent items from falling.
- **Maintenance:** Regularly check all connections and tighten them if necessary to maintain stability.



Image 2.1: Diagram illustrating the weight capacities for the garment rack's components: 9 kg for each extended end, 27 kg for the central bar, and 81 kg for the bottom shelf.

3. PACKAGE CONTENTS

Before starting assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- 1 x Garment Rack (disassembled components)
- 1 x Assembly Kit (screws, wrench, etc.)
- 1 x Instruction Manual



Image 3.1: Exploded diagram showing all individual parts of the garment rack, including pipes, connectors, the wooden base, and wheels, along with labeled hardware.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your VASAGLE Garment Rack. It is recommended to have two people for assembly.

1. **Prepare the Base:** Lay the rustic brown particleboard shelf (C) on a soft, flat surface. Attach the four wheel assemblies (W) to the designated holes on the underside of the shelf using the provided screws. Ensure two of the wheels with brakes are positioned on the same side for easy access.
2. **Install Lower Pipe Supports:** Connect the short pipe sections (A) to the base of the vertical support pipes (D and E) using the appropriate connectors. Secure these assemblies to the shelf (C) as indicated in the diagram.
3. **Assemble Vertical Pipes:** Attach the longer vertical pipe sections (D and E) to the lower pipe supports already fixed to the base. Ensure they are firmly connected.
4. **Connect Top Bar:** Attach the horizontal top bar (G) to the upper ends of the vertical pipes (D and E) using the provided connectors.
5. **Install Extendable Bars:** Insert the two extendable bars (H) into the ends of the horizontal top bar (G). These bars can be pulled out to extend the hanging space.
6. **Final Check:** Once assembled, gently shake the rack to ensure all connections are secure and stable. Tighten any loose screws if necessary.



Image 4.1: Detailed view showing the connection points of the pipes, the adjustable extension bar, and the secure attachment of the pipes to the wooden base.



Image 4.2: Close-up of one of the garment rack's wheels, showing the locking mechanism for stability.

5. OPERATING INSTRUCTIONS

Your VASAGLE Garment Rack is designed for ease of use and versatility.

- **Hanging Garments:** Use the main horizontal bar to hang clothes on hangers. For additional space, gently pull out the extendable bars on either side. Ensure the weight is distributed evenly and does not exceed the specified limits.
- **Bottom Storage:** The rustic brown shelf at the bottom is ideal for storing shoes, bags, storage boxes, or other accessories.
- **Mobility:** To move the garment rack, unlock the two braked wheels by flipping their levers. Push or pull the rack to your desired location. Once in place, lock the wheels to prevent unintended movement.



Image 5.1: The garment rack in a bedroom setting, showcasing its use for hanging clothes, storing shoes on the bottom shelf, and its overall aesthetic appeal.

6. MAINTENANCE

Proper maintenance will extend the life of your garment rack.

- **Cleaning:** Wipe down the steel pipes and particleboard shelf with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Tightening:** Periodically check all screws and connections to ensure they remain tight. Retighten if any looseness is detected to maintain the rack's stability.
- **Environment:** Avoid placing the rack in excessively humid environments or direct sunlight for prolonged periods, which could affect the particleboard.

7. TROUBLESHOOTING

If you encounter any issues with your garment rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Loose connections; uneven surface; overloaded.	Ensure all screws are tightened. Move the rack to a flat, level surface. Reduce the load to within specified weight limits.
Wheels do not roll smoothly.	Debris in wheels; wheels locked.	Check for and remove any debris (hair, lint) from the wheel casters. Ensure the wheel brakes are disengaged.
Extendable bars are stiff.	Dust or friction.	Clean the sliding surfaces of the extendable bars. A small amount of silicone spray (avoiding contact with clothes) can be applied if needed.

8. SPECIFICATIONS

Detailed specifications for the VASAGLE Extendable Garment Rack RGR110B01:

Brand	VASAGLE
Model Number	RGR110B01
Color	Rustic Brown + Black
Materials	Particleboard, Steel
Dimensions (L x W x H)	(110-168) x 40 x 160 cm (43.3-66.1 x 15.7 x 63 inches)
Product Weight	12.4 kg (27.3 lbs)
Max. Static Load Capacity (Central Bar)	27 kg (59.5 lbs)
Max. Static Load Capacity (Extendable Ends)	9 kg (19.8 lbs) per end
Max. Static Load Capacity (Bottom Shelf)	81 kg (178.6 lbs)
Total Max. Static Load Capacity	138.5 kg (305.3 lbs)
Installation Method	Freestanding
Special Features	Adjustable, Rustic, Robust, Industrial Style, Mobile with Locking Wheels



Image 8.1: Diagram showing the key dimensions of the garment rack, including height (160 cm), width (110 cm, extendable by 29 cm on each side), and depth (40 cm).

9. WARRANTY AND SUPPORT

For any questions, missing parts, or issues not covered in this manual, please contact VASAGLE customer support. Refer to your purchase documentation for specific warranty details and contact information.

You can also visit the official VASAGLE brand store for more information and product support: [VASAGLE Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question