

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pinolino](#) /

› [Pinolino Kalle Children's Play Kitchen User Manual](#)

Pinolino 229462

Pinolino Kalle Children's Play Kitchen

MODEL: 229462 - USER MANUAL

Product Overview

The Pinolino Kalle Children's Play Kitchen is a versatile and engaging toy designed for young children aged 3 years and older. This mobile kitchen cart, crafted from partially solid lime wood and MDF with transparent and colored varnish, provides a realistic play experience. It includes a kitchen cart, two pots, and three pieces of cooking cutlery. Key features include a stainless steel sink, rotating knobs with click sounds, and a drawing board, fostering creativity and imaginative play.



Image: The Pinolino Kalle Children's Play Kitchen, showcasing its pastel green and natural wood design, complete with sink, stovetop, and chalkboard.

Setup and Assembly

The Pinolino Kalle Play Kitchen requires assembly. While designed for straightforward setup, having an extra pair of hands can be beneficial. Ensure all components are present before beginning assembly.

Components Included:

- 1 x Kitchen Cart
- 2 x Pots
- 3 x Cooking Cutlery pieces

- Rubberized wooden wheels and steel axles

Recommended Tools (not included):

- Screwdriver (manual or cordless drill recommended for ease of assembly)

Assembly Steps:

1. Unpack all components and verify against the parts list in the included assembly instructions.
2. Follow the step-by-step diagrams provided in the manufacturer's assembly guide. Pay close attention to screw lengths and hole alignments to prevent damage.
3. Attach the rubberized wooden wheels to the base of the kitchen cart using the steel axles. Ensure they are securely fastened for smooth mobility.
4. Assemble the main kitchen structure, including the stovetop, sink area, and oven compartment.
5. Install the rotating knobs, ensuring they produce the intended click sound when turned.
6. Attach the utensil rack and place the cooking cutlery.
7. Ensure all screws are tightened, but do not overtighten to avoid stripping the wood.



Image: A child pushing the Pinolino Kalle Play Kitchen, demonstrating its mobility thanks to the rubberized wooden wheels.

Operating Instructions

The Pinolino Kalle Play Kitchen is designed for interactive and imaginative play. It is recommended for children aged 3 years and above.

Key Play Features:

- **Stovetop and Oven:** The play kitchen features a stovetop area and an oven compartment. The rotating knobs provide a realistic click sound, simulating cooking adjustments.
- **Sink:** The stainless steel sink allows for pretend dishwashing and water play (without actual water).
- **Utensil Rack:** Store the included cooking cutlery on the integrated rack for easy access during play.
- **Chalkboard:** The side of the kitchen cart features a drawing board, encouraging artistic expression and creativity. Use standard chalk (not included) for drawing.
- **Mobility:** The rubberized wooden wheels allow the kitchen to be easily moved around, enabling play in various locations.



Image: A child actively engaging with the Pinolino Kalle Play Kitchen, using the sink and stovetop area for imaginative cooking scenarios.



Image: A detailed view of the rotating knobs on the Pinolino Kalle Play Kitchen, highlighting their design and functionality.



Image: A child using the integrated chalkboard on the side of the Pinolino Kalle Play Kitchen, demonstrating its creative play feature.

Maintenance and Care

Proper care will ensure the longevity of your Pinolino Kalle Play Kitchen. As a wooden toy, it requires specific attention to maintain its condition.

- Cleaning:** Wipe surfaces with a slightly damp cloth. Avoid using harsh chemical cleaners or abrasive materials, as these can damage the wood and varnish.
- Drying:** After cleaning, immediately dry the surfaces with a clean, dry cloth to prevent moisture absorption into the wood.
- Storage:** Store the play kitchen in a dry environment, away from direct sunlight and extreme temperature fluctuations, which can cause wood to warp or crack.
- Chalkboard Care:** Use only standard chalk on the chalkboard. Clean with a damp cloth and dry thoroughly.
- Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten as necessary, but do not overtighten.

Troubleshooting

This section addresses common concerns and provides solutions for minor issues you might encounter with your Pinolino Kalle Play Kitchen.

Problem	Possible Cause	Solution
Knobs do not click or feel loose.	Loose attachment during assembly or wear from frequent use.	Check the assembly of the knobs. Ensure they are properly seated and secured according to the assembly instructions. If damaged, contact customer support for replacement parts.
Faucet or pan handles become loose or break.	Excessive force during play or impact from dropping.	Encourage gentle play. If parts are loose, attempt to re-secure them if possible. For broken parts, contact Pinolino customer support for assistance or replacement.
Wheels do not roll smoothly or make noise.	Debris caught in wheels or loose axle.	Check wheels for any obstructions and remove them. Ensure the steel axles are securely fastened and not bent.

Specifications

Feature	Detail
Model Number	229462
Dimensions (L x W x H)	45 cm x 48 cm x 58 cm (17.7 x 18.9 x 22.8 inches)
Worktop Dimensions (L x W)	37 cm x 30 cm (14.6 x 11.8 inches)
Worktop Height	40 cm (15.7 inches)
Weight	6.9 kg (approximately 15.2 lbs)
Main Material	Partially solid lime wood and MDF
Finish	Transparent and colored varnish

Feature	Detail
Recommended Age	From 3 years
Included Accessories	2 pots, 3 cooking cutlery pieces
Special Features	Stainless steel sink, rotating knobs with click sound, drawing board, rubberized wooden wheels

Warranty and Support

Pinolino is committed to providing high-quality children's products. While specific warranty details are not provided in this manual, Pinolino has been realizing children's dreams since 1997 and is known for using child-friendly varnishes, glazes, and oils.

For any questions regarding assembly, missing parts, product defects, or general inquiries, please contact Pinolino customer support directly. Refer to the packaging or the manufacturer's official website for the most current contact information.


When contacting support, please have your product model number (229462) and purchase details ready to facilitate a quicker resolution.

© 2024 Pinolino. All rights reserved.


This manual is for informational purposes only. Pinolino reserves the right to make changes to the product or manual without prior notice.

Related Documents - 229462

 <p>Aufbauanleitung Assembly plan Instructions de montage Instrucciones de montaje Instruktionen zur Montage Montagevoorschrift Puppenwagen 'Sarah' Doll pram 'Sarah' für Puppen aus Holz Carrito para muñecas de madera Carriola per bambole in legno Carriola per bambole de madeira Carriola per bambole de madeira Art. Nr. • Art. No. • N° d'art. 229462-01</p>	<p>Pinolino Doll's Pram 'Sarah' - Assembly Instructions and Product Information</p> <p>Comprehensive assembly instructions, safety guidelines, product details, and warranty information for the Pinolino Doll's Pram 'Sarah'. Learn how to assemble, care for, and register your wooden toy pram.</p>
 <p>Aufbauanleitung Assembly plan Instructions de montage Instrucciones de montaje Instruktionen zur Montage Montagevoorschrift Jojo Laufrad 'Charlie' Jojo balance bike 'Charlie' • Mini-laufdreirad 'Charlie' • Mini-velo 'Charlie' • Mini-roue 'Charlie' Art. Nr. • Art. No. • N° d'art. 229462-02</p>	<p>Pinolino Jojo Trainer Bike Assembly and Safety Guide</p> <p>Comprehensive assembly instructions, safety guidelines, maintenance tips, and product specifications for the Pinolino Jojo trainer bike. Learn how to safely build and use your child's balance bike.</p>
 <p>Aufbauanleitung Assembly plan Instructions de montage Instrucciones de montaje Instruktionen zur Montage Montagevoorschrift Charlie Laufrad 'Charlie' Charlie balance bike 'Charlie' • Mini-laufdreirad 'Charlie' • Mini-velo 'Charlie' • Mini-roue 'Charlie' Art. Nr. • Art. No. • N° d'art. 229462-03</p>	<p>Pinolino Charlie Balance Bike Assembly Instructions and Guide</p> <p>Official assembly guide for the Pinolino Charlie balance bike (Mini-Laufdreirad 'Charlie'). Includes detailed safety instructions, a comprehensive parts list, step-by-step assembly diagrams described textually, and conversion options to a trainer bike, trike, or chopper. Learn how to build and safely use your child's Pinolino ride-on toy.</p>

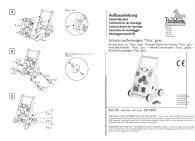	<p>Pinolino Activity Push Car 'Titus' Grey - Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions, safety warnings, and maintenance tips for the Pinolino Activity Push Car 'Titus' in grey. Learn how to safely build and use this children's toy, including parts lists, step-by-step guidance, and product specifications.</p>
	<p>Pinolino Lumi Cot Bed Assembly Instructions</p> <p>Comprehensive assembly instructions for the Pinolino Lumi cot bed, including safety guidelines, maintenance tips, and customer service information.</p>
	<p>Produktkatalog: Elektronik, Spielzeug, Haushalt & mehr</p> <p>Entdecken Sie eine breite Auswahl an Produkten, darunter Elektronik, Spielzeug, Haushaltswaren und Zubehör. Finden Sie hochwertige Artikel von führenden Marken.</p>

Documents - Pinolino – 229462

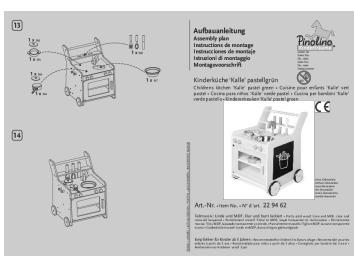

[\[pdf\] Instructions](#)

ab 229462 200918 kinderkueche kalle pastellgruen de en fr es it nl mp 1w a4 l brius pinolino windeln s3 amazonaws 71042 |||
 13 1 x N6 1 x N5 1 x N6 1 x N4 14 STAND UPDATE ACTUALISATION PUESTO
 AGGIORNATO BIJGEWERKT: 18.09.20 1 x N8 1 x N7 Aufbauanleitung Assembly
 plan Instructions de montage Instrucciones de montaje Istruzioni di montaggio
 Montagevoorschrift Serien Nr. Serial No. No. serie Serie No. No. serie Seri...
 lang:de score:25 filesize: 1.65 M page_count: 8 document date: 2020-09-18