

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AUNA](#) /

› [Auna Soundblaster DAB Boombox User Manual](#)

AUNA Soundblaster DAB

Auna Soundblaster DAB Boombox User Manual

Model: Soundblaster DAB

1. INTRODUCTION

Thank you for choosing the Auna Soundblaster DAB Boombox. This device combines a classic boombox design with modern audio features, including DAB+/FM radio, CD player, Bluetooth connectivity, USB/SD playback, and an integrated Music2Light LED system. This manual provides essential information for safe operation, setup, and maintenance of your device. Please read it carefully before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions before operating the device.
- Keep the device away from water, moisture, and direct sunlight.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking:

- Auna Soundblaster DAB Boombox
- Remote Control
- Power Adapter (AC cable)
- User Manual


4. PRODUCT OVERVIEW

4.1 Front and Top Panel Controls

Familiarize yourself with the main controls and features of your Soundblaster DAB Boombox.



Display

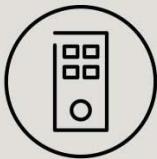

Remote Control



SEMPLICE UTILIZZO

Lettore multimediale con intuitivo display LCD e telecomando

Front view of the Auna Soundblaster DAB Boombox, highlighting the LCD display and various control buttons for media playback and mode selection.

TOP LOADING

Lettore CD superiore per
CD-Mp3 e audio, CD-R e CD-R/W



The top-loading CD player compartment, designed for easy insertion and removal of CDs.

4.2 Connectivity Ports


The boombox offers multiple connectivity options for various audio sources.



Detailed view of the USB port, SD card slot, and 3.5mm AUX input, providing versatile options for external media playback.

4.3 Speakers and Bass Boosters

The device features powerful audio output for an immersive listening experience.

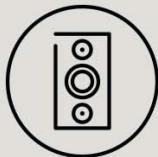

Speaker

SOUND POTENTE

Due casse stereo attive da 50 Watt max. di potenza e due bass-booster passivi sui lati

Side view of the boombox, highlighting the passive bass booster labeled 'SUPER BASS' for enhanced low-frequency sound.

4.4 Music2Light LED System

The integrated LED system provides dynamic light effects synchronized with your music.



THE BEAT OF LIGHT

Sistema a LED integrato *Music2Light* con 7 colori, modalità di variazione cromatica e controllo della musica

The boombox displaying its Music2Light LED system, which offers 7 colors and various modes to enhance the audio experience visually.

4.5 Portability

Designed for convenience, the boombox can be powered by batteries for portable use.



Battery



Portable

SEMPRE INSIEME

Grazie al funzionamento indipendente
a batteria e al manico

Rear view of the boombox, illustrating the battery compartment and the integrated carry handle for easy transport.

5. SETUP

5.1 Power Connection

Your Soundblaster DAB Boombox can be powered by AC mains or batteries.

- **AC Power:** Connect the supplied AC power adapter to the DC IN jack on the back of the unit and then to a standard wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the back of the unit and insert the required number of batteries (type not specified, refer to device markings for correct battery type and polarity).

5.2 Antenna

Extend the telescopic antenna fully for optimal DAB+ and FM radio reception.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the unit or remote control to turn the boombox on or off.

6.2 Mode Selection

Press the **MODE** button repeatedly to cycle through available modes: CD, USB, SD, Bluetooth, DAB+, FM, AUX.

6.3 CD Playback

1. Open the CD compartment cover on top of the unit.
2. Place a CD (audio CD, CD-R, CD-RW, or MP3 CD) onto the spindle with the label side facing up.
3. Close the CD compartment cover.
4. Select **CD** mode. The CD will begin playing automatically.
5. Use **PLAY/PAUSE**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for control.

6.4 USB/SD Playback

1. Insert a USB flash drive into the **USB** port or an SD card into the **SD CARD** slot.
2. Select **USB** or **SD** mode.
3. The device will automatically detect and play compatible audio files (e.g., MP3).
4. Use **PLAY/PAUSE**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for control.

6.5 Bluetooth Pairing

1. Select **Bluetooth** mode. The display will show "BT" and the device will enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet), search for available devices.
3. Select "Auna Soundblaster DAB" from the list.
4. Once paired, you can stream audio from your device to the boombox.

6.6 DAB+ Radio

1. Extend the telescopic antenna.
2. Select **DAB+** mode.
3. The unit will automatically scan for available DAB+ stations.
4. Use the **TUNING** knob or **SKIP** buttons to navigate through stations.

6.7 FM Radio

1. Extend the telescopic antenna.
2. Select **FM** mode.
3. Use the **TUNING** knob to manually tune to a station or press and hold **SKIP** buttons for automatic scanning.

6.8 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX IN** jack using a 3.5mm audio cable (not supplied).
2. Select **AUX** mode.
3. Control playback from your external device.

6.9 Music2Light Function

Press the **LIGHT** button to activate or change the LED light effects. Cycle through different colors and modes, including a music-synchronized mode.

6.10 Volume Control

Adjust the volume using the **VOLUME** knob on the unit or the **VOL+ / VOL-** buttons on the remote control.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device before cleaning.
- Use a soft, dry cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents.

7.2 Storage

When not in use for extended periods, store the boombox in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for a long time to prevent leakage.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------|---|---|
| No power | Power cable not connected; Batteries depleted or incorrectly inserted. | Check power cable connection; Replace batteries or ensure correct polarity. |
| No sound | Volume too low; Incorrect mode selected; External device not playing. | Increase volume; Select correct mode (CD, USB, BT, etc.); Ensure external device is playing and connected properly. |
| CD not playing | CD inserted incorrectly; CD is dirty or scratched; CD format not supported. | Reinsert CD correctly; Clean or replace CD; Ensure CD is an audio CD, CD-R, CD-RW, or MP3 CD. |
| Bluetooth pairing fails | Boombox not in pairing mode; Bluetooth device too far; Bluetooth device already paired with another unit. | Ensure boombox is in Bluetooth mode; Move devices closer; Disconnect from other devices and try again. |
| Poor radio reception | Antenna not extended; Weak signal. | Fully extend the telescopic antenna; Reposition the unit for better reception. |

9. SPECIFICATIONS



Dimensions of the Auna Soundblaster DAB Boombox.

| Feature | Detail |
|-------------------------|--|
| Brand | AUNA |
| Model | Soundblaster DAB |
| Manufacturer Reference | KC13-90300-rgwr |
| ASIN | B08RK18M67 |
| Dimensions (LxWxH) | 48 x 20 x 20 cm |
| Weight | 4.1 kg |
| Connectivity Technology | Bluetooth, USB |
| Color | Black |
| Speaker Type | Stereo (with passive bass-boosters) |
| CD Player | Top-loading, supports CD-MP3, audio CD, CD-R, CD-R/W |
| Radio Tuner | DAB+, FM |
| Additional Features | SD card slot, AUX input, Music2Light LED effects (7 colors), LCD display, Remote control |

10. WARRANTY AND SUPPORT

For information regarding product returns or issues with defective/damaged products, please refer to the retailer's return policy or contact their customer support directly. For specific product support or technical assistance, please contact Auna customer service.

You can visit the Auna brand store for more information:[Auna Store](#)