

## Mueller VES1338

# Mueller SuperGrind Electric Burr Coffee Grinder Instruction Manual

Model: VES1338

## 1. PRODUCT OVERVIEW

---

The Mueller SuperGrind Electric Burr Coffee Grinder is designed to provide precise and consistent coffee grounds for various brewing methods. It features a durable burr grinding mechanism, 17 adjustable grind settings, and a capacity for up to 12 cups of coffee.

- **Burr Grinding:** Ensures uniform coffee grounds for optimal flavor extraction.
- **17 Grind Settings:** Adjustable from extra-fine to coarse to suit different brewing preferences.
- **Cup Selector:** Grind enough beans for 2 to 12 cups of coffee.
- **Removable Burr:** Facilitates easy cleaning and maintenance.
- **Capacity:** 5.8oz (164g) coffee bean hopper and 4.8oz (136g) ground coffee container.

## 2. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always unplug the grinder from the power outlet before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Ensure the lid and ground coffee container are properly in place before operating.
- Keep hands and utensils away from moving parts during operation.
- This appliance is for household use only. Do not use outdoors.
- Do not operate the grinder with a damaged cord or plug.
- Supervise children when the appliance is in use.

## 3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the coffee bean hopper lid, ground coffee container, and its lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the motor base with a damp cloth.
3. **Assemble:** Ensure the removable burr is securely placed in the grinding chamber. Place the ground coffee container into its designated slot on the base.



**PREMIUM QUALITY BURR**  
For Consistent & Perfect Grinds Everytime

Image: The burr mechanism, essential for consistent grinding.



COFFEE BEAN  
CHAMBER

Max 5.8oz / 165g

GROUND COFFEE  
CONTAINER

Max 4.8oz / 136g

## LARGE BEAN CHAMBER AND GROUND COFFEE CONTAINER

Grind Enough Beans for Up To 12 Cups of Coffee

Image: Illustration of the coffee bean chamber and ground coffee container.

### 4. OPERATING INSTRUCTIONS

1. **Fill the Bean Hopper:** Open the lid of the coffee bean hopper and pour whole coffee beans into the chamber. Do not exceed the MAX fill line (approximately 5.8oz / 164g). Close the lid securely.
2. **Select Grind Size:** Rotate the grind selector dial to choose your desired fineness. Settings range from 1 (extra-fine) to 17 (coarse). Refer to the grind chart below for recommendations based on brewing method.
3. **Set Cup Quantity:** Rotate the cup selector dial to choose the number of cups you wish to grind, from 2 to 12.
4. **Start Grinding:** Plug the grinder into a power outlet. Press the power button located on the top of the unit to begin grinding. The grinder will automatically stop once the selected quantity is ground.
5. **Remove Ground Coffee:** Once grinding is complete, unplug the unit. Carefully remove the ground coffee container from the base and pour the fresh grounds into your brewing device.



Image: Cup setting and grind level dials on the grinder.

### Coffee Grind Chart

## EXTRA FINE

1-2 Grind Dial

## FINE

3-4 Grind Dial

## MEDIUM-FINE

5-6 Grind Dial

## MEDIUM

7-9 Grind Dial

## MEDIUM-COARSE

10-13 Grind Dial

## COARSE

14-17 Grind Dial

# 17 GRINDING LEVELS



## SUPERB FLAVOR FOR EVERY BREW OF YOUR CHOICE

Image: Visual guide to 17 grind settings and their recommended uses.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Remove Ground Coffee Container:** Empty any remaining ground coffee.
3. **Remove Burr:** Carefully remove the upper burr by twisting it counter-clockwise and lifting it out.
4. **Clean Burr and Chamber:** Use a soft brush (often included) to remove coffee grounds from the burr and the grinding chamber.
5. **Wash Components:** The coffee bean hopper lid, ground coffee container, and its lid can be washed in warm, soapy water. Rinse thoroughly and dry completely before reassembling.
6. **Wipe Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.
7. **Reassemble:** Once all parts are dry, reinsert the burr by aligning it and twisting clockwise until secure. Place the ground coffee container back into its slot.

# Müller



**COMPACT, AUTHENTIC, SIMPLE AND STRONG**  
Just How Coffee Should Be

Image: Removing the burr for cleaning.

## 6. TROUBLESHOOTING

- **Grinder does not start:**
  - Ensure the power cord is securely plugged into a working outlet.
  - Check that the coffee bean hopper lid and ground coffee container are correctly in place. The grinder has safety interlocks that prevent operation if components are not properly assembled.
- **Uneven grind:**
  - Ensure the burr is clean and free of old coffee grounds or debris.
  - Verify that the burr is correctly seated and secured.
- **Beans are not feeding:**
  - Check for any blockages in the bean hopper or grinding chamber.
  - Ensure the beans are not excessively oily, which can cause clumping.

## 7. SPECIFICATIONS

<b>Brand</b>	Mueller
<b>Model Number</b>	VES1338
<b>Color</b>	Black
<b>Material</b>	Stainless Steel
<b>Capacity</b>	164 Grams (Coffee Bean Hopper)
<b>Power Source</b>	Electric
<b>Voltage</b>	230 Volts
<b>Recommended Use</b>	Home

## 8. WARRANTY AND SUPPORT

---

Mueller is committed to providing quality products. If you require assistance or have questions regarding your Mueller SuperGrind Electric Burr Coffee Grinder, please contact our customer support. Our support team is available to assist you with any needs.

For further information or support, please refer to the official Mueller website or contact their customer service directly.