

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Hunter](#) /

> [Hunter Sotto 50976 52-inch Indoor Ceiling Fan with LED Light and Remote Control User Manual](#)

Hunter 50976

Hunter Sotto 50976 52-inch Indoor Ceiling Fan User Manual

Model: 50976

INTRODUCTION


The Hunter Sotto 50976 ceiling fan is designed to provide efficient airflow and illumination for indoor spaces. Featuring a modern design with six blades and an integrated LED light, this fan offers both functionality and aesthetic appeal. Its reversible motor allows for year-round comfort, circulating cool air in summer and warm air in winter. The fan includes a remote control for convenient operation of fan speeds and lighting.

FEATURES

- **Integrated LED Light:** Energy-efficient LED bulbs provide bright, reliable lighting.
- **Indoor Comfort:** 52-inch fan suitable for large rooms such as bedrooms, living rooms, and kitchens.
- **Modern Brushed Nickel Style:** Contemporary design complements various interior decors.
- **Remote Control Operation:** Handheld remote for easy adjustment of fan speed and light settings.
- **SureSpeed Technology:** Delivers faster, more focused airflow with quiet, wobble-free performance.
- **Reversible Motor:** Allows for seasonal use, creating a downdraft in summer and an updraft in winter.
- **Adjustable Mounting System:** Supports standard, low, or angled mounting for versatile installation.

Hunter

WHISPERWIND[®] MOTOR

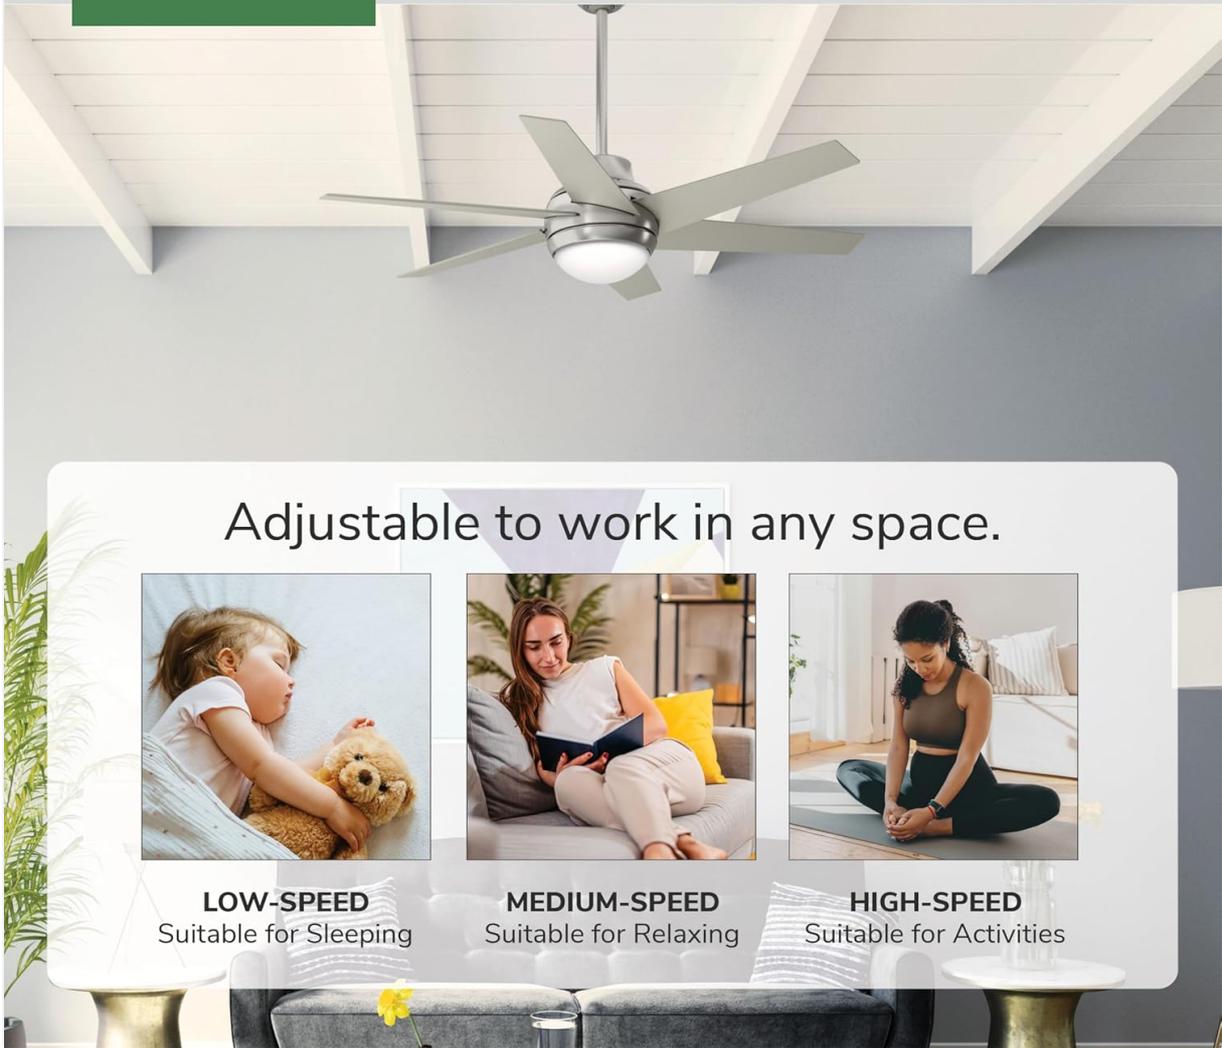


Adjustable to work in any space.



LOW-SPEED
Suitable for Sleeping



MEDIUM-SPEED
Suitable for Relaxing

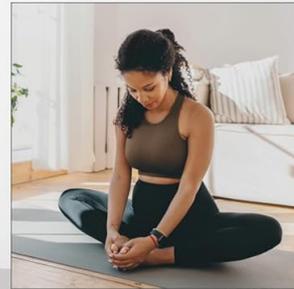

HIGH-SPEED
Suitable for Activities

Image: Hunter Sotto Ceiling Fan with WhisperWind Motor, illustrating low, medium, and high-speed settings suitable for various activities.

Hunter

SAVE ENERGY, SAVE MONEY



Turn up your thermostat 4°F and turn on your fan for consistent comfort.

Image: Hunter Sotto Ceiling Fan highlighting SureSpeed technology for faster cooling power, 33% more air velocity, light powerful motor, and precision blades.

INCLUDED IN THE BOX

The Hunter Sotto 50976 ceiling fan package includes the following components:

Hunter

52
INCHES

SOTTO

2 LED Bulbs



6 Blades



Downrod
3in included



Handheld
Remote



Included In The Box

Image: Diagram showing included components: 2 LED Bulbs, 6 Blades, 3-inch Downrod, and Handheld Remote.

- Fan Motor Assembly
- 6 Fan Blades
- Light Kit with 2 LED Bulbs
- 3-inch Downrod (for standard mounting)
- Handheld Remote Control
- Mounting Hardware
- Instruction Manual

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your ceiling fan. It is recommended to have a qualified electrician perform the installation. Ensure power is disconnected at the circuit breaker before beginning.

Mounting Options:

The Sotto fan offers a three-position mounting system:

- **Standard Mount:** Utilizes the included 3-inch downrod.
- **Low Profile Mount:** For rooms with lower ceilings (requires a 2-inch downrod, typically sold separately or

may be included depending on specific model variant).

- **Angled Mount:** For sloped ceilings (requires a longer downrod, typically sold separately).



Image: Fan Dimensions for 52-inch Sotto fan, showing measurements for Low Profile (2in downrod), Standard (4in downrod), and Angled (36in downrod not included) mounting configurations.

Refer to the detailed installation guide provided in the fan packaging for step-by-step instructions specific to your chosen mounting method.

OPERATING INSTRUCTIONS

Your Hunter Sotto ceiling fan is operated using the included handheld remote control.

Remote Control Functions:

Hunter

REMOTE
INCLUDED



Light dimming



Change speed



Battery included



Image: Handheld remote control for the Hunter Sotto fan, showing buttons for light dimming, changing fan speed, and indicating battery is included.

- **Light Button:** Press to turn the light ON/OFF. Hold to dim the light.
- **Fan Speed Buttons (Up/Down Arrows):** Adjust the fan speed (Low, Medium, High).
- **Fan ON/OFF Button:** Turns the fan on or off.
- **Reversible Motor Switch:** Located on the fan housing, this switch changes the direction of blade rotation.


Seasonal Operation (Reversible Motor):

Hunter
52
INCHES

LARGE ROOM

50976

Fan Design May Vary

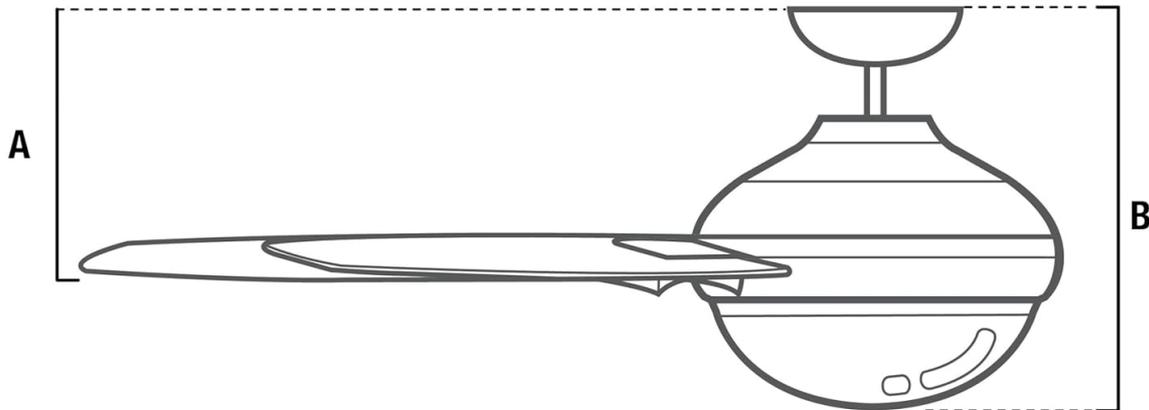

Low Profile:

2 in downrod included

A: 10.47

B: 15.04

Standard:

4 in downrod included

A: 11.47

B: 16.04

Angled:

36in downrod not included

A: 44.47

B: 49.04

Fan Dimensions

Image: Illustration of the reversible multi-speed motor, showing Summer Mode (blades spin counter-clockwise for a downdraft) and Winter Mode (blades spin clockwise on low speed for an updraft).

- **Summer Mode:** Set blades to spin counter-clockwise to create a cooling downdraft.
- **Winter Mode:** Set blades to spin clockwise on low speed to create an updraft, recirculating warm air.

To change the direction, ensure the fan is off and the blades have stopped. Locate the reversible motor switch on the fan housing and slide it to the desired position. Then, turn the fan back on.

Your browser does not support the video tag.

Video: Hunter Fan Company SureSpeed Innovation. This video demonstrates the SureSpeed technology, highlighting the increased airflow velocity compared to other fans.

Your browser does not support the video tag.

Video: Hunter Fan Company Fans. This video showcases various Hunter fans, emphasizing their design and quiet operation, including the Sotto model.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Avoid using abrasive

cleaners that could damage the finish.

- **Blade Screws:** Check blade screws annually to ensure they are tight. Loose screws can cause wobbling and noise.
- **Light Kit:** If the LED light stops working, ensure the power is off before checking connections or replacing the LED module if applicable (consult a professional if unsure).
- **General Inspection:** Periodically inspect all connections and mounting hardware for security.

TROUBLESHOOTING

If you encounter issues with your Hunter Sotto ceiling fan, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wiring; remote control battery dead.	Check circuit breaker. Ensure all wiring connections are secure. Replace remote control battery.
Fan wobbles	Loose blade screws; unbalanced blades; improper mounting.	Tighten all blade screws. Use a balancing kit (often included or sold separately) to balance blades. Recheck mounting hardware.
Light does not work	Loose wire connection; faulty LED bulb/module.	Ensure power is off, then check light kit wiring. If LED module is replaceable, replace it. Contact support if issues persist.
Remote control not working	Dead battery; remote not paired with fan.	Replace battery. Refer to the remote control pairing instructions in the full manual.

SPECIFICATIONS

Attribute	Detail
Brand	Hunter
Model Name	Sotto
Model Number	50976
Color	Brushed Nickel
Product Dimensions (D x W x H)	52"D x 52"W x 16.04"H
Item Weight	25.13 Pounds
Electric Fan Design	Ceiling Fan
Power Source	AC
Number of Blades	6
Blade Material	Engineered Wood
Light Type	LED
Controller Type	Remote Control

Attribute	Detail
Number of Speeds	3
Voltage	120 Volts
Indoor Outdoor Usage	Indoor
Mounting Type	Downrod (Standard, Low, Angled options)
UPC	049694509765

WARRANTY AND SUPPORT

Hunter provides a limited lifetime motor warranty, reflecting over 130 years of experience in the fan business. This warranty covers defects in materials and workmanship of the fan motor for the lifetime of the original purchaser.

For detailed warranty information, technical support, or to purchase replacement parts, please visit the official Hunter website or contact Hunter customer service. Ensure you have your model number (50976) and proof of purchase available when contacting support.

Hunter Fan Company: [Visit Hunter Store on Amazon](#)