

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie Toys 24" Light and Sound RC Fire Truck User Manual

DICKIE TOYS 203719022038

Dickie Toys 24" Light and Sound RC Fire Truck User Manual

Model: 203719022038

INTRODUCTION

The Dickie Toys RC Aerial Ladder Truck is designed to provide an engaging play experience with its remote control capabilities and realistic features. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your RC Fire Truck.

The truck features a cool water spray function, an extendable arm for reaching inaccessible areas, and can be moved in all directions via its 2-channel remote control. It also includes a range of light and sound effects to enhance the play experience.

PRODUCT FEATURES

- **Remote Control:** Drive forward, backward, left, and right with the 2.4 GHz remote control.
- **Water Shooting Function:** Activate the water pump to spray water from the ladder nozzle.
- **Turnable Ladder:** The ladder can rotate 360 degrees for versatile positioning.
- **Extendable Arm:** The ladder arm extends to increase reach.
- **Light and Sound Effects:** Realistic siren sounds and flashing lights enhance play.
- **Length:** Approximately 24.5 inches (62 cm).

WHAT'S IN THE BOX

Your Dickie Toys RC Fire Truck package should contain the following items:

- 1 x Dickie Toys RC Fire Truck
- 1 x 2-Channel Remote Control
- Accessories (e.g., traffic cones, fire extinguishers, as depicted)



Image: The Dickie Toys RC Fire Truck, its remote control, and included accessories such as traffic cones and fire extinguishers.

SETUP

Battery Installation

The fire truck and remote control require batteries for operation. Refer to the battery compartments on the underside of

the truck and the back of the remote control for correct battery type and polarity. Ensure all batteries are inserted correctly.

Initial Assembly

No complex assembly is required. Ensure all components are securely attached as received. The ladder is pre-attached and ready for use.



Image: The Dickie Toys RC Fire Truck and its remote control, as typically presented in its retail packaging, indicating readiness for use.

OPERATING INSTRUCTIONS

Driving the Fire Truck

Use the joysticks on the 2-channel remote control to maneuver the fire truck. The left joystick typically controls forward and backward movement, while the right joystick controls left and right steering.

Activating Lights and Sounds

Locate the dedicated buttons on the remote control or the truck itself to activate the realistic light and siren sound effects. Press once to turn on, and again to turn off or cycle through different sounds.

Using the Water Spray Function

1. Fill the water reservoir located on the truck with clean water.
2. Position the ladder nozzle towards the desired target.
3. Press the water spray button on the remote control to activate the pump and spray water.



Image: The Dickie Toys RC Fire Truck demonstrating its water spray function, with water visibly being ejected from the nozzle at the end of the extended ladder.

Operating the Extendable Ladder

The ladder can be manually extended and rotated. Gently pull the ladder sections to extend them. The base of the ladder can be rotated 360 degrees to position the ladder as needed.



Image: A side view of the Dickie Toys RC Fire Truck with its aerial ladder fully extended and positioned, showcasing its operational range.

MAINTENANCE

Cleaning

Wipe the truck and remote control with a damp cloth to remove dust and dirt. Do not immerse the truck or remote control in water. Ensure the water reservoir is emptied and dried after each use to prevent mold or mildew.

Storage

Store the fire truck and remote control in a cool, dry place away from direct sunlight. Remove batteries if the toy will not be used for an extended period to prevent battery leakage.

TROUBLESHOOTING

Remote Control Not Responding

- Check if batteries in both the truck and remote control are correctly installed and have sufficient charge. Replace if necessary.
- Ensure the truck and remote control are within operating range and free from interference.

- Turn both the truck and remote control off, then on again to re-establish connection.

Water Spray Not Working

- Verify the water reservoir is filled with water.
- Check for any blockages in the water hose or nozzle.
- Ensure batteries have enough power to operate the pump.

Lights or Sounds Not Functioning

- Check battery levels in the truck.
- Ensure the light/sound activation button is pressed correctly.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	7.09 x 28.94 x 10.63 inches
Item Weight	3.74 pounds
Country of Origin	China
Item Model Number	203719022038
Manufacturer Recommended Age	3 years and up
Release Date	May 1, 2021
Manufacturer	Dickie Toys HK Ltd

SAFETY INFORMATION

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 years. Adult supervision is recommended during play, especially when using the water spray function.

WARRANTY AND SUPPORT

For warranty information or product support, please contact Dickie Toys directly through their official website or the retailer from whom the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question