

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITOM](#) /

› [PRITOM P7pro 7-inch Android Tablet User Manual](#)

PRITOM P7pro

PRITOM P7pro 7-inch Android Tablet User Manual

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your PRITOM P7pro 7-inch Android Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance and longevity.

WHAT'S IN THE BOX

Upon opening your PRITOM P7pro tablet package, verify that all the following items are included:

- PRITOM P7pro Tablet
- User Manual
- Charging Cable
- Power Adapter

PRODUCT OVERVIEW

Familiarize yourself with the key features and components of your PRITOM P7pro tablet.



Image: The PRITOM P7pro tablet displaying its screen, with icons indicating key specifications such as 32GB ROM, Android 9.0, 1024x600 resolution, Quad-Core processor, Dual Camera, 2GB RAM, 2.4G Wi-Fi, Eye Health mode, and Bluetooth connectivity.

Key Features:

- **Operating System:** Android 9.0 or Android 11
- **Processor:** 32-bit Quad-core up to 1.5GHz
- **RAM:** 2 GB
- **Internal Storage:** 32 GB (expandable up to 128 GB via microSD card)
- **Display:** 7-inch IPS HD (1024 x 600 resolution)
- **Cameras:** Dual Camera (Front 2.0MP + Rear 5.0MP)
- **Connectivity:** Wi-Fi (2.4G), Bluetooth
- **Battery:** 3000mAh Lithium Polymer
- **Special Features:** Eye Health mode, high-quality BOX speaker

SETUP

1. Charging the Tablet

Before first use, fully charge your tablet. Connect the charging cable to the tablet's charging port and the

power adapter to a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes several hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the PRITOM logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** Press and hold the Power button until a menu appears. Select "Restart" and confirm.

3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network from the list and enter the password. A stable internet connection is recommended for setup.
3. **Google Account:** Sign in with your existing Google account or create a new one. This is necessary to download apps from the Google Play Store and access Google services.
4. Follow any remaining on-screen prompts to complete the setup.

4. Inserting a MicroSD Card

To expand the tablet's storage, you can insert a microSD card (sold separately) up to 128GB.

1. Locate the microSD card slot on the side of the tablet.
2. Carefully insert the microSD card into the slot with the gold contacts facing down until it clicks into place.
3. The tablet will detect the card and may prompt you to format it for use. Follow the on-screen instructions.

OPERATING

1. Touch Gestures

Navigate your tablet using standard Android touch gestures:

- **Tap:** Select an item or open an app.
- **Touch & Hold:** Access contextual menus or move items.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.

2. Home Screen and Apps

Powerful Android 9.0



More apps of your choice Android 9.0



Image: The PRITOM P7pro tablet displaying its home screen, featuring the Android 9.0 interface with various pre-installed and downloaded application icons.

The home screen provides quick access to your favorite apps and widgets. Swipe left or right to view additional home screens. To open the app drawer, swipe up from the bottom of the screen.

3. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

4. Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure the device you wish to pair is in pairing mode.
4. Select the device from the list of available devices and follow any on-screen prompts to complete pairing.

5. Using the Camera

Capture Happy Moments in Your Life



Front2.0MP+Rear5.0MP



Image: The PRITOM P7pro tablet screen showing a vibrant photo of a person in a field of dandelions, demonstrating the tablet's camera capabilities.

The tablet features a 2.0MP front camera and a 5.0MP rear camera. Open the Camera app to capture photos and videos. Tap the screen to focus and press the shutter button to take a picture.

6. Eye Health Mode

Activate Eye Health mode to reduce blue light emission, which can help alleviate visual fatigue and provide a more comfortable reading experience. This feature can typically be found in the display settings.

7. App Management

- **Installing Apps:** Download and install apps from the Google Play Store. You will need a Google account.
- **Uninstalling Apps:** Go to **Settings > Apps & notifications**, select the app, and tap **Uninstall**. Alternatively, touch and hold an app icon on the home screen or app drawer and drag it to the "Uninstall" option.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the tablet screen and body. Avoid using harsh chemicals or abrasive materials, which can damage the screen or finish.

2. Battery Optimization

To prolong battery life:

- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Avoid extreme temperatures.

3. Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches.

Go to **Settings > System > Advanced > System update**.

TROUBLESHOOTING

Tablet is Slow or Unresponsive

- Close unused apps.
- Clear cache data for frequently used apps (Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache).
- Restart the tablet.
- Ensure sufficient storage space is available.

Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled on the tablet.
- Restart your Wi-Fi router.
- Forget the network and reconnect (Settings > Network & internet > Wi-Fi > [Network Name] > Forget > Reconnect).
- Ensure you are within range of the Wi-Fi signal.

Battery Drains Quickly

- Adjust screen brightness to a lower level.
- Disable background app refresh for non-essential apps.
- Turn off GPS, Bluetooth, and Wi-Fi when not in use.
- Check battery usage in Settings to identify power-hungry apps.

Screen is Unresponsive

- Perform a forced restart by holding the Power button for approximately 10-15 seconds until the tablet powers off and restarts.
- Ensure the screen is clean and free of debris.

SPECIFICATIONS

Detailed technical specifications for the PRITOM P7pro tablet:

Feature	Specification
Model Name	P7pro
Screen Size	7 Inches
Screen Resolution	1024 x 600
Processor	1.5 GHz Quad-Core (ARM)
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 128 GB (microSD)
Operating System	Android 9 Pie (or Android 11)
Rear Webcam Resolution	5 MP
Front Webcam Resolution	2 MP
Battery Life (Average)	6 Hours
Item Weight	1.52 pounds
Connectivity	Wi-Fi (2.4G), Bluetooth

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official PRITOM website. If you encounter any issues not covered in this manual or require further assistance, please contact PRITOM customer support.

You can find more information and support resources on the [PRITOM Store on Amazon](#).