

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Gamify Quartz Analog Watch NT3249NM01 User Manual

Fastrack NT3249NM01

Fastrack Gamify Quartz Analog Watch NT3249NM01 User Manual

Model: NT3249NM01

1. INTRODUCTION

Thank you for choosing the Fastrack Gamify Quartz Analog Watch NT3249NM01. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.

The Fastrack Gamify watch features a bold black dial with day and date functions, a durable black metal strap, and precise quartz movement. It is designed for daily wear and offers 50 meters of water resistance and scratch-resistant mineral glass.





Figure 1: Front view of the Fastrack Gamify Quartz Analog Watch NT3249NM01, showcasing the black dial and metal strap.

2. SETUP

2.1 Setting the Time

1. Pull the crown (located on the right side of the watch case) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. When setting the time, ensure the AM/PM is correctly set, especially when setting the date. The date changes around midnight.
3. Once the time is set, push the crown back into its normal position (first click) to start the watch.

2.2 Setting the Day and Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise to adjust the date.
3. Turn the crown counter-clockwise to adjust the day.
4. Once the day and date are set, push the crown back into its normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism. If you need to set the date during this period, first set the time outside this range, adjust the date, and then reset the time.



Figure 2: Side view of the watch, highlighting the crown used for time and date adjustments.

3. OPERATING THE WATCH

3.1 Time Reading

The watch displays time using analog hour, minute, and second hands. The black dial features clear markings for easy readability.

3.2 Day and Date Display

The watch includes dedicated windows for displaying the current day of the week and the numerical date. These indicators advance automatically every 24 hours.

3.3 Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam

and temperature changes can compromise the seals.

- Do not operate the crown or push buttons when the watch is wet or submerged in water.
- Ensure the crown is fully pushed in before any contact with water.





Figure 3: Front view of the watch, illustrating its overall dimensions and dial layout.

4. MAINTENANCE

4.1 Cleaning

- Wipe the watch case and metal strap regularly with a soft, dry cloth to remove dust and dirt.
- For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

4.2 Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand starts skipping, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and functionality.

4.3 General Care

- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Protect the watch from strong impacts or shocks.
- Periodically check the metal strap and clasp for any signs of wear or looseness.



Figure 4: Back view of the watch, showing the stainless steel case back and the foldover clasp with push button.

5. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement. Contact an authorized service center.
- **Day/Date not changing correctly:** Ensure the time is set correctly, especially the AM/PM cycle. If the issue persists, refer to section 2.2 for proper setting procedures.
- **Condensation under the crystal:** This indicates a potential breach in water resistance. Avoid further contact with water and seek professional service immediately to prevent internal damage.
- **Loose strap or clasp:** If the metal strap feels loose or the clasp is not securing properly, visit an authorized service center for adjustment or repair.

6. SPECIFICATIONS

Feature	Detail
Model Name	Gamify
Model Number	NT3249NM01
Display Type	Analog
Movement Type	Quartz
Water Resistance Depth	50 Metres (5 ATM)
Band Material	Metal
Band Colour	Black
Case Material	Metal
Case Shape	Square
Case Diameter	37.8 Millimetres
Case Thickness	9.45 Millimetres
Band Width	22 Millimetres
Crystal Material	Mineral Glass
Dial Colour	Black
Clasp Type	Foldover Clasp With Push Button
Item Weight	200 Grams
Country of Origin	India



Figure 5: The Fastrack Gamify watch displayed on a wrist, showing its fit and appearance.

7. WARRANTY

Your Fastrack Gamify Quartz Analog Watch NT3249NM01 comes with a **12-month manufacturer warranty** on manufacturing defects. To avail warranty service, you must present your original purchase invoice at any authorized Titan Service Center.

Note: No physical warranty card is required; the invoice serves as proof of purchase for warranty claims.

8. SUPPORT

For any service-related queries, warranty claims, or technical assistance, please contact Fastrack/Titan customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** customercare@titan.co.in

- **Manufacturer:** Titan Company Limited, Sipcot Industrial Complex, Hosur, Tamil Nadu - 635129, India

© 2024 Fastrack. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08RSJNZD4>

More documents and user manuals: <https://manuals.plus/>