

[Manuals.plus](#) /

› [Contigo](#) /

› Contigo Ashland 2.0 Water Bottle Instruction Manual

Contigo 2143068

Contigo Ashland 2.0 Water Bottle Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use, care, and maintenance of your Contigo Ashland 2.0 Water Bottle. Please read these instructions thoroughly before first use and retain them for future reference.

PRODUCT OVERVIEW

The Contigo Ashland 2.0 is a 24oz leak-proof water bottle designed for convenient hydration. Key features include:

- **Autospout Technology:** Ensures a leak-proof seal when the spout is closed.
- **Lid Lock:** Prevents accidental opening of the spout.
- **Angled Straw:** Allows for easy sipping of all liquid.
- **Spout Cover:** Protects the drinking spout from dirt and germs.
- **Integrated Handle:** For comfortable carrying.



Image: The Contigo Ashland 2.0 Water Bottle in Juniper color, with the lid closed.

INITIAL SETUP

Before using your new water bottle for the first time, follow these steps:

1. **Disassemble:** Unscrew the lid from the bottle. Remove the straw from the lid.
2. **Wash:** Wash all parts (bottle, lid, and straw) thoroughly with warm, soapy water. Rinse completely. Alternatively, all components are top-rack dishwasher safe.
3. **Reassemble:** Insert the straw firmly into the designated opening on the underside of the lid. Ensure it is securely attached.



Image: Underside of the Contigo Ashland 2.0 lid, illustrating the straw attachment point for proper assembly and cleaning.

OPERATION

Filling the Bottle

Unscrew the lid and fill the bottle with your desired beverage. Do not overfill. Ensure the lid is securely screwed back onto the bottle to prevent leaks.

Drinking

1. **Unlock:** Slide the lid lock button (located near the spout) to the unlocked position.
2. **Open Spout:** Press the AUTOSPOUT button to release the drinking spout.
3. **Drink:** Sip from the angled straw.
4. **Close Spout:** Push the spout back down until it clicks into place.
5. **Lock:** Slide the lid lock button to the locked position for added security and to prevent accidental spills during transport.





Image: The lid of the Contigo Ashland 2.0 water bottle with the drinking spout in the open position, ready for use.



Image: The lid of the Contigo Ashland 2.0 water bottle with the drinking spout securely closed and the lid lock engaged.

CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your Contigo Ashland 2.0 Water Bottle.

- **Dishwasher Safe:** All parts of the bottle (body, lid, and straw) are top-rack dishwasher safe.
- **Hand Washing:** If hand washing, use warm, soapy water. For thorough cleaning of the lid mechanism and straw, it is recommended to use a bottle brush and a straw brush. Ensure all components are completely dry before reassembly and storage.
- **Regular Cleaning:** Clean your bottle regularly, especially after each use with flavored beverages, to prevent odor and residue buildup.

TROUBLESHOOTING

Leakage

- Ensure the lid is screwed on tightly and correctly aligned.
- Verify the drinking spout is fully pushed down and clicked into its closed position.
- Confirm the lid lock is engaged (slid to the locked position).
- While the bottle is designed to be leak-proof when the spout is closed and locked, it may leak if the spout is open and the bottle is tipped over. Always close and lock the spout when not actively drinking.

Difficulty Sipping

- Check that the straw is firmly attached to the underside of the lid.
- Ensure the spout is fully open.
- Verify that the vent hole on the lid is clear and not obstructed.

General Warnings

- Do not use with carbonated beverages, as pressure buildup can cause the spout to open unexpectedly or liquid to spray out.
- Not intended for hot liquids.
- Keep out of reach of children when filled with liquids that could cause injury if spilled.

PRODUCT SPECIFICATIONS

Brand	Contigo
Model Name	Ashland 2.0 (AUTOSPOUT)
Model Number	2143068
Capacity	24 fluid ounces
Material	Plastic (BPA-Free)
Item Weight	7.2 ounces
Dimensions (W x H)	3.15"W x 10.71"H
Care Instructions	Top-Rack Dishwasher Safe
UPC	607869285229

WARRANTY AND SUPPORT

Contigo products are designed and manufactured to high-quality standards. For specific warranty information or customer support, please visit the official Contigo website or contact their customer service department directly. Keep your purchase receipt as proof of purchase.

Official Website: www.gocontigo.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question