

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch User Manual

Accutime GSM4061AZ

Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch User Manual

Model: GSM4061AZ

INTRODUCTION

This manual provides instructions for the Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch. This watch features a touch-activated red LED display and an adjustable silicone strap. It is designed for everyday wear and is officially licensed Nintendo merchandise.





Front view of the Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch, displaying the digital time.

Initial Activation and Time Setting

1. **Activate Display:** Tap the watch face to activate the red LED display and show the current time.
2. **Enter Setting Mode:** Press and hold the touch-sensitive area (often indicated by a small icon or located at the bottom center of the display) for approximately 3-5 seconds until the hour digits begin to flash.
3. **Set Hour:** While the hour digits are flashing, tap the touch-sensitive area repeatedly to advance the hour. Ensure AM/PM is correctly set if applicable (the watch may cycle through 12-hour and 24-hour formats).
4. **Set Minute:** After setting the hour, press and hold the touch-sensitive area again until the minute digits begin to flash. Tap repeatedly to advance the minutes.
5. **Confirm Settings:** Once the minutes are set, press and hold the touch-sensitive area one last time to exit the setting mode. The time will now be set.

Note: If the watch does not respond or the display remains blank, ensure the battery is properly installed and functional. The watch comes with a pre-installed 9V battery.



The Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch worn on a wrist, demonstrating its adjustable fit.

OPERATING INSTRUCTIONS

Checking the Time

To view the time, simply tap the touch-sensitive area on the watch face. The red LED display will illuminate, showing the current hour and minutes for a few seconds before turning off to conserve battery life.

Adjusting the Strap

The watch features an adjustable blue silicone strap designed to fit wrist sizes from 5.5 inches to 8 inches. Use the buckle clasp to secure the watch comfortably on the wrist.

MAINTENANCE

Cleaning

Wipe the watch clean with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

Water Resistance

IMPORTANT: This watch is **NOT WATER RESISTANT**. Avoid exposure to water, including showering, swimming, or heavy rain, as this can damage the internal components.

Battery Replacement

The watch is powered by a 9V battery (included). When the display becomes dim or stops functioning, the battery may need replacement. Due to the specialized nature of watch batteries and the watch's construction, professional battery replacement is recommended to ensure proper sealing and functionality.

TROUBLESHOOTING

- **Watch display is blank or dim:**
 - Tap the watch face to ensure it's not in sleep mode.
 - The battery may be low or depleted. Consider professional battery replacement.
- **Time is inaccurate or resets:**
 - Re-set the time following the instructions in the 'Setup' section.
 - Ensure the watch is not exposed to strong magnetic fields, which can affect quartz movement accuracy.
 - If the issue persists, the internal mechanism may require inspection by a qualified technician.
- **Watch not responding to touch:**
 - Ensure your finger is clean and dry when touching the display.
 - If the watch is completely unresponsive, the battery may be dead or there could be an internal fault.

SPECIFICATIONS

Model Number	GSM4061AZ
Brand	Accutime
Display Type	Digital LCD
Movement Type	Quartz
Power Source	Battery Powered (1 x 9V battery included)
Water Resistance Level	Not Water Resistant
Case Material	Plastic
Band Material	Silicone
Case Diameter	34 Millimeters
Band Width	13 Millimeters
Case Thickness	9.2 Millimeters
Item Weight	1.4 Ounces
Age Range	36 months plus

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video provides a general overview of the Super Mario Boys' Quartz Watch with Silicone Strap, showcasing its design and features.

WARRANTY INFORMATION

This Accutime watch comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation included with your purchase or contact Accutime customer support directly.

SUPPORT

For further assistance, technical support, or inquiries regarding your Accutime Nintendo Super Mario Digital LCD Quartz Wrist Watch, please contact Accutime customer service. Contact information can typically be found on the product packaging or the official Accutime website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question