

[Manuals.plus](#) /

› [Wessel-Werk](#) /

› Wessel-Werk 1.25in x 19in Vacuum Extension Wand (3-Pack) Instruction Manual

Wessel-Werk 1.25in x 19in Vacuum Extension Wand

Wessel-Werk 1.25in x 19in Vacuum Extension Wand (3-Pack) Instruction Manual

INTRODUCTION

This manual provides instructions for the safe and effective use of your Wessel-Werk 1.25 inch x 19 inch Vacuum Extension Wands. These durable ABS plastic wands are designed to extend the reach of your vacuum cleaner, fitting most standard 1 1/4 inch (32mm) friction-fit vacuum attachments. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using vacuum accessories to reduce the risk of fire, electric shock, or injury.

- Ensure the vacuum cleaner is unplugged before attaching or detaching any accessories.
- Do not use the extension wands with damaged vacuum hoses or attachments.
- Keep hands, hair, and loose clothing away from moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Store wands in a dry, safe place when not in use.

PACKAGE CONTENTS

Your package should contain the following items:

- 3 x Wessel-Werk 1.25 inch x 19 inch Vacuum Extension Wands



Figure 1: Three Wessel-Werk Vacuum Extension Wands.

SETUP AND ASSEMBLY

The Wessel-Werk vacuum extension wands are designed for easy, friction-fit assembly. Ensure your vacuum hose handle or existing attachment has an outer diameter of 1 1/4 inch (32mm) for proper fit.

1. **Measure Compatibility:** Before connecting, measure the outer diameter of your vacuum hose handle or the inner diameter of your vacuum attachment. The wands are designed for 1 1/4 inch (32mm) connections.

2. Connecting a Single Wand:

- Insert the narrow end of one extension wand firmly into your vacuum hose handle.
- Attach your desired vacuum accessory (e.g., brush, nozzle) to the wider end of the extension wand.

3. Combining Multiple Wands for Extended Reach:

- To achieve greater reach, connect the narrow end of one wand into the wider end of another wand. Push firmly until secure.
- Repeat this process for additional wands as needed, up to three wands for maximum extension.
- Attach your vacuum accessory to the end of the combined wands.

Inner Diameter:

1-1/4 inch



Diameter:

1-3/16 inch



Figure 2: Combining Wands for Added Reach.



Figure 3: 19-inch Reach of a Single Wand.



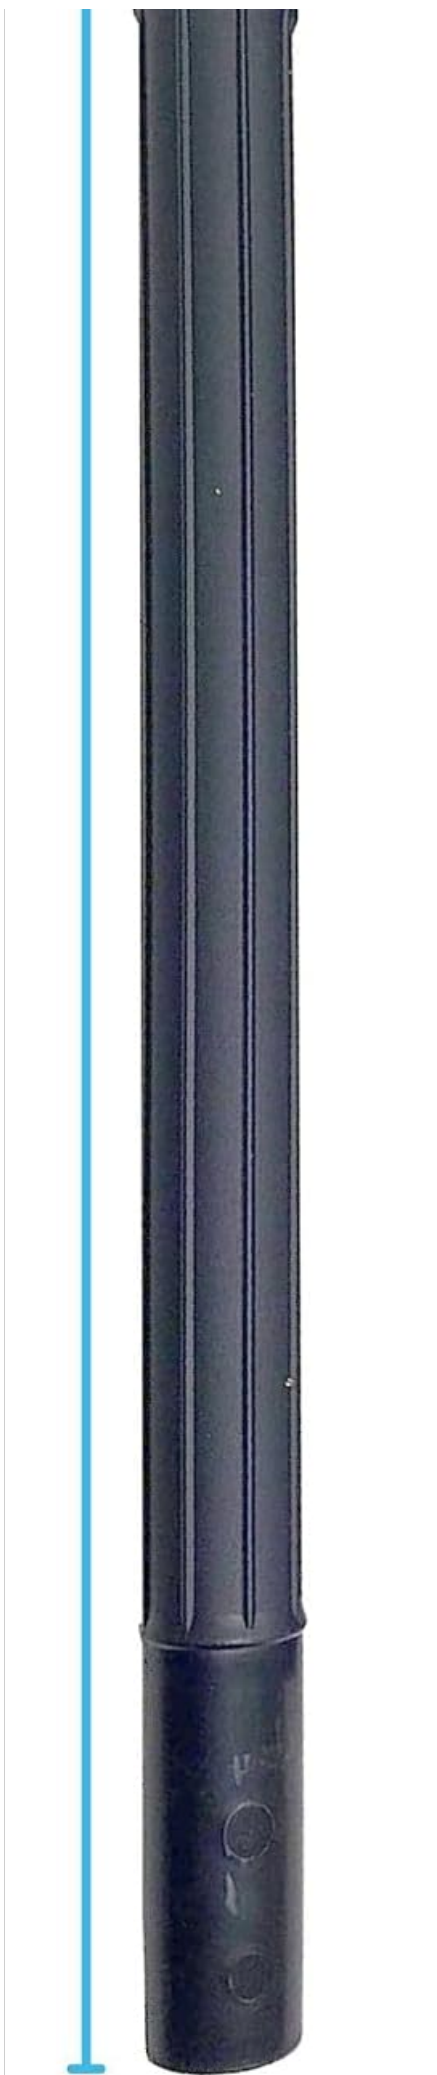


Figure 4: Wand Diameter Specifications.

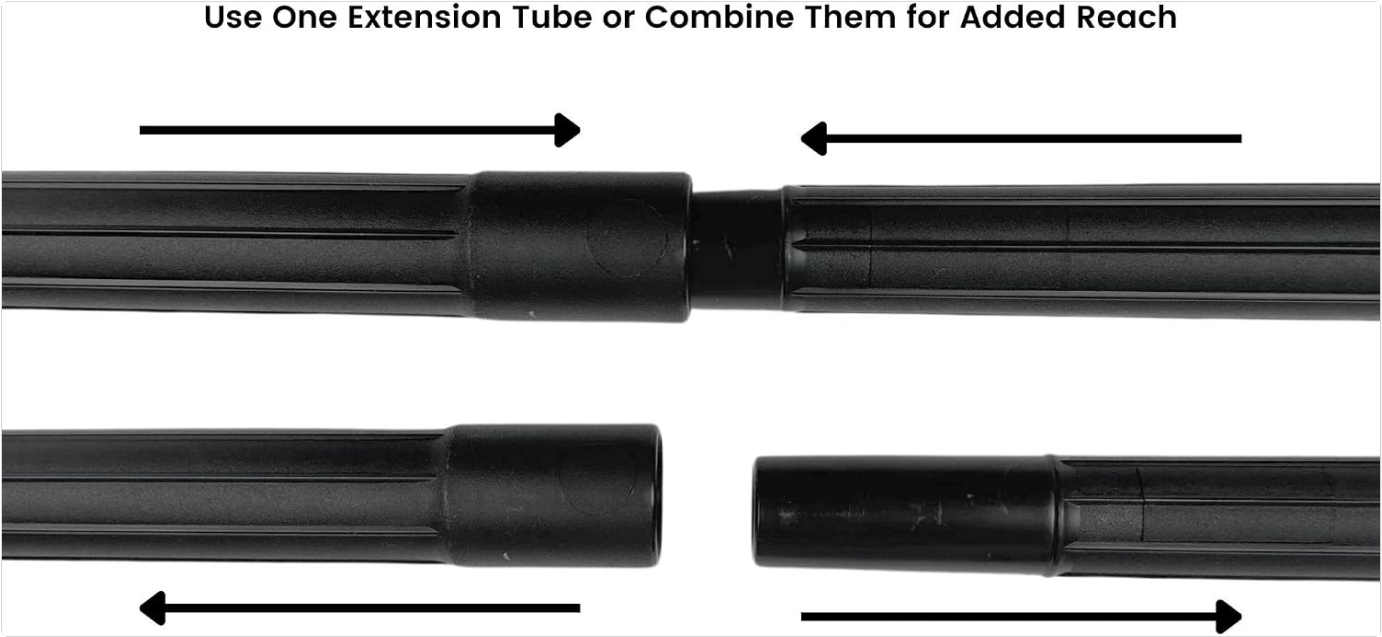


Figure 5: Wand Connected to a Standard Vacuum Attachment.

OPERATION

Once assembled, the extension wands allow you to reach areas that are otherwise inaccessible with your standard vacuum setup. They are suitable for both wet and dry vacuuming tasks, depending on your vacuum cleaner's capabilities.

- Use a single wand for moderate extension, such as cleaning under furniture or in tight corners.
- Combine multiple wands for maximum reach, ideal for high ceilings, cobwebs, or deep crevices.
- Ensure all connections are secure before operating the vacuum to prevent loss of suction or accidental detachment.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Wessel-Werk vacuum extension wands, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the wands with a damp cloth to remove dust and debris. For stubborn dirt, a mild soap solution can be used. Rinse thoroughly and allow to air dry completely before storage.
- **Inspection:** Periodically inspect the wands for any signs of cracks, damage, or wear. Replace any damaged wands to maintain effective suction and prevent further issues.
- **Storage:** Store the wands in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Loss of Suction	Loose connection between wands or between wand and vacuum/attachment.	Ensure all connections are firmly pushed together. Check for blockages in the wands or attachments.

Problem	Possible Cause	Solution
Wands detach during use	Connections not secure enough; incompatible diameter.	Push connections more firmly. Verify that your vacuum hose handle and attachments are 1 1/4 inch (32mm) outer diameter.
Difficulty attaching/detaching	Dirt or debris in connection points; tight fit.	Clean connection points. Apply slight twisting motion while pushing/pulling.

SPECIFICATIONS

Feature	Detail
Brand	Wessel-Werk
Material	ABS Plastic
Color	Black
Product Dimensions (each wand)	19"L x 1.5"W (48.26 cm L x 3.81 cm W)
Item Weight (per 3-pack)	0.34 kg (0.75 lbs)
Outside Diameter	1.25 inches (32mm)
Nominal Wall Thickness	3 millimeters
Compatibility	Fits most 1 1/4 inch (32mm) friction-fit vacuum attachments
Included Components	3 Vacuum Extension Wands

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Wessel-Werk customer service through their official website or the retailer where the product was purchased. Please have your product model number (B08RVD74FV) and purchase date available when contacting support.

For more information, visit the [Wessel-Werk Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08RVD74FV>

More documents and user manuals: <https://manuals.plus/>