Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > COSTWAY /
- > COSTWAY 20-Inch Wine Cooler Refrigerator Model 24801US-CYPE Instruction Manual

COSTWAY 24801US-CYPE



COSTWAY 20-Inch Wine Cooler Refrigerator

MODEL 24801US-CYPE INSTRUCTION MANUAL

1. Safety Information

Please read all instructions carefully before using this appliance to ensure safe operation and to prevent damage. Retain this manual for future reference.

- **Electrical Safety:** Ensure the power outlet matches the voltage requirements of the appliance. Do not use extension cords or ungrounded adapters.
- **Placement:** Place the wine cooler on a firm, level surface away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
- Ventilation: Maintain proper air circulation around the appliance. Do not block ventilation openings.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

2. Product Overview

The COSTWAY 20-inch wine cooler refrigerator is designed to provide an optimal storage environment for your wine collection. It features a high-efficiency compressor cooling system, a wide temperature range, and a double-paned glass door for enhanced insulation and UV protection.



Image 2.1: Front view of the COSTWAY wine cooler.

Key Features:

- Efficient Compressor Cooling: Maintains a consistent temperature range of 41°F to 64°F (5°C to 18°C).
- 21-Bottle Capacity: Accommodates standard wine bottles on durable beech wood shelves.
- **Digital Soft-Touch Control:** Easy temperature adjustment and LED light control.
- Anti-UV Double Glass Door: Protects wine from harmful UV rays and maintains internal temperature.
- Low Noise Operation: Advanced system designed for quiet performance.
- Adjustable Leveling Feet: Ensures stability and proper air circulation.



Image 2.2: Diagram illustrating key features such as LED lighting, compressor cooling, movable beech shelves, and adjustable feet.



Image 2.3: The anti-UV darkened double glass door, designed to block UV light and lock out moisture, protecting the wine.

3. Setup Instructions

Follow these steps for the initial setup of your wine cooler.

- 1. **Unpacking:** Carefully remove all packaging materials. Inspect the unit for any shipping damage.
- 2. **Placement:** Choose a location that is well-ventilated, away from direct sunlight, heat sources (e.g., oven, radiator), and extreme cold. Ensure there is at least 2-3 inches of space around the back and sides for proper air circulation.
- 3. **Leveling:** The wine cooler must be level for optimal performance. Adjust the leveling feet at the bottom of the unit by turning them clockwise or counter-clockwise until the unit is stable and level.



Image 3.1: Close-up view highlighting the adjustable feet for leveling and proper air circulation.

- 4. **Initial Cleaning:** Before placing any bottles, clean the interior of the unit with a damp cloth and a mild detergent. Wipe dry thoroughly.
- 5. **Power Connection:** Plug the power cord into a dedicated, grounded electrical outlet. Allow the unit to stand for at least 2-4 hours before loading with wine to allow refrigerants to settle.

4. Operating Instructions

This section details how to use the control panel and manage the wine cooler's settings.

Control Panel Functions:



Image 4.1: Detailed diagram of the soft-touch control panel and its various buttons.

- Power Switch: Turns the unit on or off.
- °F/°C Selector: Toggles the temperature display between Fahrenheit and Celsius.
- LED Light: Activates or deactivates the interior LED lighting.
- Chamber Temperature Display: Shows the current internal temperature.
- Temperature Set Display: Shows the desired set temperature.
- **Temperature Up/Down Buttons (+/-):** Adjusts the desired temperature. Press the 'Setting Button' first to unlock controls if necessary.
- Automatic Lock: If no buttons are pressed for 10 seconds, the control panel will automatically lock to prevent accidental changes. Press the 'Setting Button' to unlock.

Setting the Temperature:

The wine cooler allows temperature settings between 41°F (5°C) and 64°F (18°C). To adjust:

- 1. If the control panel is locked, press the Setting Button (often represented by an 'M' or gear icon) to unlock it.
- 2. Use the + or buttons to increase or decrease the desired temperature.
- 3. The display will flash the new setting and then return to showing the actual internal temperature after a few seconds.



Image 4.2: A guide illustrating recommended serving temperatures for various types of wine.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your wine cooler.

Cleaning:

- Interior: Disconnect power before cleaning. Use a soft cloth with a solution of warm water and baking soda (2 tablespoons of baking soda to 1 quart of water). Avoid harsh chemicals or abrasive cleaners.
- Exterior: Clean the exterior with a mild detergent and a soft cloth. Do not use abrasive cleaners or solvents.
- Door Gasket: Regularly clean the door gasket to ensure a proper seal.

Defrosting:

This wine cooler features an automatic defrost function. Frost will melt and drain into a collection tray at the back of the unit, where it evaporates. No manual defrosting is typically required.

Power Interruption / Extended Absence:

- In case of a power outage, the unit will typically resume operation with the last set temperature once power is restored.
- For extended periods of non-use, disconnect the power, clean the interior, and leave the door slightly ajar to prevent odors and mold growth.

6. Troubleshooting

Review these common issues and their potential solutions before contacting customer service.

Problem	Possible Cause	Solution
Wine cooler does not operate.	No power supply.	Check if the power cord is properly plugged in. Verify the circuit breaker or fuse.
Temperature is not cold enough.	Door not closed properly; excessive door opening; unit placed near a heat source; poor ventilation; temperature setting too high.	Ensure door is sealed. Reduce frequency of door openings. Relocate unit away from heat. Ensure adequate space for air circulation. Adjust temperature setting lower.
Unit is making excessive noise.	Unit is not level; loose parts; normal compressor operation.	Adjust leveling feet. Check for any loose items inside. A slight hum from the compressor is normal.
Vibrations.	Unit is not level.	Adjust the leveling feet to ensure the unit is stable.
Door does not close completely.	Unit not level; door gasket dirty or damaged; shelves are out of position.	Level the unit. Clean or replace door gasket. Ensure shelves are correctly inserted.

7. Specifications

Technical details for the COSTWAY 20-inch wine cooler refrigerator.



Image 7.1: Diagram showing the product dimensions and some key specifications.

Specification	Detail
Brand	COSTWAY
Model Number	24801US-CYPE
Item Weight	63.7 pounds
Product Dimensions (D x W x H)	20 x 20 x 24 inches (50.8 x 50.8 x 60.96 cm)
Capacity	2.3 Cubic Feet (approx. 21 standard bottles)
Installation Type	Countertop or Freestanding
Voltage	120 Volts
Defrost System	Automatic

Specification	Detail
Shelf Type	Wood (Beech)
Number of Doors	1
Temperature Range	41°F - 64°F (5°C - 18°C)
Color	Black

8. Warranty and Customer Support

For warranty information, please refer to the documentation included with your purchase or contact COSTWAY customer service directly. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting section, or require further assistance, please contact COSTWAY customer support through their official website or the contact information provided in your purchase documents.

© 2023 COSTWAY. All rights reserved.

Related Documents - 24801US-CYPE



COSTWAY FP10374US-BK Beverage Cooler User Manual and Safety Guide

This comprehensive user manual provides essential safety instructions, installation guidelines, operating tips, and troubleshooting advice for the COSTWAY FP10374US-BK Beverage Cooler. Learn how to properly set up, use, and maintain your beverage refrigerator for optimal performance.




Costway EP24449US Car Fridge User Manual

Comprehensive user manual for the Costway EP24449US Car Fridge, covering product features, usage instructions, troubleshooting, and technical specifications.



Costway EP24448US Car Fridge User Manual

User manual for the Costway EP24448US Car Fridge, providing important safety information, product features, usage instructions, troubleshooting, and technical parameters for this portable electric cooler.

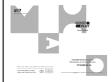

Costway Wine & Beverage Cooler FP10382US-SL User Manual

Comprehensive user manual for the Costway FP10382US-SL Wine & Beverage Cooler, covering safety instructions, installation, operation, maintenance, and troubleshooting in English and French.



Costway Car Fridge User Manual: EP24413, EP24414US, EP24414AU

User manual for Costway car fridges, models EP24413, EP24414US, and EP24414AU. This electronic document (V1.0) provides operating instructions, product specifications, troubleshooting guide, and app control information. It is designed for explanation and clarity. Includes details on capacity, power, dimensions, and temperature ranges.

COSTWAY JV10091US Wine Cooler User Manual - Safety, Operation, and Maintenance

Comprehensive user manual for the COSTWAY JV10091US Wine Cooler. Includes important safety instructions, installation guide, operating procedures, control panel functions, care and maintenance tips, and troubleshooting.