



[Manuals.plus](#) /

› [DREAMADE](#) /

› DREAMADE Rattan Garden Armchair (Model JY79477FR) Instruction Manual

DREAMADE JY79477FR

DREAMADE Rattan Garden Armchair Instruction Manual

Model: JY79477FR

INTRODUCTION

Thank you for choosing the DREAMADE Rattan Garden Armchair. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new armchair. Please read these instructions thoroughly before assembly and retain them for future reference.



Image: Front-side view of the DREAMADE Rattan Garden Armchair with its removable cushion. This image showcases the overall design and the rich brown rattan weave.

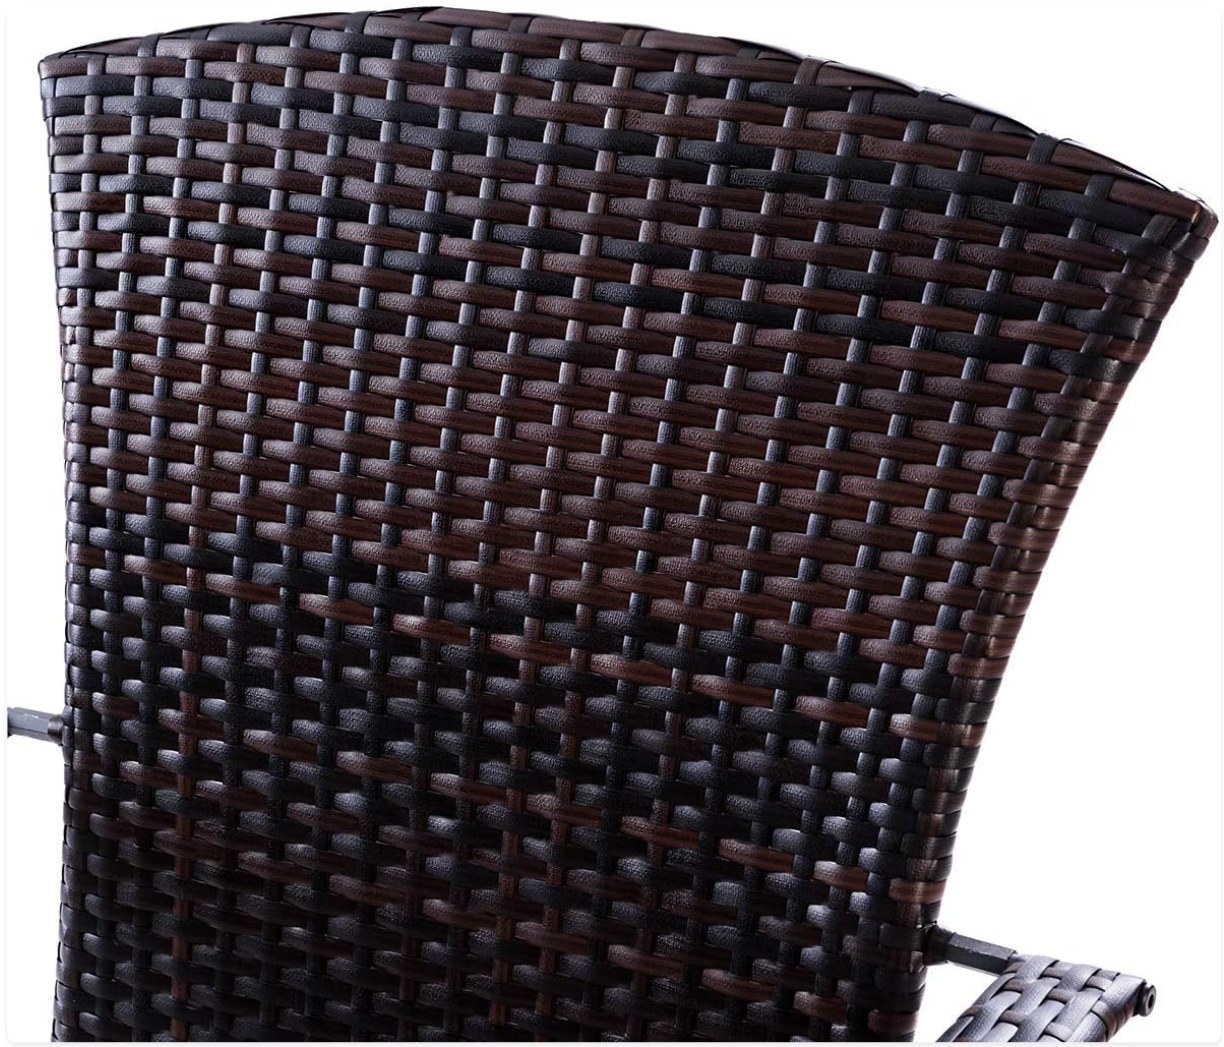


Image: A detailed close-up of the intricate rattan weave on the backrest of the armchair, highlighting the craftsmanship and texture of the material.

SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before initial use and periodically check for tightness.
- Do not exceed the maximum weight capacity of 180 kg (396 lbs) to prevent damage or injury.
- Always place the armchair on a stable, level surface to avoid tipping.
- Keep the armchair away from open flames, extreme heat sources, and sharp objects.
- Supervise children when they are near or using the armchair.
- Avoid standing on the armchair.

PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- 1 x Rattan Armchair Frame
- 1 x Removable Seat Cushion
- 1 x User Manual (this document)

SETUP AND ASSEMBLY

The DREAMADE Rattan Garden Armchair is designed for straightforward assembly. Follow these general steps:

1. Unpack all components from the box and lay them out on a clean, soft surface to prevent scratches.
2. Identify the main frame components: seat, backrest, armrests, and legs.
3. Attach the backrest to the seat frame using the provided hardware (screws, bolts, and Allen key, if applicable). Ensure the connections are firm but do not overtighten initially.
4. Secure the armrests to the main frame, aligning all holes and inserting the necessary fasteners.
5. Once all parts are loosely assembled, gently tighten all screws and bolts evenly. Avoid overtightening to prevent stripping or cracking.
6. Place the removable cushion onto the seat. The cushion features ties to secure it to the armchair frame, preventing it from slipping.



Image: Detail of the cushion tie, showing how it secures the removable cushion to the armchair frame for stability and comfort.

After assembly, gently test the armchair for stability before full use.

OPERATING AND USAGE

The DREAMADE Rattan Garden Armchair is versatile and suitable for various environments:

- **Placement:** Ideal for balconies, patios, gardens, courtyards, poolside areas, or even indoor spaces like living rooms.

- **Comfort:** The armchair features an ergonomic design with curved armrests and a high backrest for optimal comfort and support. The included 6 cm thick cushion further enhances the seating experience.
- **Weight Capacity:** Designed to safely support up to 180 kg (396 lbs).



Image: A close-up view of the armchair's curved armrest, showcasing the smooth finish and comfortable design for arm support.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your armchair:

- **Cleaning the Rattan Frame:** Wipe the rattan frame with a soft, damp cloth. For more stubborn dirt, use a mild soap solution and rinse thoroughly with clean water. Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these can damage the rattan.
- **Cushion Care:** The cushion cover is removable via a zipper. Follow the care instructions on the cushion's label for washing. Typically, it can be hand-washed or machine-washed on a gentle cycle with cold water. Air dry completely before reattaching to prevent mildew.
- **Storage:** While the armchair is resistant to corrosion and UV rays, for prolonged life and to protect against extreme weather conditions, it is recommended to store the armchair indoors or cover it with a protective outdoor furniture cover when not in use for extended periods.
- **Periodic Inspection:** Regularly check all screws and bolts to ensure they remain tight. Retighten if

necessary to maintain stability.

TROUBLESHOOTING

Issue: The armchair feels unstable or wobbly.

Solution: Ensure all assembly screws and bolts are fully tightened. Check that the armchair is placed on a flat, level, and stable surface. Uneven ground can cause instability.

Issue: The cushion appears dirty or stained.

Solution: Remove the cushion cover using the zipper and wash it according to the care instructions on its label. For minor spills, spot clean with a damp cloth and mild detergent.

Issue: The rattan frame looks dull or has accumulated dirt.

Solution: Clean the rattan frame with a soft, damp cloth. For more thorough cleaning, use a mild soap solution and rinse well. Avoid abrasive cleaners.

PRODUCT SPECIFICATIONS

Brand	DREAMADE
Model Number	JY79477FR
Color	Brown
Material	Rattan, Fabric (Cushion)
Overall Dimensions (L x W x H)	80 x 78 x 80 cm (31.5 x 30.7 x 31.5 inches)
Cushion Dimensions (L x W x H)	60 x 58 x 7 cm (23.6 x 22.8 x 2.8 inches)
Weight Capacity	180 kg (396 lbs)
Gross Weight	8.6 kg (19 lbs)



Image: The DREAMADE Rattan Garden Armchair with its overall dimensions (length, width, height) clearly indicated in centimeters.

WARRANTY AND SUPPORT

For detailed warranty information, product support, or to inquire about replacement parts, please contact DREAMADE customer service directly or visit the official DREAMADE website. Please have your model number (JY79477FR) and purchase date available when contacting support.