

[Manuals.plus](#) /

› [M SANMERSEN](#) /

› M SANMERSEN 61-Key Electronic Keyboard MSM-61K-Black User Manual

## M SANMERSEN MSM-61K-Black

# M SANMERSEN 61-Key Electronic Keyboard User Manual

Model: MSM-61K-Black

## 1. INTRODUCTION

Thank you for choosing the M SANMERSEN 61-Key Electronic Keyboard. This portable electronic piano is designed as a teaching tool for beginners, offering a variety of musical functions to encourage musical exploration and development. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience with the product.

## 2. SAFETY INFORMATION

- **Age Recommendation:** This product is suitable for children aged 3 years and up. Adult supervision is recommended for younger children.
- **Power Source:** Use only the specified power sources (DC 5V USB cable or 3 AA batteries). Do not mix old and new batteries, or different types of batteries.
- **Water and Moisture:** Keep the keyboard away from water, moisture, and direct sunlight to prevent damage.
- **Cleaning:** Clean the keyboard with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Handling:** Avoid dropping or subjecting the keyboard to strong impacts.
- **Disassembly:** Do not attempt to disassemble or modify the keyboard. This will void the warranty and may cause damage or injury.

## 3. PACKAGE CONTENTS

Please check that all items are present in the package:

- M SANMERSEN 61-Key Electronic Keyboard
- Microphone
- USB Type A Power Cable (DC 5V)

- Instruction Manual (this document)



Image: The M SANMERSEN 61-Key Electronic Keyboard, accompanied by its wired microphone and USB power cable.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your electronic keyboard.

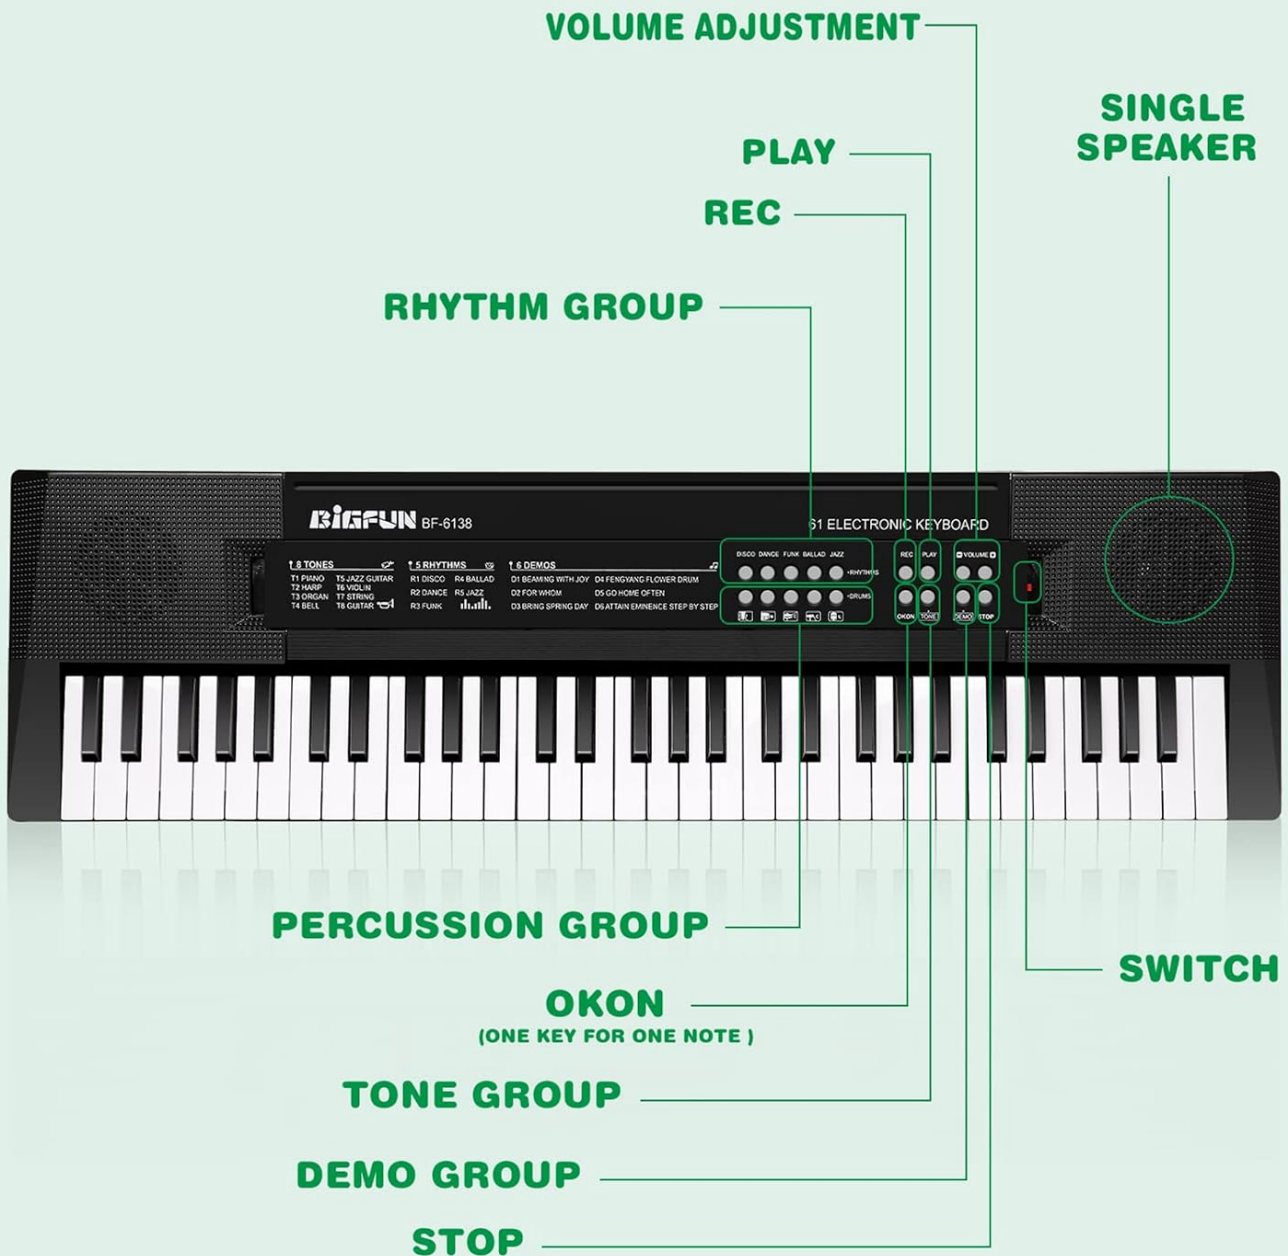


Image: A detailed diagram highlighting the control panel of the 61-key electronic keyboard, showing the location of the volume adjustment, play/record buttons, rhythm group, percussion group, tone group, demo group, and power switch.

- **61 Keys:** Standard piano keys for playing melodies and chords.
- **Control Panel:** Contains buttons for various functions including tones, rhythms, demos, recording, and volume.
- **Microphone Input:** Port for connecting the included microphone.
- **DC 5V Power Supply Port:** For connecting the USB power cable.
- **Speaker:** Integrated speaker for audio output.
- **Battery Compartment:** Located on the underside for 3 AA batteries (not included).

## 5. SETUP

### 5.1 Powering the Keyboard

The keyboard can be powered by either a USB cable or batteries.

1. **USB Power:** Connect the provided USB Type A cable to the DC 5V port on the keyboard and to a compatible USB power adapter (not included) or a USB port on a computer.
2. **Battery Power:** Open the battery compartment on the underside of the keyboard. Insert 3 AA batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.



**DC 5V Power Supply**



**Microphone Tied in the Back**



**3 AA Batteries Powered  
(Not include)**

Image: Close-up view of the keyboard's power input options, showing the DC 5V USB port and the battery compartment for 3 AA batteries.

## 5.2 Connecting the Microphone

Plug the microphone cable into the microphone input jack located on the keyboard. The microphone is designed for vocal input and will amplify your voice through the keyboard's speaker.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

Locate the "SWITCH" button on the control panel. Press it to turn the keyboard on or off.

### 6.2 Volume Adjustment

Use the "VOLUME ADJUSTMENT" buttons (usually marked with + and - or up/down arrows) to increase or decrease the sound output level. Note that the volume may reset to a default level when the keyboard is turned off and on again.

### 6.3 Tone Selection

The keyboard features 8 different instrument tones. Press the buttons in the "TONE GROUP" section to select your desired instrument sound (e.g., Piano, Organ, Violin).

### 6.4 Rhythm Selection

There are 5 built-in music rhythms. Press the buttons in the "RHYTHM GROUP" section to choose a rhythm (e.g., Disco, Rock, Waltz). Press the "STOP" button to stop the rhythm.

### 6.5 Demonstration Music

The keyboard includes 6 demonstration songs. Press the buttons in the "DEMO GROUP" section to play a demonstration song. Press "STOP" to end playback.

### 6.6 Percussion Sounds

Access 5 different percussion sounds by pressing the buttons in the "PERCUSSION GROUP" section. These can be played along with rhythms or independently.

### 6.7 Recording and Playback

The keyboard allows you to record and play back your melodies.

1. Press the "REC" (Record) button to start recording your playing.
2. Play your desired melody on the keys.
3. Press the "PLAY" button to listen to your recorded melody.

### 6.8 Microphone Usage

Once the microphone is connected, speak or sing into it. Your voice will be amplified through the keyboard's speaker. Adjust the keyboard's main volume to control the microphone's output level.

## 7. MAINTENANCE

- **Cleaning:** Wipe the surface of the keyboard with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Battery Replacement:** Replace batteries when the sound becomes distorted or the keyboard stops functioning correctly.

## 8. TROUBLESHOOTING

| Problem                     | Possible Cause                                                    | Solution                                                                             |
|-----------------------------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Keyboard does not turn on.  | No power, batteries drained, or USB cable not connected properly. | Ensure USB cable is securely connected or replace batteries. Check battery polarity. |
| No sound from the keyboard. | Volume too low, or keyboard not powered on.                       | Increase volume. Ensure keyboard is powered on.                                      |

| Problem                     | Possible Cause                                        | Solution                                                                          |
|-----------------------------|-------------------------------------------------------|-----------------------------------------------------------------------------------|
| Microphone not working.     | Microphone not connected properly, or volume too low. | Ensure microphone is fully plugged into the input jack. Increase keyboard volume. |
| Sound is distorted or weak. | Low battery power.                                    | Replace batteries or use USB power.                                               |

## 9. SPECIFICATIONS

- **Model:** MSM-61K-Black
- **Number of Keys:** 61
- **Dimensions:** 24.41" (W) x 6.3" (D) x 1.8" (H) / 62cm (W) x 16cm (D) x 4.5cm (H)
- **Weight:** Approximately 1.2 kg (2.64 lbs)
- **Tones:** 8 types
- **Rhythms:** 5 types
- **Demonstration Songs:** 6 types
- **Percussion Sounds:** 5 types
- **Functions:** Play, Record, Playback, Volume Control, Microphone Input
- **Power Source:** DC 5V (USB Type A) or 3 x AA batteries (not included)
- **Recommended Age:** 3 years and up

# THE BEST GIFT FOR KIDS



Image: Visual representation of the keyboard's dimensions (62cm x 16cm x 4.5cm) and its packaging, along with the microphone and USB cable dimensions.

## 10. WARRANTY AND SUPPORT

M SANMERSEN products are manufactured with quality and care. For any questions, technical support, or warranty inquiries, please refer to the contact information provided with your purchase or visit the official M SANMERSEN website. Please retain your proof of purchase for warranty claims.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question