

[manuals.plus](#) /› [Zanussi](#) /› [Zanussi Grill Heating Element 1750W + 800W \(Model 3570355010\) Instruction Manual](#)

## Zanussi 3570355010

# Zanussi Grill Heating Element 1750W + 800W

Model: 3570355010

Instruction Manual

## INTRODUCTION

This manual provides essential information for the installation, function, maintenance, and troubleshooting of your Zanussi Grill Heating Element (Model 3570355010). This component is designed for use in compatible ovens and hobs, providing the necessary heat for various cooking functions, including grilling.

A functional heating element is crucial for the proper operation of an electric oven. It converts electrical energy into heat through the Joule effect, ensuring efficient cooking.

## SAFETY INFORMATION

- Always disconnect the appliance from the main power supply before attempting any installation, maintenance, or repair. Failure to do so can result in electric shock or injury.
- If you are unsure about any step, consult a qualified technician.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- Ensure the replacement part is compatible with your appliance model.

## SETUP AND INSTALLATION

The Zanussi Grill Heating Element is a replacement part. Installation typically involves replacing an existing faulty element. Electric ovens commonly feature three types of heating elements:

- Top/Grill Heating Element:** Located at the top of the oven cavity, primarily used for grilling and browning dishes. This product is a grill heating element.
- Bottom/Sole Heating Element:** Located at the bottom of the oven, ideal for baking and ensuring even cooking of doughs.
- Circular Heating Element:** Found at the back of the oven, typically used in models with fan-assisted heating for multi-level cooking.

### General Installation Steps:

- Disconnect Power:** Ensure the oven is completely disconnected from the electrical supply.
- Access Element:** Open the oven door and locate the existing grill heating element. Depending on the oven model, you may need to remove screws or clips securing it.
- Disconnect Wiring:** Carefully disconnect the electrical wires from the terminals of the old heating element.

Note their positions for correct reconnection.

4. **Remove Old Element:** Once disconnected, remove the faulty heating element from the oven cavity.
5. **Install New Element:** Insert the new Zanussi Grill Heating Element into position, ensuring it fits securely.
6. **Reconnect Wiring:** Reconnect the electrical wires to the terminals of the new element, ensuring a secure and correct connection.
7. **Secure Element:** Fasten the new element with any screws or clips that were removed.
8. **Test:** Close the oven door, reconnect the power supply, and perform a test run to ensure the element heats correctly.

*Note: Specific installation procedures may vary by oven model. Refer to your oven's service manual for detailed instructions.*

## OPERATING PRINCIPLE

As a grill heating element, this component is activated when the oven is set to a grilling or browning function. It provides intense, direct heat from the top of the oven cavity, essential for:

- Achieving a crispy finish on dishes.
- Browning the top of casseroles and gratins.
- Cooking thinner cuts of meat or vegetables quickly.

The element works in conjunction with the oven's thermostat to maintain the desired temperature for the selected cooking program.

## MAINTENANCE

The heating element itself requires minimal direct maintenance. However, regular cleaning of the oven cavity helps prolong the life of all components, including the heating elements.

- **Cleaning:** Ensure the oven is cool and disconnected from power before cleaning. Wipe down the interior, avoiding direct contact with the heating element with abrasive cleaners.
- **Inspection:** Periodically inspect the heating element for visible signs of damage, such as cracks, bulges, or discoloration. If any damage is observed, the element should be replaced.

## TROUBLESHOOTING

A faulty heating element can manifest in several ways. If you experience any of the following, your heating element may need replacement:

- **Electrical System Disjunction:** The appliance causes the circuit breaker to trip.
- **Uneven Heating:** The oven does not heat uniformly, leading to inconsistent cooking results.
- **Extended Cooking Times:** Dishes require significantly longer to cook than usual.
- **Difficulty Browning/Gratinating:** The oven struggles to brown or crisp the top of dishes.
- **Partial Functionality:** The oven works correctly with some cooking programs but not others (e.g., baking works, but grilling does not).

### Testing the Heating Element:

To confirm a faulty element, you can test its continuity using an ohmmeter. Disconnect the oven from power, access the element terminals, and measure the resistance. A reading of infinite resistance (open circuit) indicates a broken element that requires replacement.

**Solution:** If a heating element is confirmed faulty, it must be replaced with a compatible part, such as the Zanussi Grill Heating Element Model 3570355010.

## SPECIFICATIONS

<b>Brand</b>	Zanussi
<b>Model Number</b>	3570355010
<b>Power Rating</b>	1750W + 800W
<b>Color</b>	Stainless Steel
<b>Item Weight</b>	510 g
<b>Heating Method</b>	Electric
<b>ASIN</b>	B08RYM635F

## WARRANTY AND SUPPORT

Warranty information for this specific replacement part is not provided within this document. For details regarding warranty coverage or technical support, please refer to the original purchase documentation or contact the seller or manufacturer directly.

© 2023 Zanussi. All rights reserved.