

[Manuals.plus](#) /

> [FINTIE](#) /

> FINTIE Pro Controller Carrying Case Instruction Manual

FINTIE B08RZ1VWWV

FINTIE Pro Controller Carrying Case Instruction Manual

Model: B08RZ1VWWV

1. PRODUCT OVERVIEW

The FINTIE Pro Controller Carrying Case is designed to provide secure storage and protection for your wireless controller. Constructed from durable materials, it safeguards your device from impacts, drops, and scratches during travel or storage. The case features a custom-fit interior and additional storage for accessories.

Key Features:

- **Shockproof Hard EVA Material:** Offers robust protection against drops and impacts.
- **Unique Groove Design:** Ensures a perfect and stable fit for your Pro Controller, preventing movement.
- **Tailor-Made Interior:** Specifically shaped to hold the controller securely, minimizing bumps and jostles.
- **Smooth YKK Zipper:** Provides easy and reliable opening and closing.
- **Inner Mesh Pocket:** Convenient storage for cables and small accessories.
- **Adjustable Hand Strap:** For comfortable and portable carrying.



YKK® Zipper
Easy to open and close



Hard EVA Shell
Water resistant and dust proof

Image 1: Detail of the durable YKK zipper and water-resistant hard EVA shell construction.

2. SETUP AND INITIAL USE

This section guides you through preparing your FINTIE carrying case for use.

1. **Unpack the Case:** Remove the carrying case from its packaging.
2. **Open the Zipper:** Use the smooth YKK zipper to fully open the case.
3. **Insert Controller:** Carefully place your Pro Controller into the main compartment. Ensure it aligns with the unique groove for a snug fit.
4. **Store Accessories:** Place any cables, earbuds, or other small accessories into the inner mesh pocket.
5. **Close the Case:** Zip the case closed securely.

**Unique Groove,
Perfect Fit**



Image 2: Demonstrates placing a Pro Controller into the case's custom-molded interior.



Image 3: View of the case's interior, highlighting the soft velvet lining and mesh pocket for storing cables.

3. OPERATING INSTRUCTIONS

The FINTIE carrying case is designed for simple and effective use.

- **Carrying:** Utilize the adjustable hand strap for convenient and secure transportation. Adjust the strap length as needed for comfort.
- **Protection:** Keep the case fully zipped when not in use to ensure the controller is protected from dust, spills, and physical damage.
- **Access:** To access your controller or accessories, simply unzip the case using the dual YKK zippers.

Portable On-The-Go



Adjustable wristband



Image 4: Illustrates the portability of the case with its adjustable wristband.

Full Protection



Image 5: Highlights the full protection and shock absorption capabilities of the hard shell.

4. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your carrying case.

- **Cleaning the Exterior:** Wipe the exterior surface with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Allow to air dry completely.
- **Cleaning the Interior:** Gently wipe the velvet interior with a dry, soft cloth. For light dust, a lint roller can be used. Avoid excessive moisture.
- **Storage:** Store the case in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the case materials.

5. TROUBLESHOOTING

If you encounter any issues with your FINTIE carrying case, refer to the following common solutions:

- **Controller Does Not Fit:**

- Ensure you are using a compatible "Pro Controller Wireless Controller" as specified. This case is designed for specific controller dimensions.
- Verify the controller is oriented correctly within the case's unique groove.

- **Zipper Sticks or Is Difficult to Close:**

- Check for any fabric or debris caught in the zipper teeth.
- Ensure the case is not overfilled, which can put strain on the zipper.
- Apply a small amount of zipper lubricant (e.g., beeswax or a specialized zipper wax) if the issue persists.

- **Case Appears Damaged:**

- Inspect the case for any visible damage. If the hard EVA shell is compromised, its protective capabilities may be reduced.
- For significant damage, consider replacing the case to ensure optimal protection for your controller.

6. PRODUCT SPECIFICATIONS

Brand	FINTIE
Model Number (ASIN)	B08RZ1VWWV
Material	Ethylene Vinyl Acetate (EVA)
Shell Type	Hard
Color	Black
Closure Type	Zipper
Handle Type	Hand strap
Number of Compartments	2 (Main compartment, Mesh pocket)
Product Dimensions	2.95 x 4.72 x 6.69 inches (7.5 x 12 x 17 cm)
Item Weight	7.4 ounces (210 grams)
Compatible Devices	Pro Controller Wireless Controller (e.g., Nintendo Switch Pro Controller, PS5 DualSense, PS4 DualShock 4, Xbox One/Series X/S controllers)
UPC	840173996836

Dimensions



Image 6: Visual representation of the case's external dimensions.

7. WARRANTY AND SUPPORT

Specific warranty information for the FINTIE Pro Controller Carrying Case is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging, the retailer's website where the product was purchased, or contact FINTIE customer service directly through their official website.

For further assistance, visit the [FINTIE Store on Amazon](#).

