

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar - Wireless Doorbell and Plug-in Receiver, 36 Ringtones, 3 Volume Levels, 150m Range, IP44 Waterproof, Black and Gold, with 1 Transmitter and 2 Plug-in AC Receivers Black

Aigostar 208547

Aigostar Wireless Doorbell System

Model: 208547

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Aigostar Wireless Doorbell System. This product features an elegant design, excellent performance, and requires no network or complex wiring for installation. It is designed to provide a reliable and convenient doorbell solution for your home or office.

This manual provides detailed instructions for the setup, operation, and maintenance of your new doorbell system. Please read it thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Please verify that all components are present in the package:

- 1 x Wireless Doorbell Transmitter (Push Button) - Battery included
- 2 x Plug-in Doorbell Receivers
- 1 x User Instruction Manual
- Mounting hardware (screws, double-sided adhesive tape)



Image: The Aigostar wireless doorbell system, showing one black and gold transmitter and two black and gold plug-in receivers.

3. KEY FEATURES

- **Elegant Design:** Modern aesthetic that complements home decor.
- **Long Transmission Range:** Up to 150 meters (500 feet) without signal loss, suitable for large homes or offices.
- **IP44 Waterproof Transmitter:** Resistant to rain, snow, and temperature changes, ensuring reliable outdoor performance.
- **36 Selectable Ringtones:** A variety of melodies to choose from.
- **3 Adjustable Volume Levels:** Customize the sound level to your preference.
- **Easy Installation:** Simple setup with screws or double-sided adhesive tape, no wiring required.
- **No Battery Powered Receiver:** Receivers plug directly into an AC outlet.
- **Acrylic Panel:** Durable and protective front panel.
- **One-Click Calling:** Simple operation for users of all ages.

150M/500FT 
Transmission Distance

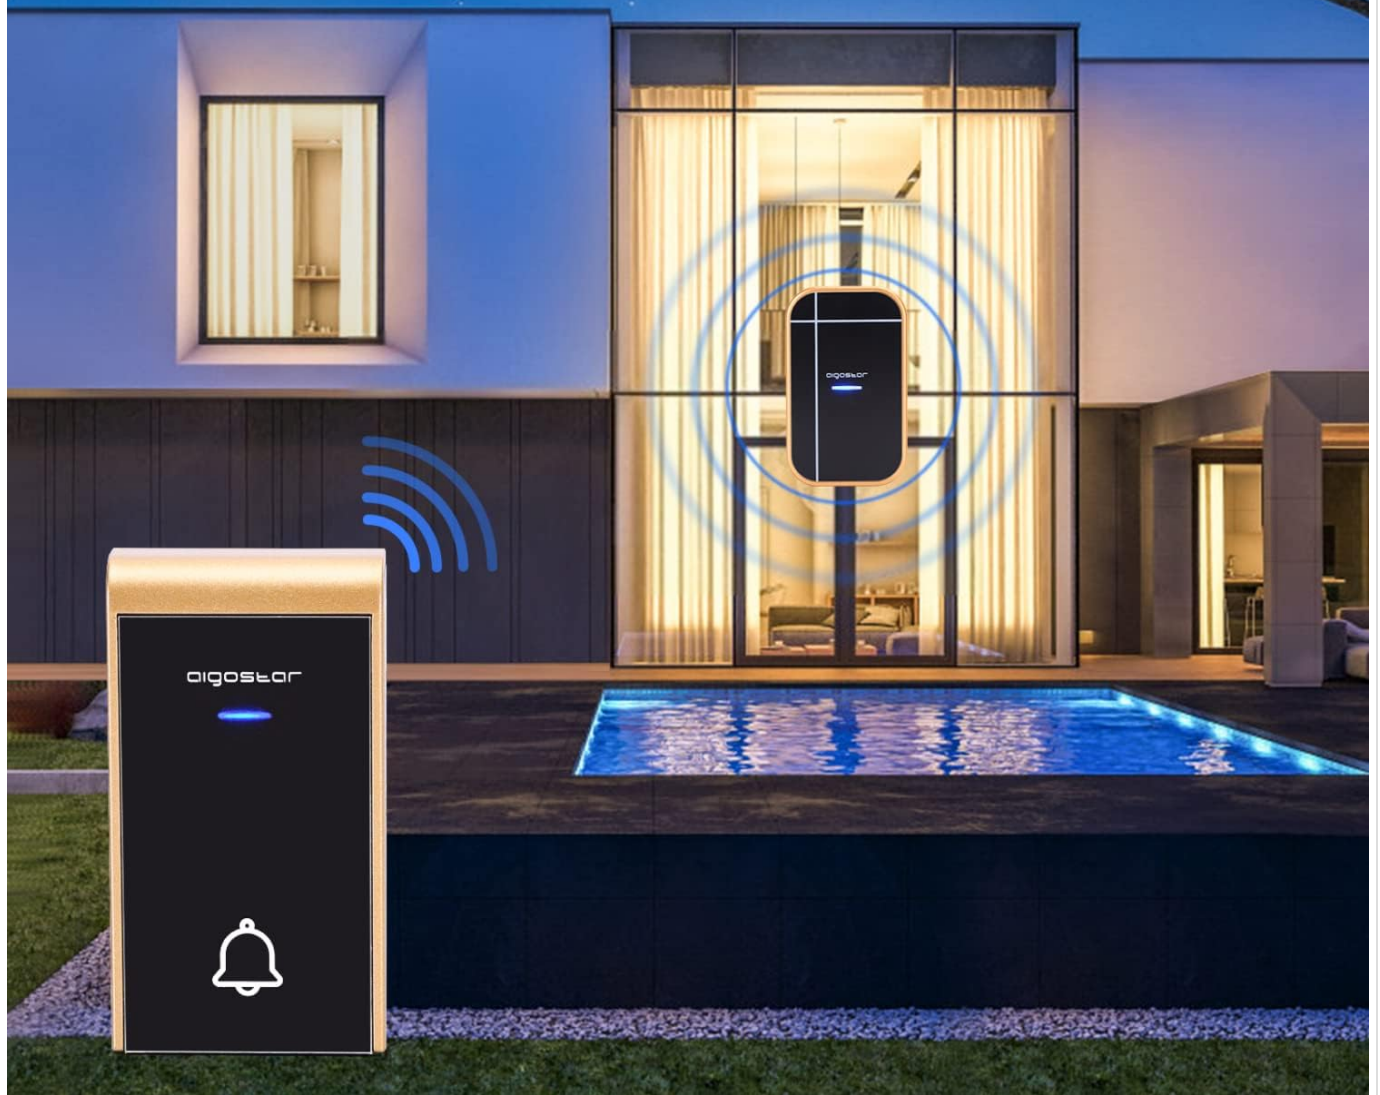 


Image: An illustration demonstrating the 150m/500ft transmission distance of the doorbell, with the transmitter outside a house and the receiver inside.

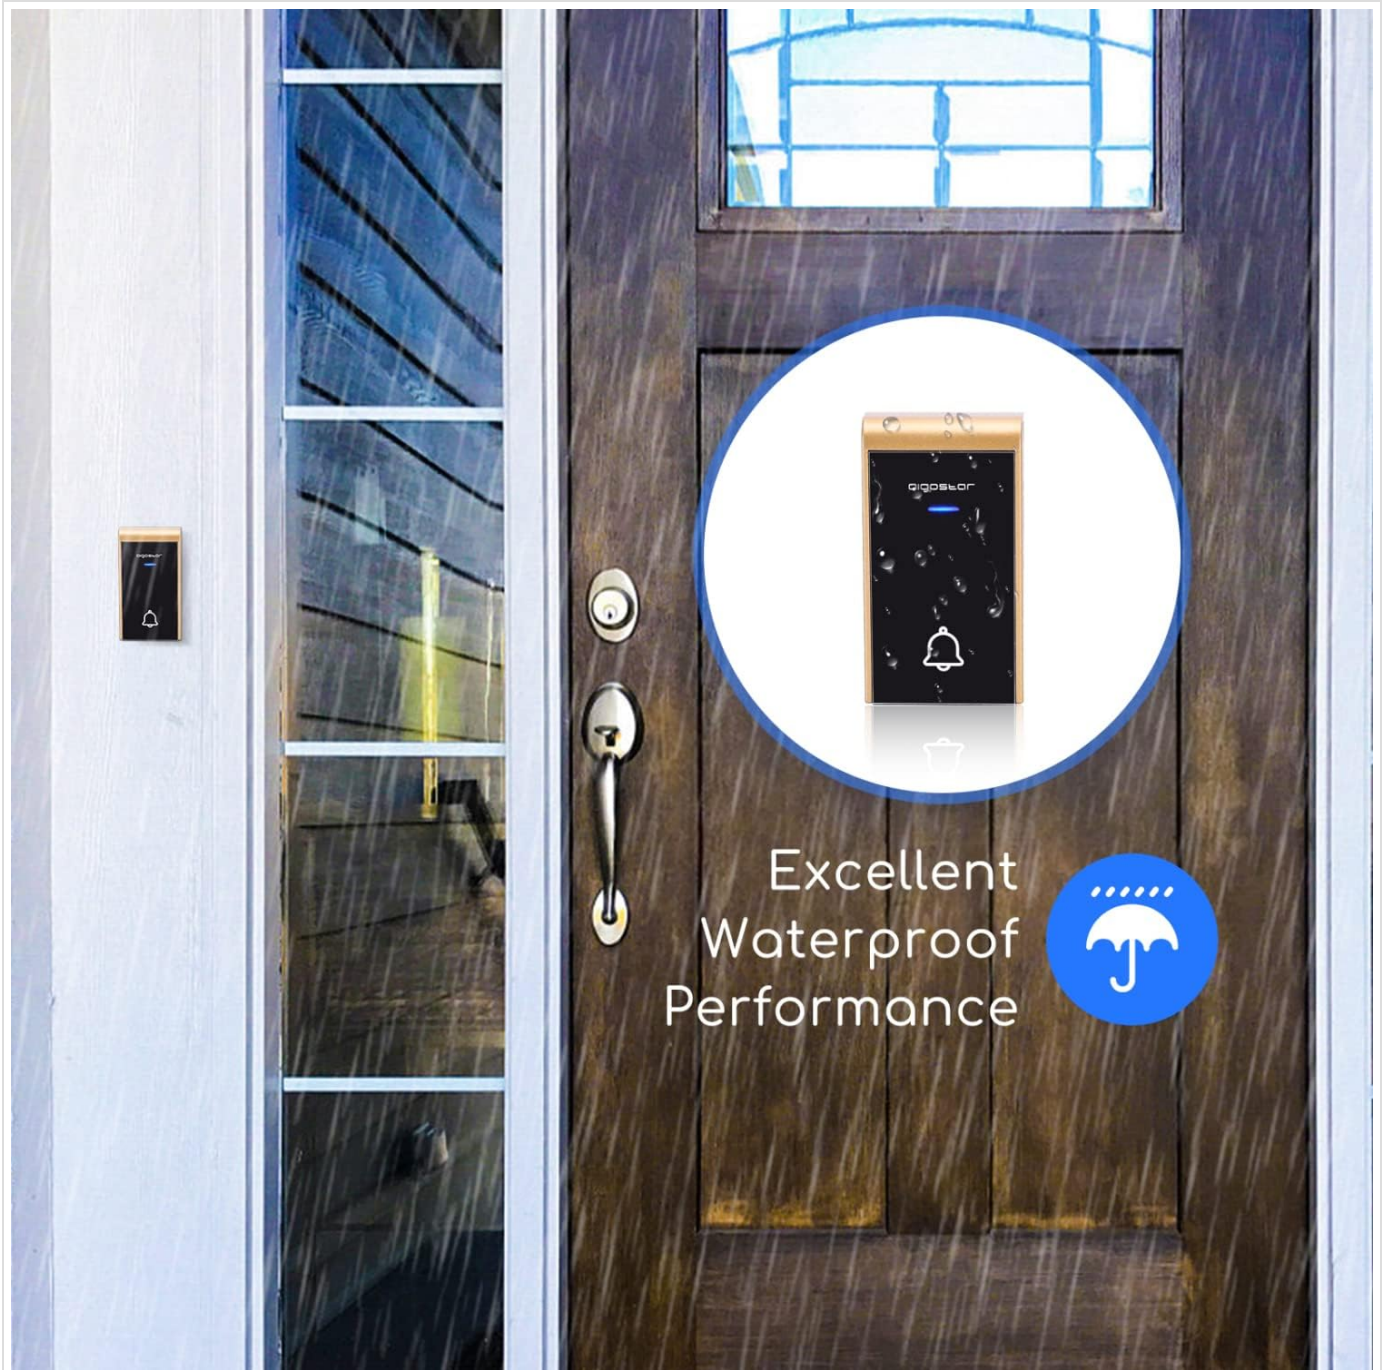 


Image: The doorbell transmitter mounted on a wooden door, with raindrops indicating its IP44 waterproof rating.



Image: An overhead view of a house layout with a doorbell receiver, illustrating the 3 volume levels and 36 ringtones available.



No Battery Powered




Image: A diagram showing the dimensions of both the doorbell transmitter (7.2cm x 4.2cm) and the plug-in receiver (10cm x 6cm x 6.5cm), emphasizing that the receiver does not require batteries.

Acrylic Panel



Image: A visual representation of the doorbell receiver with a transparent acrylic panel, highlighting its protective and aesthetic feature.

 One-Click Calling

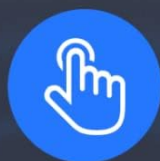

Old man



Pregnant woman



Patient

Image: A hand pressing the doorbell transmitter, with images of an elderly man, a pregnant woman, and a patient, illustrating the ease of "One-Click Calling" for diverse users.

4. SAFETY INSTRUCTIONS

- Do not expose the receiver to water or high humidity. The transmitter is IP44 waterproof, but the receiver is for indoor use only.
- Do not disassemble or attempt to repair the device. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight, heat sources, and open flames.
- Ensure the power outlet for the receiver is easily accessible.
- Dispose of batteries (from the transmitter) according to local regulations.
- This product is not a toy. Keep out of reach of children.

5. SETUP AND INSTALLATION

5.1 Transmitter Installation

1. **Choose a Location:** Select a flat, vertical surface near your door, ensuring it is within the 150m range of your receiver(s).
2. **Mounting Options:**
 - **Using Double-Sided Adhesive Tape:** Clean the mounting surface thoroughly. Peel off one side of the protective film from the adhesive tape and apply it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the desired location for at least 30 seconds.
 - **Using Screws:** Open the back cover of the transmitter. Mark the positions for the screw holes on the wall. Drill pilot holes if necessary and insert wall anchors. Secure the transmitter to the wall using the provided screws. Close the back cover.
3. **Battery Check:** The transmitter comes with a pre-installed battery. Ensure the battery insulation tab (if present) is removed before use.

5.2 Receiver Installation

1. **Choose a Location:** Select an indoor standard AC power outlet within the transmission range of the transmitter. Consider central locations for optimal sound distribution.
2. **Plug In:** Simply plug the receiver directly into the chosen AC power outlet. The receiver will power on and be ready for use.

6. OPERATING INSTRUCTIONS

6.1 Pairing (If necessary)

The doorbell system usually comes pre-paired from the factory. If your transmitter and receiver are not communicating, or if you wish to pair additional transmitters/receivers, follow these steps:

1. Plug in the receiver to an AC outlet.
2. Press and hold the volume button on the receiver for approximately 5 seconds until you hear a "ding" sound and the LED indicator flashes rapidly. This indicates the receiver is in pairing mode.
3. Within 10 seconds, press the transmitter (push button) once. The receiver will ring, indicating successful pairing.
4. If pairing fails, unplug the receiver and repeat the process.

6.2 Changing Ringtones

To select a different melody from the 36 available options:

1. On the receiver, press the "Melody Selection" button (often indicated by a music note icon or similar).
2. Each press will cycle through the available ringtones. Stop pressing when you hear your desired melody.
3. The selected ringtone will be saved automatically.

6.3 Adjusting Volume

To adjust the volume level (3 levels available):

1. On the receiver, press the "Volume" button (often indicated by a speaker icon).
2. Each press will cycle through the volume levels (High, Medium, Low).
3. Select the desired volume level. The setting will be saved automatically.

7. MAINTENANCE

- **Cleaning:** Wipe the doorbell transmitter and receiver with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Transmitter Battery Replacement:** If the transmitter stops working or its range decreases significantly, the battery may need replacement. Open the back cover of the transmitter and replace the old battery with a new one of the same type (e.g., 12V 23A alkaline battery). Ensure correct polarity.
- **Receiver:** The receiver is plug-in and does not require battery replacement.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not ring.	<ul style="list-style-type: none">◦ Transmitter battery is dead.◦ Receiver is unplugged or not powered.◦ Transmitter and receiver are not paired.◦ Distance is too far or too many obstacles.	<ul style="list-style-type: none">◦ Replace transmitter battery.◦ Ensure receiver is securely plugged into a working outlet.◦ Re-pair the transmitter and receiver (refer to Section 6.1).◦ Move receiver closer to transmitter or remove obstructions.
Short transmission range.	<ul style="list-style-type: none">◦ Low transmitter battery.◦ Interference from other electronic devices.◦ Thick walls or metal structures.	<ul style="list-style-type: none">◦ Replace transmitter battery.◦ Move doorbell away from other electronics.◦ Adjust receiver position for better signal reception.
Receiver LED flashes but no sound.	Volume is set to minimum or mute.	Adjust volume level (refer to Section 6.3).

9. SPECIFICATIONS

Brand	Aigostar
Model Number	208547
Product Dimensions (L x W x H)	10 x 10 x 10 cm (approximate for packaging)
Weight	240 grams
Color	Black and Gold
Power Source (Receiver)	AC Plug-in
Power Source (Transmitter)	Battery (Type: 12V 23A, typically)
Wireless Range	Up to 150 meters (500 feet)
Ringtones	36 melodies
Volume Levels	3 levels

Waterproof Rating (Transmitter)	IP44
---------------------------------	------

10. WARRANTY AND SUPPORT

Aigostar products are manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. Please refer to the packaging or contact your retailer for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or inquiries regarding spare parts, please contact Aigostar customer service through their official website or the contact information provided with your purchase.

Please retain your proof of purchase for warranty claims.

© 2023 Aigostar. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08RZ3W64R>

More documents and user manuals: <https://manuals.plus/>